

Quick Setup Guide

Жылдам орнату нұсқаулығы
Краткое руководство по установке
Короткий посібник зі встановлення

QB13R QB13R-T

Colour Display Unit / Түрлі-түсті дисплей
Цветной Дисплей / Кольоровий Дісплей

English

*Recommended hours of use per day of this product is under 16 hours.
If the product is used for longer than 16 hours a day, the warranty may be void.
*The colour and the appearance may differ depending on the product, and the content in the manual is subject to change without prior notice to improve the performance.

*Download the user manual from the website for further details: <http://www.samsung.com/displayssolutions>

Казак

*Осы күрнәлгінің күннен таңдауданнан 16 сағаттан дауыс берілген.
Егер күннен таңдауданнан 16 сағаттан дауыс берілген, көпілдік күннен жоны мүмкін.
*Түс мен көрініс енінде байланысты өзгеруі мүмкін және енділдікті жақсартында нұсқаулығы мазмұн алдын ала ескертуіз алғанда мәліметтер алатын веб-сайттан жүктең.

Русский

*Рекомендуется использовать это устройство не более 16 часов в день.
Использование устройства более 16 часов может привести к аннулированию гарантии.
*Цвет и дизайн изделия зависят от модели, а содержимое руководства может изменяться без предварительного уведомления с целью совершенствования.

*Дополнительные сведения см. в руководстве пользователя в Интернете.

Українська

*Рекомендується користуватися цим виробом не більше 16 годин на день.
Якщо виробом користуватися більше 16 годин на день, гарантію може бути анульовано.
*Коли і вигляд можуть відрізнятися залежно від виробу; зміст цього посібника може змінюватися без попередження для вдосконалення роботи виробу.


*Для отримання додаткової інформації завантажте посібник користувача з веб-сайту.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



BN68-09906E-00

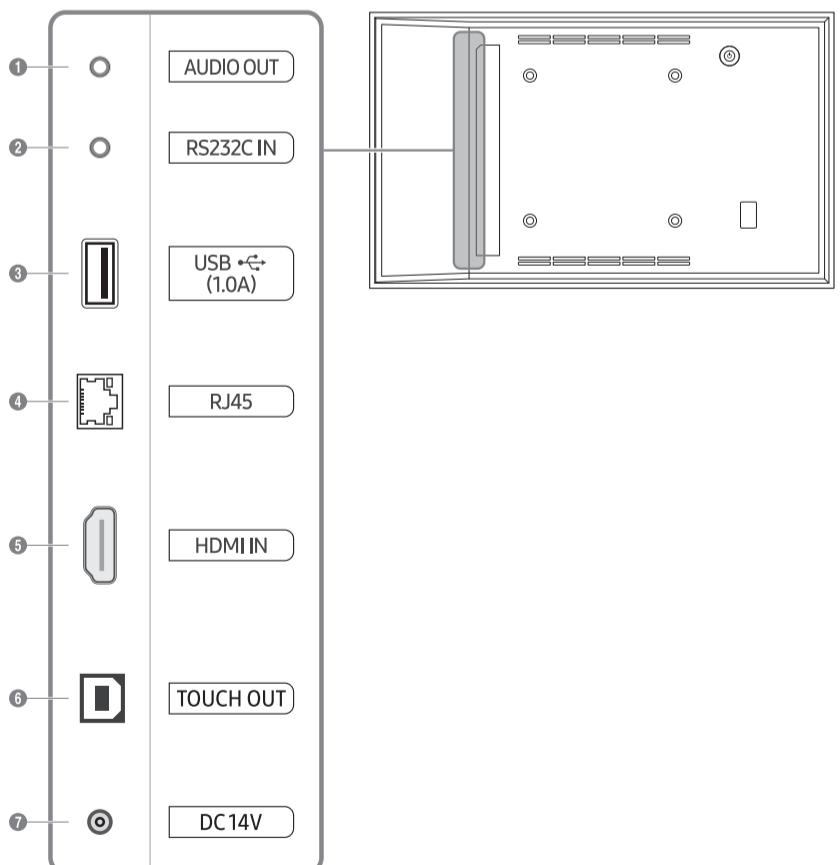Ports
Порттар
Порты
Порты

Checking the Components

Компоненттерді тексеру

Проверка компонентов

Перевірка вмісту

English

Contact the vendor where you purchased the product if any components are missing.
Components may differ in different locations.

- ◆ Quick Setup Guide
- ◆ Regulatory guide
- ◆ AC/DC adapter
- ◆ Remote Control
- ◆ STAND-BAR x 2
- ◆ Warranty card (Not available in some locations)
- ◆ Power cord
- ◆ Batteries (AAA x 2) (Not available in some locations)
- ◆ RS232C adapter
- ◆ TOUCH OUT cable (Supported model: QB13R-T)

Казак

Егер компонент белшектердің бірі жок болса, күрнәлгінің сатып алған сатушыға хабарласыныз.
Курамдас белшектер арттыру орналасуларға қарай өзгеруі мүмкін.

- ◆ Жылдам орнату нұсқаулығы
- ◆ Нормативтік нұсқаулық
- ◆ АТ/ТТ адаптері
- ◆ Қашықтан басқару пульті
- ◆ ТІРЕК ӨЗЕГІН х2
- ◆ Кеплілік картасы (кейір жерлерде кол жетімді емес)
- ◆ Қута кабелі
- ◆ Батареялар (AAA x 2) (кейір жерлерде кол жетімді емес)
- ◆ RS232C адаптері
- ◆ TOUCH OUT кабели (Колдану көрсетілген улт: QB13R-T)

Русский

Если какие-либо из компонентов отсутствуют, обратитесь к поставщику из этого региона, в котором был приобретен продукт.
Компоненты из разных регионов могут отличаться друг от друга.

- ◆ Краткое руководство по установке
- ◆ Брошюра с информацией о стандартах соответствия требованиям
- ◆ Адаптер постоянного/переменного тока
- ◆ Пульт дистанционного управления
- ◆ СТОЙКА х2
- ◆ Гарантинный талон (недоступно в некоторых регионах)
- ◆ Кабель питания
- ◆ Батареи (AAA x 2) (недоступно в некоторых регионах)
- ◆ Адаптер RS232C
- ◆ Кабель TOUCH OUT (Поддерживаемая модель: QB13R-T)

Українська

Якщо якісінен елементінің бракуватиме, зверніться до продавця виробу.
Комплектація пристрою може бути різною в різних країнах.

- ◆ Короткий посібник зі встановлення
- ◆ Пульт з регуляторами вимог
- ◆ Адаптер змінного/постійного струму
- ◆ Пульт дистанційного керування
- ◆ СТОЙКА-СТРИЖЕНЬ х2
- ◆ Гарантинний талон (доступно не в усіх регіонах)
- ◆ Кабель живлення
- ◆ Батареї (AAA x 2) (доступно не в усіх регіонах)
- ◆ Адаптер RS232C
- ◆ Кабель TOUCH OUT (Підтримувана модель: QB13R-T)

See the User's Manual for further instructions for installation and adjustment.
Білсіздеңгегі орнан жоғарыдағы нұсқаулығынан қарасты.

Комплектация изделия может отличаться в зависимости от технического регламента.

Таможенного союза «О безопасности упаковки»

005/2011 и указывает на то, что упаковка данного

продукта не предназначена для повторного

использования и подлежит утилизации. Упаковку

данного продукта запрещается использовать для

хранения пищевой продукции.

English

- ① Outputs sound to an audio device via an audio cable.
- ② Connects to MDC using an RS232C adapter.
- ③ Connect to a USB memory device.
- * The USB ports on the product accept a maximum constant current of 1.0A. If the maximum value is exceeded, USB ports may not work.
- ④ Connects to MDC and the Internet using a LAN cable. (10/100 Mbps)
- * Use Cat7(STP Type) cable for the connection.
- Shielded Twisted Pair.
- ⑤ Connects to a source device using a HDMI cable or HDMI-DVI cable.
- ⑥ Connects to a PC using a TOUCH OUT cable to enable touch functions.
- * Supported model: QB13R-T
- ⑦ Connects to the AC/DC adapter.

Казак

- ① Аудио күрнәлгінің аудио кабельін дыбыс шыгарады.
- ② МДС колданағынан RS232C адаптерінің арқылы косылады.
- ③ USB жад күрнәлгісінің косылады.
- * Ендиері USB порттары 1,0 А болынан максималда тұратын тоқты токты қабылдайды. Егер максималды мәннен асын кетсе, USB порттар жумыс іsteмегі мүмкін.
- ④ МДС колданағынан және интернетке жергілікті жепінің арқылы косылады. (10/100 Мбит/с)
- * Жалғауға Cat 7(STP типі) кабелін пайдаланыңыз.
- Shielded Twisted Pair.
- ⑤ Кайнар күрнәлгінде HDMI кабелінің арқылы косылады.
- ⑥ Сенсорлық функцияны іске үшін дербес компьютерге TOUCH OUT кабельінің арқылы косылады.
- * Колдану көрсетілген улт: QB13R-T
- ⑦ АТ/ТТ адаптерінің косылады.

Русский

- ① Выводит звук на аудиоустройство через аудиокабель.
- ② Подключение к MDC с помощью адаптера RS232C.
- ③ Подключение к устройству памяти USB.
- * Порты USB на устройстве принимают макс. постоянный ток, равный 1,0 А. При превышении максимального значения порты USB могут не работать.
- ④ Подключение к МДС и Интернету с помощью кабеля LAN. (10/100 Мбит/с)
- * Используйте кабель кат. 7(типа STP) для подключения.
- Shielded Twisted Pair.
- ⑤ Подключение к устройству-источнику сигналов с помощью кабеля HDMI или HDMI-DVI.
- ⑥ Подключение к ПК с помощью кабеля TOUCH OUT для включения сенсорных функций.
- * Поддерживаемая модель: QB13R-T
- ⑦ Подключение к адаптеру постоянного/переменного тока.

Українська


- ① Виводить звук на аудіопристрій через аудіокабель.
- ② Служить для підключення MDC з використанням адаптера RS232C.
- ③ Служить для підключення до USB-пристрію.
- * USB-порти вбудовані вимірюють максимальний постійний струм 1,0 А. У разі перевищення максимального значення USB-порти можуть не функціонувати.
- ④ Використовується для підключення до МДС та інтернету за допомогою кабелю LAN. (10/100 Mbps)
- * Використовуйте для підключення кабель Cat 7(типу STP).
- Shielded Twisted Pair.
- ⑤ Для з'єднання з зовнішнім джерелом сигналу через кабель HDMI або HDMI-DVI.
- ⑥ Використовується для підключення до ПК за допомогою кабелю TOUCH OUT, щоб увімкнути функції дотики.
- * Підтримувана модель: QB13R-T
- ⑦ Підєднання адаптера змінного/постійного струму.

Using the STAND-BAR

ТИРЕК ӨЗЕГІН пайдалану

Использование СТОЙКИ

Використання СТІЙКИ-СТРИЖЕНЯ

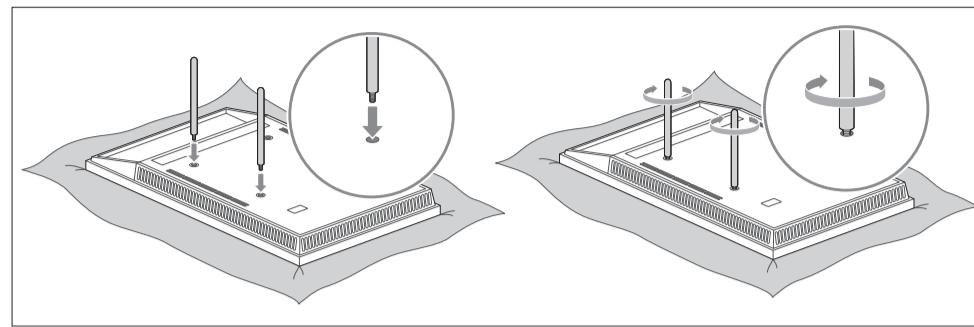

English

Place the product with the face down on top of the protective cloth or cushion.
Insert the bar into a slot on the product and then turn to fasten.

Казак

Көрсеткіншілдік жағынан күрнәлгінде шуберегін немесе жастиқта тонкеріп койыңыз.
Фәзек күрнәлгідегі жағынан күрнәлгінде үшіншікка салыңыз да, содан кейн бурал бекітіңіз.

Русский

Положите устройство экраном вниз на защитную ткань или подушку.
Вставьте стойку в отверстие устройства и поверните для фиксации.

Українська


Покладіть виріб на захисну тканину чи подушку екраном донизу.
Вставте стрижень в гніздо виробу та покрутіть, щоб зафіксувати.

Parts

Бөліктер

Детали

Частины пристрою

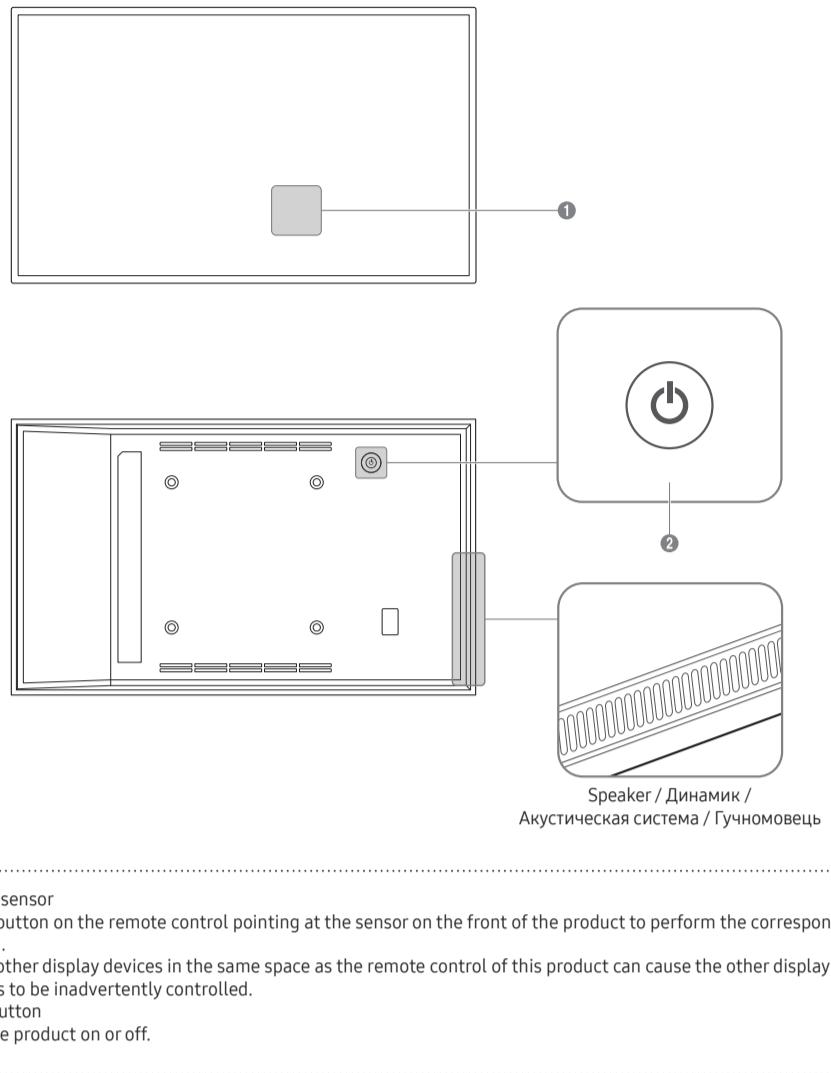

English

- ① Remote sensor
Press a button on the remote control pointing at the sensor on the front of the product to perform the corresponding function.
- * Using other display devices in the same space as the remote control of this product can cause the other display devices to be inadvertently controlled.

- ② Power button
Turns the product on or off.

Казак

- ① Қашықтан датчиғы
Тисті функцияны орындауда үшіннен алдындағы сенсорға қашықтан басқару күрнәлгісін нұсқан, түймен басыныз.

* Осы күрнәлгінің қашықтан басқару пульті қолданылған жерде басқа көрсету күрнәлгіларын қолдану басқару көрсеткіншілдікке көзделіңдерінің көзделінешілерінің мүмкін.

- ② Қорект түймеші
Күрнәлгінің косады немесе оширеді.

Русский

- ① Датчик пульта дистанционного управления
Для выполнения какой-либо функции направьте пульт дистанционного управления в сторону датчика и нажмите нужную кнопку.
- * Использование других устройств отображения, находящихся в одном помещении с пультом дистанционного управления к данному устройству, может привести к непреднамеренному управлению этими устройствами с помощью данного пульта.
- ② Кнопка питания
Включение или выключение устройства.

Українська



- ① Сенсор пульта ДК
Натисніть кнопку на пульте ДК, спрямовуючи його на сенсор на передній панелі виробу, щоб використати потрібну функцію.
- * Використання інших пристрів відображення поблизу пульта ДК цього виробу може привести до випадкового прийому сигналів пульта ДК цими пристроями.
- ② Кнопка живлення
Вмикніть або вимикніть виріб.

Administrator menu (Supported model: QB13R-T)

Әкімші мәзірі (Колдану көрсетілген улт: QB13R-T)

Меню администратора (Поддерживаемая модель: QB13R-T)

Меню адміністратора (Підтримувана модель: QB13R-T)

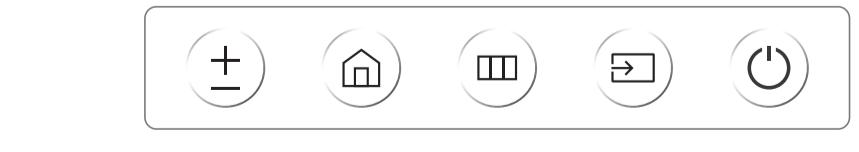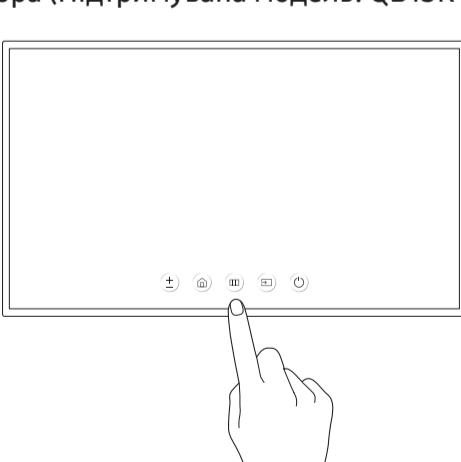

English

- * Touching and holding on the screen when the product is turned on displays the administrator menu.
- * If the touchscreen control is not available, use the remote control to go to System > Touch Control > Touch Control and select On for the OSD menu. And go to Device to Control and select Samsung SMART Signage or Auto.
- * If the administrator menu is not displayed, use the remote control to go to System > Touch Control > Admin Menu Lock and select Off from the OSD menu.

Казак

- * Ендиң іске коскан кезде экранды басып тұрганда ақшім мәзір кө

English
Specifications

Model Name	QB13R	QB13R-T
Panel	Size Display area	13 CLASS (13.27 inches / 33.7 cm) 295.37 mm (H) x 166.49 mm (V)
Power Consumption		25 W
IP (Ingress Protection Rating)		IP 5X
Class of protection against electric shock		Class III equipment
Power Supply		AC100-240V~ 50/60Hz Based on the AC voltage of the adapter. For the DC voltage of the product, refer to the product label.
Environmental considerations	Operating Storage	Temperature : 0 °C ~ 40 °C (32 °F ~ 104 °F) Humidity : 10% ~ 80%, non-condensing Temperature : -20 °C ~ 45 °C (-4 °F ~ 113 °F) Humidity : 5% ~ 95%, non-condensing

* This device is a Class B digital apparatus.

* For detailed device specifications, visit the Samsung Electronics website.

Казак

Техникалық сипаттамалары



Улғы атасы	QB13R	QB13R-T
Тақта	Өлемшемі	13-клас (13,27 дюйм / 33,7 см)
	Дисплей аумағы	295,37 мм (H) x 166,49 мм (V)
Куат түтшүү		25 Вт
IP (Сыртының кабеттеги коргау деңгэйі)		IP 5X
Ток соғу каупінен коргау деңгэйі		III класы, жадбық
Куат көзі	Адаптердін AT кернеүнен негізделген. Күрьылғының TT кернеүн күрьылғы затбелгісінен қараңыз.	Айналымалы ток 100-240V~ 50/60Hz
Экологиялық тусланылар	Жұмыс істеуі	Температура : 0 °C ~ 40 °C (32 °F ~ 104 °F) Былгандылық : 10% ~ 80%, конденсациясыз
	Сактау	Температура : -20 °C ~ 45 °C (-4 °F ~ 113 °F) Былгандылық : 5% ~ 95%, конденсациясыз

* Бул күрьылғы — В-тобына жататын сандық күрьылғы.

* Күрьылғының толық сипаттамалары Samsung Electronics веб-сайтынан көре аласыз.

Warning! Important Safety Instructions

Please read the appropriate section that corresponds to the marking on your Samsung product before attempting to install the product.

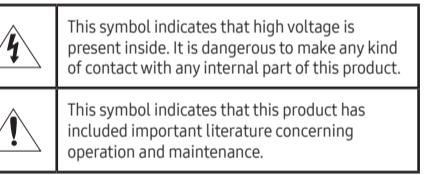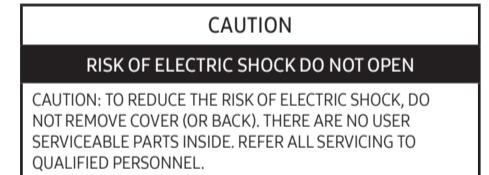

- Be sure to contact an authorized service centre, when installing your set in a location with heavy dust, high or low temperatures, high humidity, chemical substances and where it operates for 24 hours such as the airport, the train station etc.
- Failure to do so may cause serious damage to your set.
- Use only a properly grounded plug and receptacle.
- An improper ground may cause electric shock or equipment damage. (Class I Equipment only)
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.
- Do not allow children to hang onto the product.
- Store the accessories in a location safely out of the reach of children.
- Do not install the product in an unstable location such as a shaky apparatus, as this can result in a risk of fire or electric shock.
- Do not expose this apparatus or place it near water/in a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool etc.). If this apparatus accidentally gets wet, unplug it and contact an authorized dealer immediately.
- Make sure to remove the power cord from the outlet before cleaning.
- Do not overload wall outlets, extension cords or adaptors beyond their capacity, since this can result in a fire or electric shock.
- Never place cords or adaptors on top of heat sources or on any surface that is not level or uneven.
- Do not drop or impart any shock to the product. If the product is damaged, disconnect the power cord and contact a service centre.
- Unplug the power cord from the power outlet and wipe the product with a soft, dry cloth. Do not use any chemical such as wax, benzene, thinners, insecticides, air freshener, lubricant or detergent. This may damage the appearance or erase the printing on the product.
- Apparatus shall not be exposed to dripping or splashing.
- WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.



- Do not install the product in an unstable location such as a slanted floor or a location exposed to vibration.
- Do not drop or impart any shock to the product. If the product is damaged, disconnect the power cord and contact an authorized dealer immediately.
- Make sure to remove the power cord from the outlet before cleaning.
- Do not overload wall outlets, extension cords or adaptors beyond their capacity, since this can result in a fire or electric shock.
- Never place cords or adaptors on top of heat sources or on any surface that is not level or uneven.
- Do not drop or impart any shock to the product. If the product is damaged, disconnect the power cord and contact an authorized dealer immediately.
- Unplug the power cord from the power outlet and wipe the product with a soft, dry cloth. Do not use any chemical such as wax, benzene, thinners, insecticides, air freshener, lubricant or detergent. This may damage the appearance or erase the printing on the product.
- Apparatus shall not be exposed to dripping or splashing.
- WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.

• Never insert anything metallic into the open parts of this apparatus. Doing so may create a danger of electric shock.

• To avoid electric shock, never touch the inside of this apparatus.

• Only a qualified service center may open this apparatus.

• Take care to plug the power cord in until it is firmly inserted. When removing the power cord, make sure to hold the power plug when pulling the plug from the outlet. Do not touch the power cord with wet hands.

• If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).

• Accumulate dust on a cabinet, and electric shock, an electric leakage or fire may occur because the power cord to generate sparks and heat or the insulation to deteriorate.

• If there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service centre.

• Be sure to pull the power plug out of the outlet if the monitor is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).