

HORI 7-Speed Racing Shifter
for Windows® PC and HORI Force Feedback Racing Wheel

Instruction Manual

Thank you for purchasing this product.
Before using this product, please read the instructions carefully.
After reading the instruction manual, please keep it for reference.



Table of Contents

Quick Start Guide	2
Caution	3
Contents	3
Compatibility	4
Layout and Features	5
How to Set Up	6-7
▸ When mounting the 7-Speed Racing Shifter	
▸ How to mount to a racing wheel stand	
Mode Toggle	8
How to replace the shift knob	9
App [HORI Device Manager Vol.2]	9
▸ Download App	
Main Features	9

Quick Start Guide


1 Mount the unit to a desk or other flat surface.

When mounting the 7-Speed Racing Shifter

⇒ p.6


How to mount to a racing wheel stand

⇒ p.7

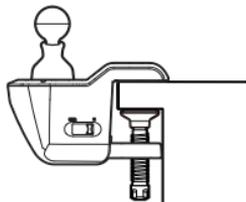


2 Connect the cables.

For use with a PC

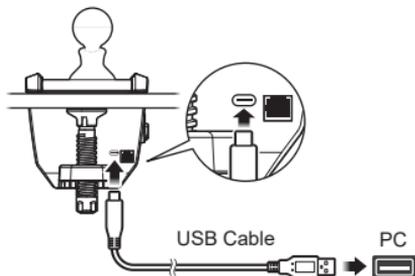

For use with a Xbox SeriesX|S, Xbox One

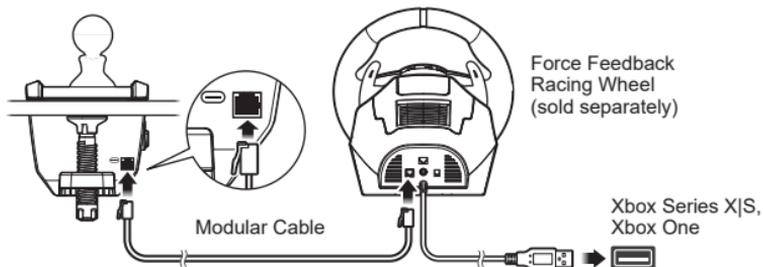



Caution

Parents / Guardians:
Please read the following information carefully.

- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Long cord. Strangulation hazard.
- Keep the product away from dusty or humid areas.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not use this product with a USB hub. The product may not function properly.
- Do not touch the metal parts of the USB plug.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the product.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- The wires are not to be inserted into socket-outlets.
- The packaging must be retained since it contains important information.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.

Contents



 
Racing Shifter × 1




Screw × 1



Instruction Manual × 1



USB Cable
(USB-A to USB-C™) × 1

 

Modular Cable × 1

Compatibility



Before using this product, please read the instruction manuals for the hardware. Please check that your console is updated to the latest system software.

Xbox Series X|S / Xbox One*

*HORI Force Feedback Racing Wheel DLX for Xbox Series X|S & Xbox One (sold separately) required to use on Xbox Series X|S & Xbox One.

PC (DirectInput)

Supported OS	Windows® 11 / 10
Input Method	DirectInput*
System Requirements	USB-A Port

*Functions as PC controller through DirectInput. This product does not support XInput.



◀ Compatible PC racing wheels





<https://stores.horiusa.com/hpc-042U/compatibility/>



◀ Please check the link for the latest manual for how to connect the device:



<https://stores.horiusa.com/hpc-042U/manual/>

Layout and Features

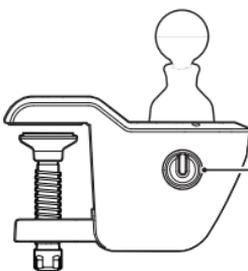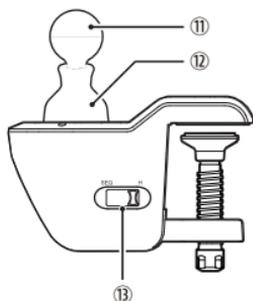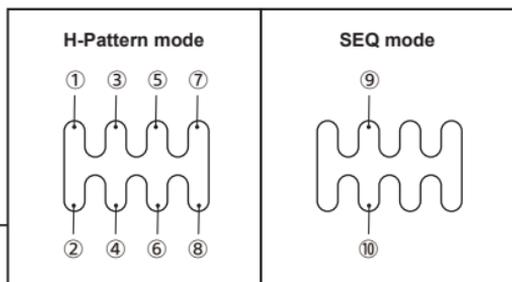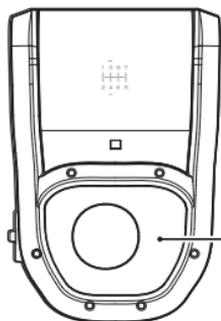

Shifter Resistance Adjustment Dial

Shift lever resistance can be adjusted by turning the dial.

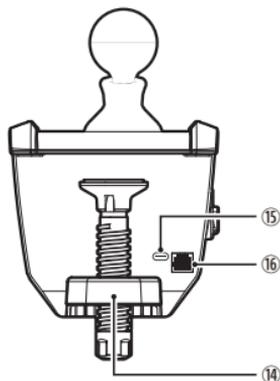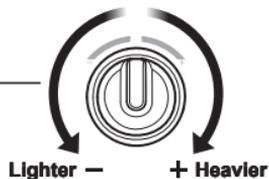


① ...	[XBOX] 1st Gear	[PC] Button 1
② ...	[XBOX] 2nd Gear	[PC] Button 2
③ ...	[XBOX] 3rd Gear	[PC] Button 3
④ ...	[XBOX] 4th Gear	[PC] Button 4
⑤ ...	[XBOX] 5th Gear	[PC] Button 5
⑥ ...	[XBOX] 6th Gear	[PC] Button 6
⑦ ...	[XBOX] 7th Gear	[PC] Button 7
⑧ ...	[XBOX] Reverse	[PC] Button 8
⑨ ...	[XBOX] LB Button	[PC] Button 9
⑩ ...	[XBOX] RB Button	[PC] Button 10
⑪ ...	Shift Knob	
⑫ ...	Shifter Boot	
⑬ ...	Mode Toggle Switch	
⑭ ...	Clamp	
⑮ ...	USB-C™	
⑯ ...	Modular Connector	

How to Set Up

When mounting the 7-Speed Racing Shifter

Flat, hard surface required
(i.e., table)

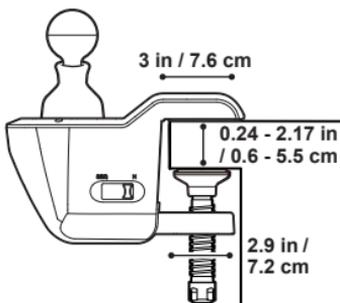

Please read before setup

- ⚠ Tighten the clamp into the shifter unit base with the screw.
- ⚠ Carefully detach from furniture to prevent damage to furniture or product.
- ⊘ Do not attach to any unstable surface as shown in the diagram below.



Uneven



Too thick



Shallow clamp grip




Thin or soft




Fragile
(i.e., glass)

- 1 Put the screw shaft through the clamp.

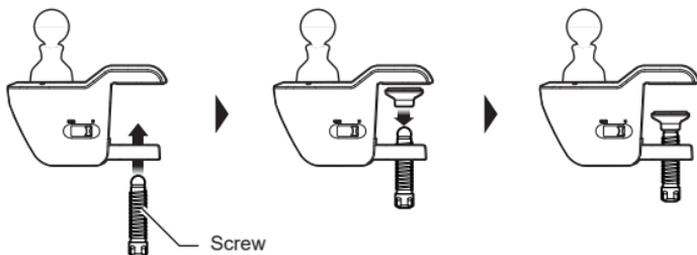


- 2 Position the clamp so it is flush with the mounting surface.

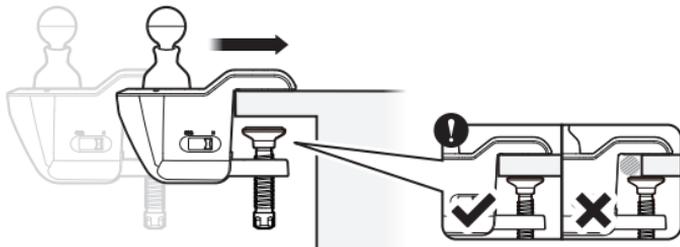

2


Rotate the screw clockwise while supporting the unit and firmly secure.

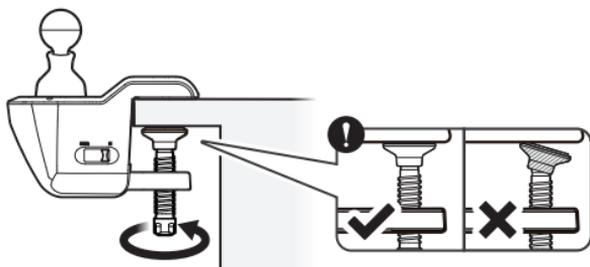

How to mount to a racing wheel stand


- M6 screws, hex key, and racing wheel stand required.
- M6 screws, hex key, and racing wheel stand are not included with this product.

Screw the M6 screws into the holes at the bottom of the Shifter.

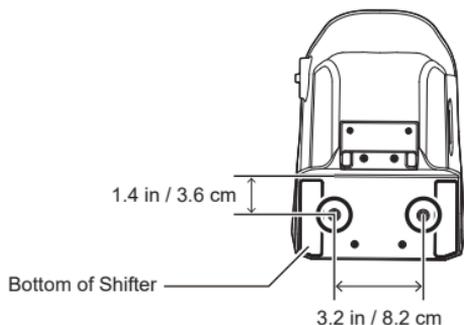


The M6 Screws

If screws longer than the dimensions listed below are used, they may damage the product.

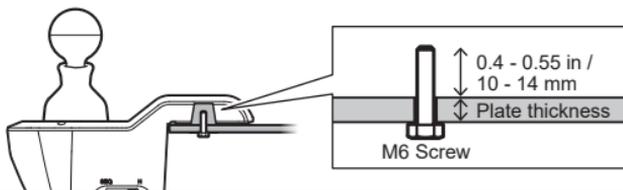


Mode Toggle

Switch between H-Pattern and Sequential shifting with the Mode Toggle Switch.

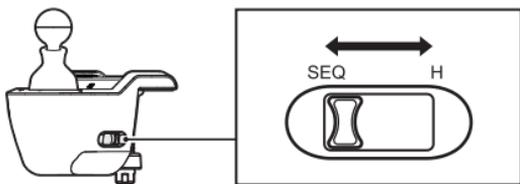


H-Pattern Mode

H-Pattern for gear 1 through 7 and R (Reverse).

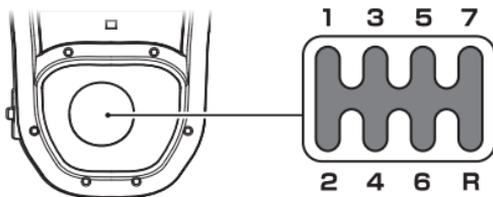


SEQ Mode (Sequential Mode)

Allows forward and backward sequential shifting.

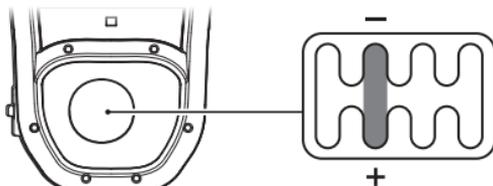

 Make sure the shift lever is in the neutral position when switching to the SEQ mode.



How to replace the shift knob

The shift knob can be removed and replaced with a shift knob of the following size.

Screw size: M8

Screw depth: up to 28 mm



Do not install a shift knob with a screw depth of more than 28 mm. The shift lever may not move properly.

Please take care to use shift knob only with compatible devices. We will not be responsible for any damage or accidents caused by using with incompatible devices.

App [HORI Device Manager Vol.2]

Customize various functions and test input settings with the companion app.

Download App

<https://stores.horiusa.com/manual/hpc-042U/app/>

Supported OS	Windows® 11 / 10
System Requirements	USB-A Port, Internet Connection

Main Features

External Dimensions	: W 6 × D 9.5 × H 9 in / W 15 × D 24 × H 23 cm
Weight	: 2.87 lbs / 1.3 kg
Cable Length	: USB Cable (USB-A to USB-C™) 6.6 ft / 2 m Modular Cable 5 ft / 1.5 m
Mountable surface thickness	: 0.24 in - 2.17 in / 0.6 cm - 5.5 cm

For more information please visit this website

<https://stores.horiusa.com/hpc-042U/>



CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THE FCC WANTS YOU TO KNOW

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-003(B) / NMB-003(B)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Simplified Declaration of Conformity

Hereby, HORI declares that this product is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://hori.co.uk/consumer-information/>

For UK: Hereby, HORI declares that this product is in compliance with the relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address:

<https://hori.co.uk/consumer-information/>

PRODUCT DISPOSAL INFORMATION

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.



HORI warrants to the original purchaser that our product purchased new in its original packaging shall be free of any defects in both material and workmanship for a period of one year from the original date of purchase. If the warranty claim cannot be processed through the original retailer, please contact HORI customer support.

For customer support in North America and Latin America, please use our customer support form: <https://stores.horiusa.com/contact-us/>

For customer support in Europe, please email info@horiuk.com

Warranty information:

<https://stores.horiusa.com/policies/>

-
- This is not a wireless product.
 - Actual product may differ from image.
 - The manufacturer reserves the right to change the product design or specifications without notice.
 - USB-C is a registered trademark of USB Implementers Forum.
 - HORI & HORI logo are registered trademarks of HORI.
 - All other trademarks are the property of their respective owners.