




INSTRUCTION MANUAL РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ ПАЙДАЛАНУ ЖӨНІНДЕГІ НҰСҚАУЛЫҚ

SC-HD70I43

ENG HAIR DRYER

RUS ФЕН
KAZ ФЕН

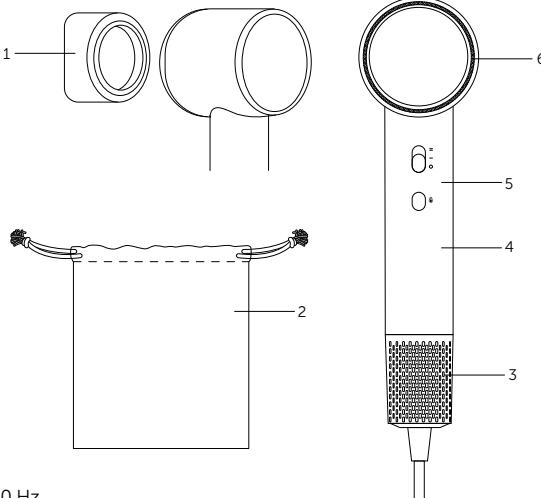

220-240 V~ 50 Hz
Класс защиты II
1400-1600 W
0.53 / 0.63 kg
93x68x250 mm

★★★★★ ПОДАРОК ЗА ОТЗЫВ

- 1 Напиши отзыв на приобретенный товар SCARLETT на сайте магазина, где этот товар приобретался*
- 2 Заполни простую анкету на сайте <https://www.scarlett.ru/promo/otzvy/>
- 3 Получи гарантированный подарок: «Деньги на счёт телефона»**

**ПИШИ ОТЗЫВ И ПОЛУЧАЙ
ПОДАРОК «ДЕНЬГИ НА СЧЁТ ТЕЛЕФОНА!»**

* Если на сайте, где куплен товар, оставить отзыв невозможно, оставь отзыв на сайте <https://www.scarlett.ru/promo/otzvy/>
** Количество подарков ограничено. Акция проводится на территории Российской Федерации. Информация об организаторе Акции, о правилах ее проведения, количестве подарков, сроках, месте и порядке их получения размещена на сайте <https://www.scarlett.ru/promotions/>



EAC

ENG DESCRIPTION KAZ СИПАТТАМА RUS УСТРОЙСТВО ИЗДЕЛИЯ

1. Magnetic nozzle attachment	1. Магниттік концентратор	1. Магнитная насадка-концентриатор
2. Storage bag	2. Сактау сымекси	2. Мешочек для хранения
3. Magnetic filter grille	3. Магниттік сүзгі торы	3. Магнитная решетка фильтра
4. Handle	4. Қалам	4. Ручка
5. Control panel	5. Басқару тақтасы	5. Панель управления
6. LED indication of operation modes	6. LED режимдерин көрсету	6. LED индикация режимов

ENG INSTRUCTION MANUAL IMPORTANT SAFEGUARDS

- Please read this instruction manual carefully before use.
- Before switching on the appliance for the first time please check if the technical specifications indicated on the unit correspond to the mains parameters.
- For home use only. Do not use for industrial purposes. Do not use the appliance for any other purposes than described in this instruction manual.
- Do not use outdoors or in damp area.
- Always unplug the appliance from the power supply before cleaning and when not in use.
- To prevent risk of electric shock and fire, do not immerse the appliance in water or any other liquids. If it has happened DO NOT TOUCH the appliance, unplug it immediately and check in a service center.
- Do not spray aerosol products when the hair dryer is in operation.
- Do not leave the appliance switched on when you do not use it.
- Do not use other attachments than those supplied.
- Never carry or suspend the appliance by the cord.
- Keep the cord away from sharp edges and hot surfaces.
- **IMPORTANT:**
- Keep your hair away from the immediate vicinity of the air inlet opening.
- Keep the air inlet filter dust and fluff free.
- Do not cover air inlet or air outlet otherwise the hair dryer may overheat.
- The attachments become hot during operation.
- If the appliance is used in a bathroom, it should always be unplugged after use, because nearness of water is dangerous even if the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- The appliance is not intended for use for physically, sensory or mental disabled person (including children) or for person with lack of life experience or knowledge, if only they are under supervision or have been instructed about the use of the unit by responsible person.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- Children must be under control in order not to be allowed to play with the appliance.
- In case of power cord is damaged, its replacement should be done by the manufacturer or service department or the other high-skill person to avoid any danger.



ATTENTION!

- Do not use the device beside the bathrooms, swimming pools and other vessels containing water.
- The manufacturer reserves the right to introduce minor changes into the product design without prior notice, unless such changes influence significantly the product safety, performance, and functions.
- If the product has been exposed to temperatures below 0°C for some time it should be kept at room temperature for at least 2 hours before turning it on.
- Do not attempt to repair, adjust or replace parts in the appliance. Repair the malfunctioning appliance in the nearest service center.
- Manufacturing date is indicated on the unit and/or on packing as well as in accompanying documents in the following format XXXXX where first two figures XX is the month of production, and following four figures XXXX is the year of production.

INSTRUCTION FOR USE

- The device is designed for drying and styling hair
- Fully unwind the cord.
- Attach a nozzle.
- Insert the plug into the power supply.
- Select the desired speed and temperature

SPEED AND TEMPERATURE CONTROL

The button on the handle of the device switches the air flow rates:

- «○» – on/off;
- «-» – medium-strength air flow
- «=» – powerful air flow

The button on the handle of the device switches the temperature of the air flow. The model is equipped with a light indication:

- Blue – cold air
- Orange is warm air
- Red – hot air

Sequential repetitive change of the color display from blue to red - circulation of cold and hot air.

MAGNETIC CONCENTRATOR

- The air concentrator is for bundling and directing the airflow for selective drying.
- Ions which the hair dryer generates automatically, neutralize static electricity that sometimes appears in the hair while drying it. Besides, this technology enhances the effect of hair products: the hair becomes smoother, softer and more shining.
- Ionization is activated automatically during the operation of the hair dryer and is active in all speed and temperature modes (cold air, warm air, hot air, cold and hot air circulation).

COOL AIR

- The hair dryer is equipped with a "COLD AIR" function. In this mode, you can quickly cool your hair by fixing the styling. To turn on the mode, press the button on the handle of the device until the blue color indicator turns on. To return to warm or hot air, press the button on the handle of the device until the desired mode is selected.

COLD AND HOT AIR CIRCULATION MODE

- The hair dryer is equipped with a "COLD AND HOT AIR CIRCULATION" function. In this mode, the device automatically adjusts the time of alternating hot and cold air supply, thereby minimizing damage to the hair during drying. To turn on the mode, hold the button on the handle of the device until the sequential change of the color indication from blue to red is enabled. To return to warm or hot air, press the button on the handle of the device until the desired mode is selected.

MEMORY FUNCTION OF THE LAST USED MODE

- The hair dryer is equipped with a memory function of the last mode. When the device is turned on, the air speed and temperature mode that was set before switching off is turned on.

CARE AND CLEANING

- Switch off the appliance, unplug it from the power supply and allow to cool fully.
- Clean the device with a damp cloth.
- Do not use abrasive cleaners.
- This model is equipped with a filter located on the handle of the device.
- Disconnect the magnetic filter grate by pulling it down slightly.
- To avoid damage, do not rinse the filter with water and do not put too much pressure on it.
- Remove the dust from the filter with a soft, smooth cloth. Attach the magnetic grid of the filter into place.

STORAGE

- Ensure that the hair dryer is completely cool and dry.
- Do not wrap the cord around the appliance, as this may cause damage.
- Keep the appliance in a cool, dry place.



The symbol on the unit, packing materials and/or documentations means used electrical and electronic units should not be tossed in the garbage with ordinary household garbage. These units should be pass to special receiving point. For additional information about actual system of the garbage collection address to the local authority.

Valid utilization will help to save valuable resources and avoid negative work on the public health and environment which happens with incorrect using garbage.

RUS РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ МЕРЫ БЕЗОПАСНОСТИ

- Внимательно прочтите Руководство по эксплуатации.
- Перед первоначальным включением проверьте, соответствуют ли технические характеристики, указанные на изделии, параметрам электросети.
- Использовать только в бытовых целях согласно данному Руководству по эксплуатации. Прибор не предназначен для промышленного применения.
- Не использовать вне помещений или в условиях повышенной влажности.
- Всегда отключайте устройство от электросети перед очисткой или если Вы его не используете.
- Во избежание поражения электрическим током и возгорания, не погружайте прибор в воду или другие жидкости. Если это произошло, НЕ БЕРИТЕСЬ за изделие, немедленно отключите его от электросети и обратитесь в Сервисный центр для проверки.
- Не расплющивте средства для укладки волос при работающем устройстве.
- Не оставляйте включенный прибор без присмотра.
- Не используйте принадлежности, не входящие в комплект данного прибора.
- Не переносите фен за шнур или петельку для подвешивания.
- Следите, чтобы шнур питания не касался острых кромок и горячих поверхностей.
- **ВНИМАНИЕ:**
- Следите за тем, чтобы в воздуховодные отверстия не попадали волосы, пыль или пух.
- Не закрывайте входные и выходные воздуховоды, так как двигатель и нагревательные элементы фена могут сгореть.
- Будьте осторожны, во время работы насадка сильно нагревается!
- При использовании устройства в ванной комнате следует отключать его от сети после использования, так как близкость воды представляет опасность, даже когда прибор выключен.
- Для дополнительной защиты целесообразно установить устройство защитного отключения (УЗО) с номинальным током срабатывания, не превышающим 30 мА, в цепь питания ванной комнаты; при установке следует обратиться за консультацией к специалисту.
- Прибор не предназначен для использования лицами (включая детей) с пониженными физическими, сенсорными или умственными способностями, или при отсутствии у них жизненного опыта или знаний, если они не находятся под

