

## **USERS GUIDE**



#### CRUSADER GRANDMASTER SERIES



## Select Your Language

Use remote control " ^ "or" v " to select your language. Then press the right button ">" and select "Complete" to enter the next page.



### **Remote Control**

#### Instruction of Buttons



Note: 1. Please keep the remote control aiming at the projector screen. 2.Please take out the battery if the remote control is not used for a long time.

## Pair Remote Control in Bluetooth Mode

After selecting a language, you will be at a Bluetooth remote pairing page, follow the instructions on the page.

- 1. Please hold the remote near the projector.
- 2. Press the "Home" and "Back" keys together for about 10 seconds.
- 3. When the screen displays " $\checkmark$ ", the remote control is successfully paired.



## Set up Google TV

The whole machine is equipped with Google TV dongle and Chromecast mirroring function. Clicking on the Google TV icon on the projector homepage can enter Google TV.



# Set up Google TV

- 1. Select your language, set up a Wi-Fi connection, sign in to a Google account and carry out other related procedures.
- 2. When you complete the Google TV setup wizard, the Google TV home screen will appear.
- 3. Now you can start watching your favorite shows by down loading streaming apps.

Settings	Network & Internet	Network & Internet
Set your device name Use this name when casting photos, videos, and more from your phone	YOU CAN CONNECT TO THE ATTEMPT WITH HER ETHORNEL ON YOUR PROJECT ANTIDOL FOR ADDR RULE, NOT IS COMMETINGNEL WI-FEI	чоц сам сомест то ле питалет или ни г. стигалет осноше мосс элотрист гол мобе или и или с соме тиких. Wi-Fi
Display & Sound Picture, sorren, sound	AVAILABLE NETWOORS TOUMRIVPNUSA_56 Commected	AVALABLE NETWORKS
Country & sign-in	DIRECT-75-HP Ink Tank Wirel.	DIRECT-75-HP Ink Tank Wirel.
Privacy	See all	TOUMEI OFFICE 2.4G

# **Chromecast (Wireless Connection)**

The Chromecast feature only works while you are in the Google TV system

- Cast from Chromecast-enabled Sites / Apps (for Android/ iOS devices)
- 1. Make sure your device and the Google TV are connected to the same Wi-Fi network, and that you are running the latest version of the Chromecast-enabled app.
- 2. Launch the Chromecast-enabled site / app.
- 3. Tap the cast button  $\prod$  and choose the projector.

Settings		
SUCCESTIONS Set your device name Use this name when casting photos, videos, and more from your phone	Choose a name for your 4K Google TV Stick	4K Google TV Stick
GENERAL SETTINGS	Give your device a name to help identify it when casting or	Bedroom TV
Display & Sound Picture, screen, sound	connecting to it from other devices.	Den TV
Network & Internet TouMei/VPNUSA_5G		Dining Room TV
Accounts & sign-in		Family Room TV
Přívacy		Kitchen TV

# **Chromecast (Wireless Connection)**

• Cast from Chrome Browser tab (for Computers)

- 1. Connect your computer and projector to the same Wi-Fi network.
- 2. Click "Cast" at the top right: of the Chrome browser tab, and then choose from the sources whether you want to cast the tab or the screen.
- 3. Choose the projector mini to cast.

#### • Mirror from Android Devices

- 1. Make sure your Android device is on the same Wi-Fi network as your Google TV .
- 2. Download the "Google Home" app 🛆 your Android device.
- 3. Open the "Google Home" app, choose the projector.
- 4. Tap "Cast my screen".

#### • Mirror from iOS Devices

- 1. Make sure your iOS device is connected to the same Wi-Fi network as your Google TV.
- 2. Download the "AirScreen" app 🔊 from the Google Play Store of Google TV system.
- 3. Open the "AirScreen" app and follow the on-screen instructions on AirScreen.

### Focus

### **Manual focus**

- 1. Quick focus:Long press the button of "F+"/"F-" on the remote control, the FOCUS icon will appear and rotate quickly on the projection interface.
- 2. Precise focus: Click the "F+"/"F-" button on the remote control continuously, and the FOCUS icon on the projection interface will change according to the frequency of clicks.





### Focus

### Autofocus

- 1. Automatically focus every time the machine is turned on or moved.
- 2. If you want to turn off auto focus on the projector, please go to **Settings > Keystone Setting > Focus setting > Auto focus**, and turn off the switch of auto focus in the settings interface.
- 3. If the autofocus clarity is not sufficient, you can use the "F+"/"F-" on the remote control to assist in focusing.



# **Connection & Key**

### **Touch buttons**





### HDMI

#### Connecting to external multimedia interfaces

- 1. Connect the high-definition multimedia HDMI cable to the HDMI interface on the device.
- 2. The HDMI input signal will automatically display the screen in about 5 seconds.





### **Shortcuts Button**

Long press the "OK" key or click the menu key to uninstall the application or move the application location.







### File Explorer

Please check the files in File Explorer when you play in your USB.



### How to play 3D movies

- 1. Please use shutter style 3D glasses and remember to charge them before the first use.
- 2. 3D video format conversion, with two options: left and right and up and down formats.
- 3. To select the correct video format, please open the 3D video on the projector, long press the remote control menu button, and then open the 3D settings in the settings. Here, you will see two options, left and right video format (SBS) and up and down (TB) video format.





### How to play 3D movies

#### Example:

For SBS video, you need to open 3D from settings interface and select the SBS option. For TB video, you need to open 3D from settings interface and select the TB.



### **Picture mode**

- 1. Brightness mode: Middle / High/ Low.
- 2. Color temperature: Cool / Warm / User defined.



**InFocus** 

## **Projection method**

- 1. Projection method: Front / Rear / Ceiling front / Ceiling rear.
- 2. Zoom: Global / Vertical / Horizontal / Reset.





# **Trapezoidal settings**

### Trapezoidal Calibration: Automatic/manual trapezoidal Calibration

- 1. Automatic Trapezium Calibration
- 2. Manual Setup: Adjust the trapezoidal shape on the basis of the offset. After clicking to restore the default option, the initial state will be automatically reset.
- 3. Use the direction keys on the remote control to correct the projection screen, click the OK button to switch to the next corner, and click the menu button to restore the default.





## **Trapezoidal settings**

### Focus settings:

- 1. Autofocus: on/off
- 2. Focus calibration: When the autofocus is not clear, using the focus calibration function can make the autofocus more precise. Click on **Settings > Ladder Settings > Focus Calibration** to enter the focus calibration operation instruction interface. Follow the instructions to complete the focus calibration.

