

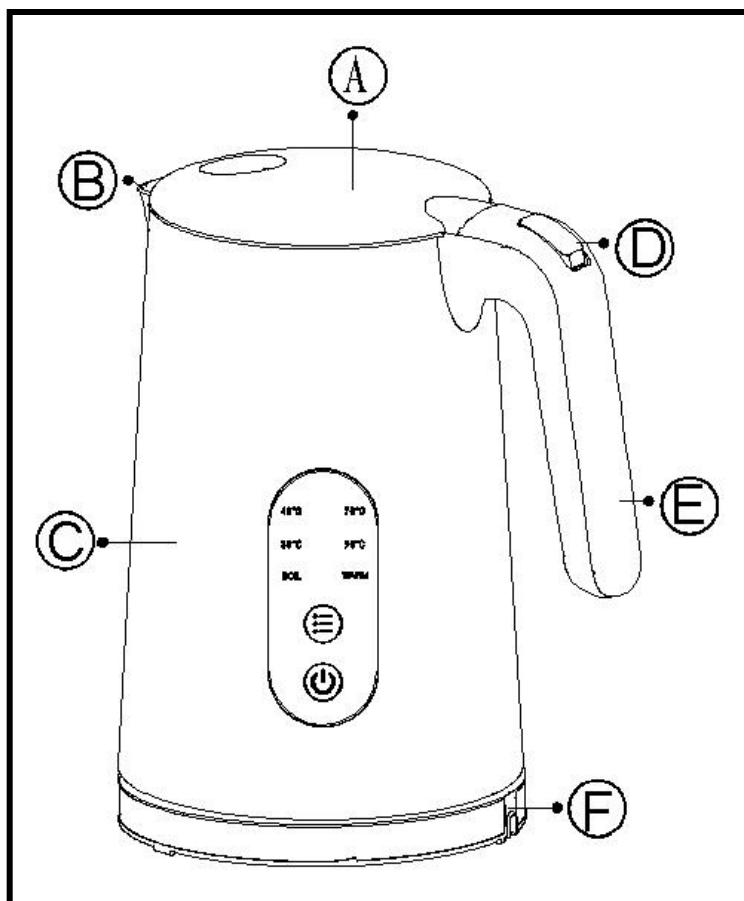


HHB8726D-J

INSTRUCTION MANUAL

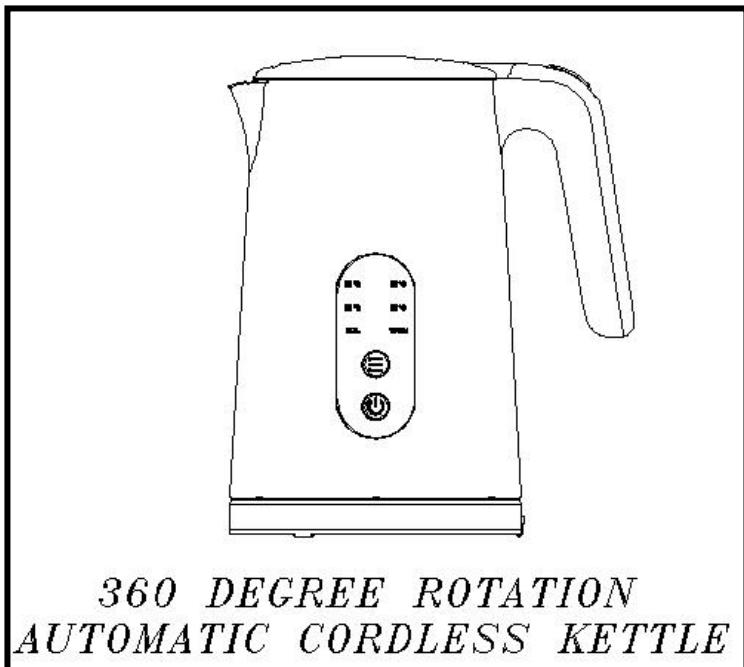

- Ⓐ Cover
- Ⓑ body
- Ⓒ body PP housing
- Ⓓ Cover starter
- Ⓔ Handle cover
- Ⓕ Base

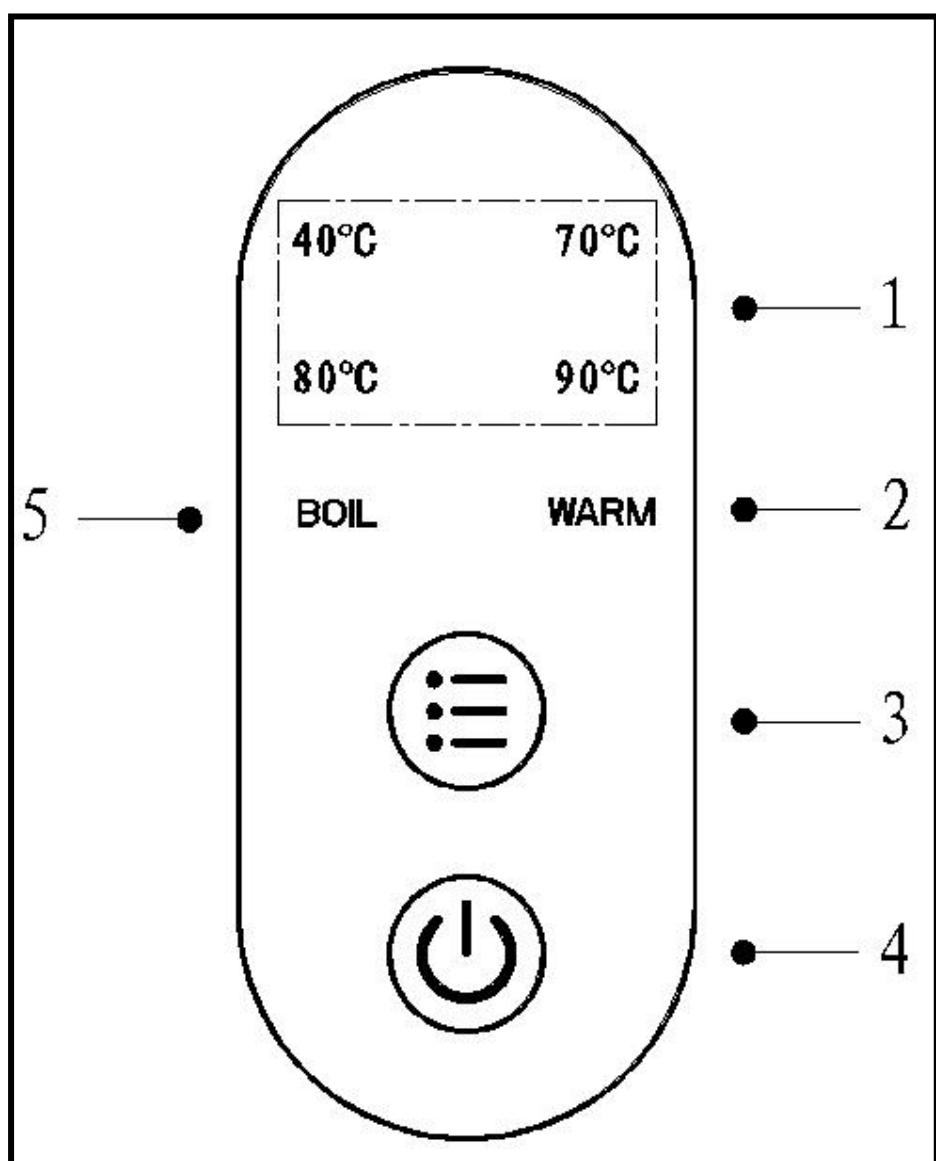

1. Temperature Icon
2. Keep warm Icon
3. Function selection Button
4. Power Button (On /Off)
5. Boil Icon





Operation Instruction

Please check whether your socket and power is suitable for this product before use

Do not exceed the maximum line of the mark(1700ml)

It is suggested to boil twice to clean the inner pot when first use

- 1 . Place the the kettle on a horizontal surface for use
- 2 . Open the lid and pour water into the kettle
3. Connect with power, enter the setting interface, and press the button for boiling water (you can select the setting temperature you need under the setting interface).
4. Take off the kettle for brewing

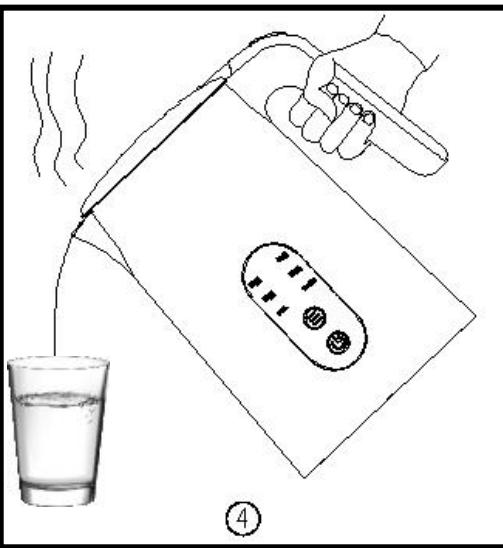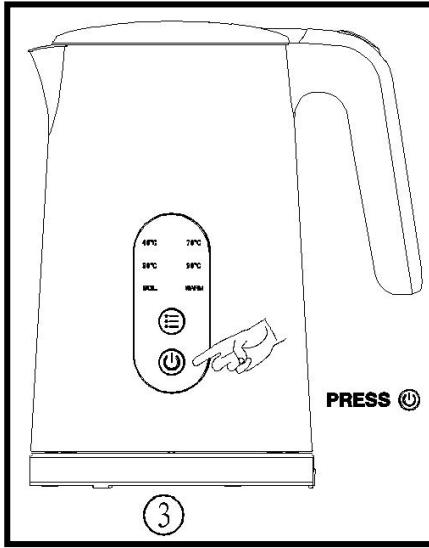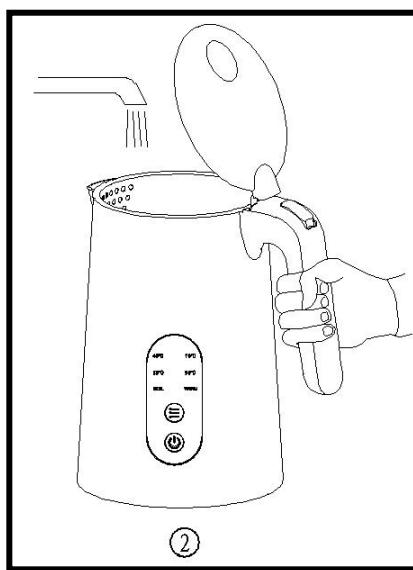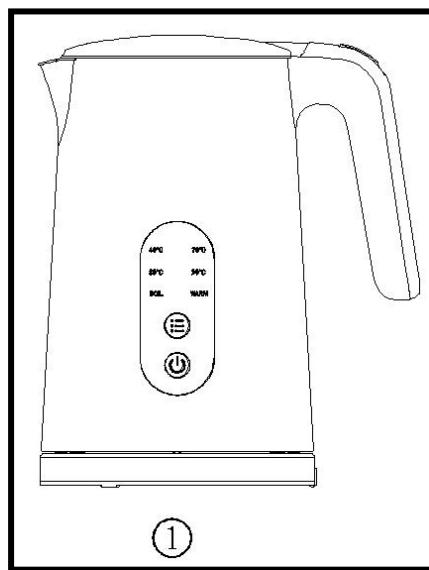

When using your kettle , basic safety precautions should always be followed , including the followings:

1. Read all instruction carefully and thoroughly, before any operation of the kettle.
2. Close supervision is necessary when any appliance is used by or near children.
3. Before connecting the kettle , check whether the voltage indicated on the appliance(underside of kettle and base unit) corresponds with the mains voltage in your home. If this is not the case, contact your dealer and not use the kettle.
4. Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
5. Do not overfill as boiling water may be ejected, the maximum level indicator. Fill with cold water only.
6. To avoid against fire , do not operated in the presence of explosive and/or flammable fumes. Such as do not operate or place any party of this appliance on or near gas and electric burner or in a heated oven.
7. Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surface.
8. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.
9. If the cord or plug is damaged , or after the appliance malfunctions or is dropped or damaged in any way, return the appliance completely to your nearest authorized service agent for examination, repair or adjustment.
10. Avoid touching the surface of the hot kettle, use the handle and knobs.
11. To avoid possible steam damage, not face the spout when operating the kettle.
12. If operated on wood furniture , use a protective pad to prevent damage to delicate finishes.
13. To avoid scalding, always ensure the lid is correctly positioned before operation.
14. Scalding may occur if the lid is removed while heating.
15. Remove and replace the lid carefully when hot.
16. Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.
17. Do not switch your kettle on if it is empty.
18. To protect from electrical hazard, do not immerse this kettle, power base or cord set in any liquid.
19. Use the kettle only with the supplied base unit . Do not use the base unit for other purposes.
20. To protect against fire , do not operated in the presence of explosive and/or flammable fumes.
21. While the water boiling or in the short time after the water boils, please be sure that don't attempt to open the cover for avoid the steam scalding your hand.
22. Please avoid the liquid sprinkling in the LCD board and the pressed key place in the operating process. Because the water possibly can plunge in the product, causes the function to be unusual.
23. Please do not have to add surpasses the maximum water volume the water, because this has the possibility to damage the product, causes the product movement to appear exceptionally.
24. Please regular clean descale or pot bottom residuum, because this possibly can affect the normal use of the product.
25. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

26. This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety.

Save the instruction

Basic Operation:

① **Temperature Icon:** The icon of each corresponding temperature lights up, indicating that the set temperature of the corresponding point is selected.

② **Keep warm Icon:** The icon light up indicating that under keep warm state

③ **Function selection button:** Under the operation interface, short press  and select the corresponding setting temperature 40–70–80–90–100°C.

Long press  for 2 seconds, select the set temperature, the kettle into keep warm status for two hours .

When the water temperature is below the set value of about 5 degrees, the heating is resumed, the cycle runs until the keep warm is completed (keep warm state, the icon **WARM** and the icon corresponding to the selected temperature lights up. In the keep warm

state, press  2 seconds, keep warm canceled).

④ **Power button (ON/OFF button):** In the operation interface, press  , the buzzer gives a sound “DI”, the icon **BOIL** indicator lights up, and enters the state of boiling water. After the water boils, the light off, and the buzzer gives sound “ DI DI”

⑤ **BOIL ICON:** The set temperature is 100°C.

How to care for your kettle

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powers.

Never immerse the kettle in water or other liquids.

From time to time, depended on the nature of your water supply, a boiled scale deposit is naturally formed and can be found mostly adhered to the heating element, thus reducing the heating

efficiency.

The amount of boiled scale deposited (and subsequently the need to clean or re-scale) largely depends on the water hardness in your area the frequency with which the kettle is used.

Boiled scale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

Descaling

Under normal use, it is generally necessary to clean and descale at least twice a year, the specific method is as follows:

1. Mix daily vinegar with water in a ratio of 1:2, fill the kettle (the highest water level) to start boiling water, and wait for the kettle to boil
2. Leave the mixture for 12 hours.
3. Pour off the mixture.
4. Fill clean water to the highest water level and restart the boil function.
5. Pour off the boiling water, The scale and mixture has been removed and the cleaning of the kettle is completed.

Electric data: 220-240V~ 50/60Hz 1850-2200W 1.7L