



E330C Series Gaming Monitor

User's Manual



Foreword

General

This manual describes the functions, operations, and precautions of the E330C Series Gaming Monitor Devices (hereinafter referred to as the "Devices"). Please read the device carefully before using it, and keep the instruction manual for future reference.

Models

This manual is applicable to Dahua E330C series monitor models. Includes: DHI-LM30-E330C, DHI-LM30-E330CA, DHI-LM34-E330C, DHI-LM34-E330CA.

Safety Instructions

The following signal words might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, reductions in performance, or unpredictable results.
 TIPS	Provides methods to help you solve a problem or save time.
 NOTE	Provides additional information as a supplement to the text.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual.
- The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper user's manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.
- All designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual. Please contact customer service for the latest program and supplementary documentation.

- There might be errors in the print or deviations in the description of the functions, operations and technical data. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and company names in the manual are properties of their respective owners.
- Please visit our website, contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, and comply with the guidelines when using it.

Operation Requirements

WARNING

- Do not tread on or squeeze the power line, especially the plug or connection point of the power line to the product.
- Please firmly grasp the plug of the connecting line when inserting and removing. Pulling the connecting line might cause damage to it.
- Turn off the power when cleaning the product.
- Do not touch any fixed components inside the product. Failure to do so can result in damage to the product or person.

CAUTION

- Make sure that the power supply of the device works properly before use.
- Do not pull out the power cable of the device while it is powered on.
- Only use the device within the rated power range.
- Transport, use and store the device under allowed humidity and temperature conditions.
- Prevent liquids from splashing or dripping on the device. Make sure that there are no objects filled with liquid on top of the device to avoid liquids flowing into it.
- Do not disassemble the device.
- Notice and observe all the warnings and illustrations.
- Make sure the power is turned off and the connecting lines are removed when moving the product.
- Do not use uncertified connecting lines, which might cause equipment failure.
- Avoid collisions with the product. This may cause equipment failure.
- Please turn off power for safety if not using the product for a long time.

Installation Requirement

WARNING

- Connect the device to the adapter before power on.
- Strictly abide by local electrical safety standards, and make sure that the voltage in the area is steady and conforms to the power requirements of the device.
- Do not connect the device to more than one power supply. Otherwise, the device might become damaged.

- Do not hang or lean on the product. Doing so can cause the product to fall or become damaged. It may also cause injury to people. Pay special attention when children are nearby.
- If the product is installed on the wall, please make sure the wall's load bearing capacity is sufficient. To avoid falling and injuring people, install according to the included instructions with mounting hardware.
- Do not put the product in flammable or corrosive gaseous environment, which may cause fire or damage the product. Placing the product in proximity to flammable gas can easily result in a dangerous explosion.

 **CAUTION**

- Observe all safety procedures and wear required protective equipment provided for your use while working at heights.
- Do not expose the device to direct sunlight or heat sources.
- Do not install the device in humid, dusty or smoky places.
- Install the device in a well-ventilated place, and do not block the ventilator of the device.
- Use the power adapter or case power supply provided by the device manufacturer.
- The power supply must conform to the requirements of E51 in IEC 62368-1 standard and be no higher than PS2. Note that the power supply requirements are subject to the device label.
- Connect class I electrical appliances to a power socket with protective earthing.
- Do not block the ventilation opening. Install the product according to this handbook.
- Do not place any items on the product. The product may be damaged if foreign objects enter the internal unit.
- Failure to properly secure all screws during installation can result in a fall of the product. Ensure all mounting hardware and other installation accessories are properly secured during installation.
- mounted height <2m
-  Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.
- ~ Alternating Current.

Maintenance Requirements

 **WARNING**

- Cut off power and the connecting line immediately and contact the after-sales service center if the product or the connecting line is damaged for some reason. Continued use without maintenance might cause smoking or off-odor.
- Please turn off power or unplug the power cable immediately if there is smoking, off-odor, or abnormal noise. Contact the after-sales service center for maintenance after confirming there is no more smoke or odor. Further use could result in fire.

 **CAUTION**

- Do not adjust, maintain or modify if you do not have appropriate qualifications.
- Do not open or remove the rear cover, box or cover board of the product. Please contact the dealer or after-sales service center when in need of adjustment or maintenance.
- Only qualified service people can maintain. If the product gets any kind of damage, such as damage to the plug, foreign matter or liquid into the unit, exposure to rain or humidity, loss of function, or dropped, please contact dealer or after-sales service center.
- Be careful during maintenance of product even if the power is off. Some components are equipped with UPS, and can continue to supply power which is dangerous to people.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Table of Contents

Foreword -----	I
Important Safeguards and Warnings -----	III
Product Information -----	1
1. Packing List -----	1
2. Monitor Adjustments-----	5
3. Button Description -----	9
4. Cable Connection -----	13
5. Menu Description -----	17
6. Operation Menu(OSD) Function Descriptions -----	19
7. Product Specifications -----	23
Appendix 1. Troubleshooting -----	24
Appendix 2. Cybersecurity Recommendations -----	25

Product Information

1. Packing List

DHI-LM30-E330C

Figure 1-1 Packing List

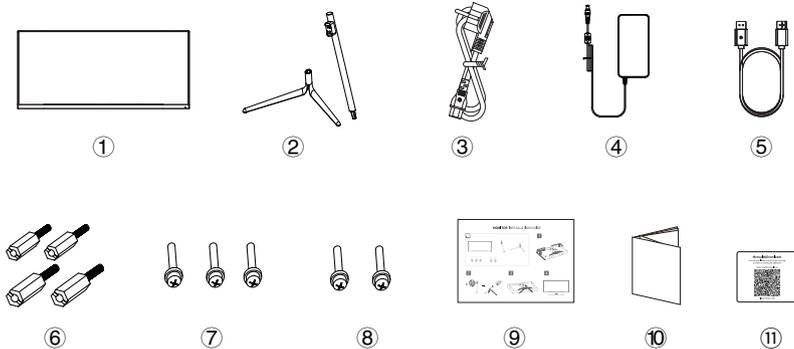


Table 1-1 Packing List

No.	Meaning
①	Display screen
②	Base/Stand
③	Power cable
④	Power adapter
⑤	DP signal cable
⑥	Mount stud
⑦	PM4*10 Screw bolts
⑧	PM4*12 Screw bolts
⑨	QSG
⑩	Legal and regulatory information
⑪	User's manual QR code stickers

NOTE

The above appendix products are for reference only, the supporting products of different models of monitors may be slightly different from those in the figure, and everything is subject to reality.

DHI-LM30-E330CA

Figure 1-2 Packing List

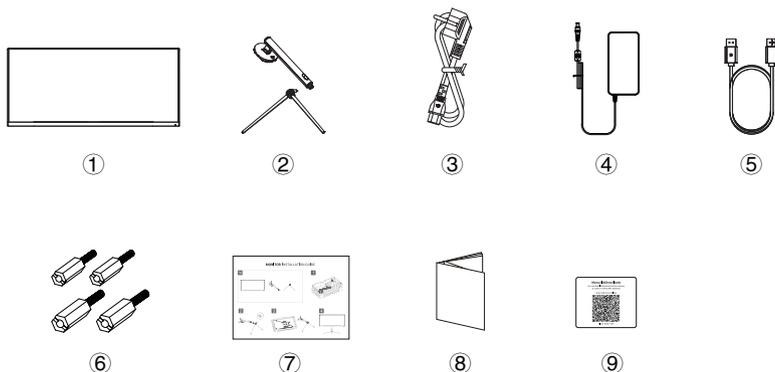


Table 1-2 Packing List

No.	Meaning
①	Display screen
②	Base/Stand
③	Power cable
④	Power adapter
⑤	DP signal cable
⑥	Mount stud
⑦	QSG
⑧	Legal and regulatory information
⑨	User's manual QR code stickers

The above appendix products are for reference only, the supporting products of different models of monitors may be slightly different from those in the figure, and everything is subject to reality.

DHI-LM34-E330C

Figure 1-3 Packing List

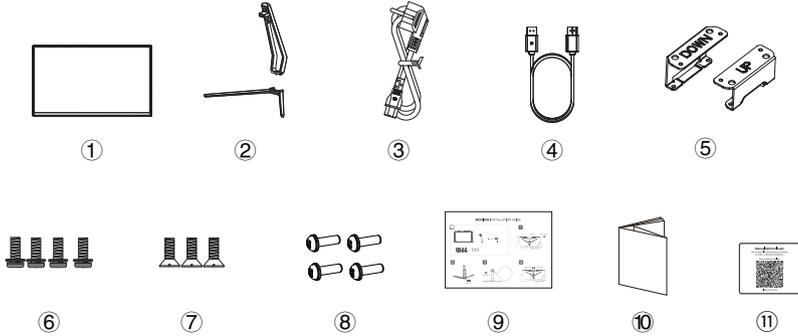


Table 1-3 Packing List

No.	Meaning
①	Display screen
②	Base/Stand
③	Power cable
④	DP signal cable
⑤	VESA connector
⑥	PM4*12 Screw bolts
⑦	KM4*12 Screw bolts
⑧	PM4*16 Screw bolts
⑨	QSG
⑩	Legal and regulatory information
⑪	User's manual QR code stickers

NOTE

The above appendix products are for reference only, the supporting products of different models of monitors may be slightly different from those in the figure, and everything is subject to reality.

DHI-LM34-E330CA

Figure 1-4 Packing List

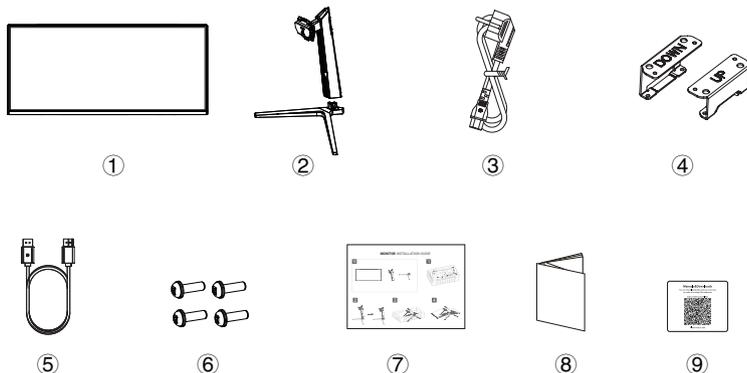


Table 1-4 Packing List

No.	Meaning
①	Display screen
②	Base/Stand
③	Power cable
④	VESA connector
⑤	DP signal cable
⑥	PM4x16 Screw bolts
⑦	QSG
⑧	Legal and regulatory information
⑨	User's manual QR code stickers


The above appendix products are for reference only, the supporting products of different models of monitors may be slightly different from those in the figure, and everything is subject to reality.

2. Monitor Adjustments

The adjustment functions of the display include tilt angle adjustment, screen vertical rotation angle adjustment, left and right rotation angle adjustment, and height adjustment, as shown in the figure below. Different types of displays have different adjustment functions, and the specific adjustment functions are subject to the actual model adjustment functions.

DHI-LM30-E330C

Figure 2-1 Monitor adjustments

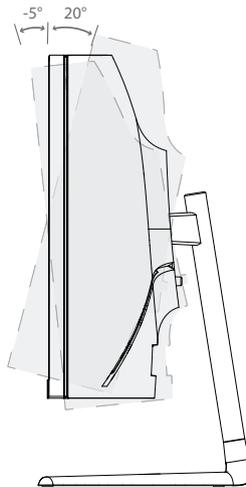

Tilting angle
 $-5.0^{\circ}(\pm 2.0^{\circ}) \sim +20^{\circ}(\pm 2.0^{\circ})$


 **NOTE**

When adjusting the angle of the monitor, be sure not to touch or press the area of the screen.

The above figure is for reference only, and everything is subject to the actual adjustment function.


DHI-LM30-E330CA

Figure 2-2 Monitor adjustments

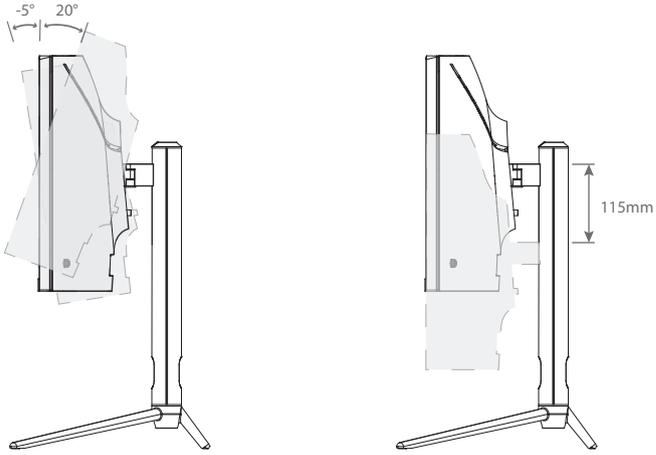

Tilting angle
 $-5.0^{\circ}(\pm 2.0^{\circ}) \sim +20^{\circ}(\pm 2.0^{\circ})$

Height adjustment
115mm(± 5.0 mm)

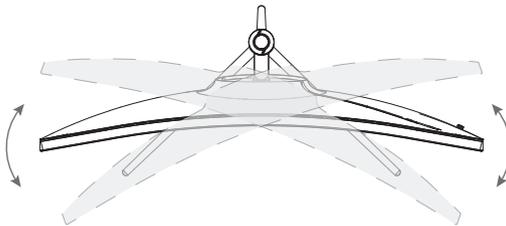

Rotation angle
 $\pm 25^{\circ}(\pm 2.5^{\circ})$


 **NOTE**

When adjusting the angle of the monitor, be sure not to touch or press the area of the screen.

The above figure is for reference only, and everything is subject to the actual adjustment function.

DHI-LM34-E330C

Figure 2-3 Monitor adjustments

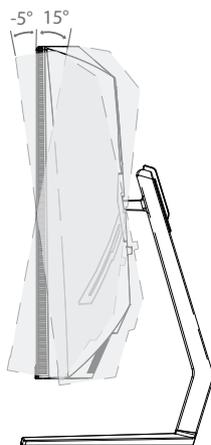

Tilting angle

$-5.0^{\circ}(\pm 2.0^{\circ}) - +15^{\circ}(\pm 2.0^{\circ})$


 **NOTE**

When adjusting the angle of the monitor, be sure not to touch or press the area of the screen.


The above figure is for reference only, and everything is subject to the actual adjustment function.

DHI-LM34-E330CA


Figure 2-4 Monitor adjustments

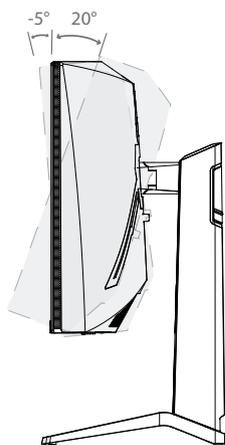

Tilting angle
 $-5.0^{\circ}(\pm 2.0^{\circ}) \sim +20^{\circ}(\pm 2.0^{\circ})$

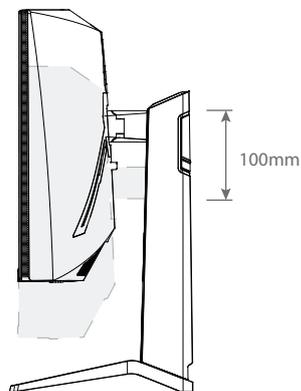

Height adjustment
100mm(± 5.0 mm)

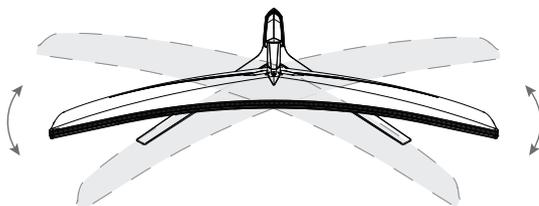

Rotation angle
 $\pm 20^{\circ}(\pm 2.0^{\circ})$

 **NOTE**

When adjusting the angle of the monitor, be sure not to touch or press the area of the screen.

The above figure is for reference only, and everything is subject to the actual adjustment function.

3. Button Description

DHI-LM30-E330C

Figure 3-1 Indicator and button display

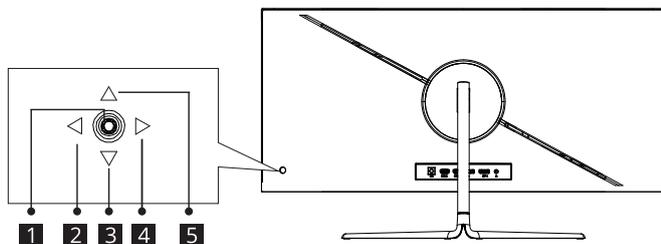


Table 3-1 Indicator description (1)

Name	Description
LED indicator light	<ul style="list-style-type: none"> The blue light indicates that the power supply is normal and the monitor is running normally . Blinking red and blue lights indicate no video source, no horizontal or vertical signal or low voltage is detected. The light is off when the screen is turned off.

Table 3-1 OSD Buttons (1)

OSD Button	Function
1	Power button: Press to turn on/off the monitor.
2	Menu button: Press to enter sub-menus/ quickly enter the main menu.
3	Down button: Press to move down in the menu/quickly enter the LED light effect.
4	Exit/hot key: Press to return to the previous menu/quickly adjust the input signal.
5	Up button: Press to move up in the menu/quickly enter the gameplus mode.

 NOTE

The above content is for reference only, and everything is subject to actual conditions.

DHI-LM30-E330CA

Figure 3-2 Indicator and button display

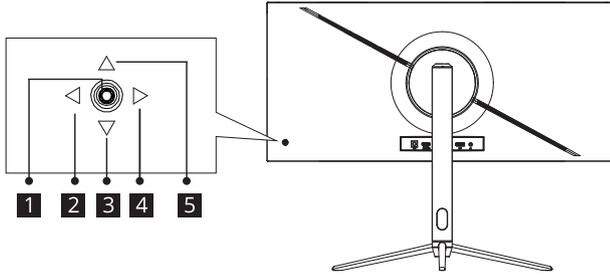


Table 3-2 Indicator description (1)

Name	Description
LED indicator light	<ul style="list-style-type: none"> The blue light indicates that the power supply is normal and the monitor is running normally . Blinking red and blue lights indicate no video source, no horizontal or vertical signal or low voltage is detected. The light is off when the screen is turned off.

Table 3-2 OSD Buttons (1)

OSD Button	Function
1	Power button: Press to turn on/off the monitor.
2	Menu button: Press to enter sub-menus/ quickly enter the main menu.
3	Down button: Press to move down in the menu/quickly enter the LED light effect.
4	Exit/hot key: Press to return to the previous menu/quickly adjust the input signal.
5	Up button: Press to move up in the menu/quickly enter the gameplus mode.

 NOTE

The above content is for reference only, and everything is subject to actual conditions.

DHI-LM34-E330C

Figure 3-3 Indicator and button display

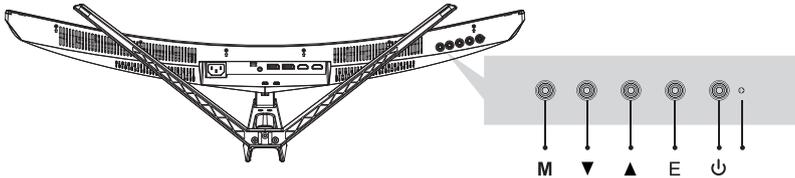


Table 3-3 Indicator description (1)

Name	Description
LED indicator light	<ul style="list-style-type: none"> The blue light indicates that the power supply is normal and the monitor is running normally. The red light indicates no video source, no horizontal or vertical signals, or too low a voltage. The light is off when the screen is turned off.

Table 3-3 OSD Buttons (2)

OSD Button	Function
M	Menu button: Press to display OSD menu and enter sub-menus.
▼	Down button: Move down in the menu/quickly adjust the game crosshairs.
▲	Up button: Move up/quickly adjust contextual model.
E	Exit key: Returns to the previous menu/quickly adjust the input signal.
⏻	Power button: Press to turn monitor on/off.

 **NOTE**

The above content is for reference only, and everything is subject to actual conditions.

DHI-LM34-E330CA
Figure 3-4 Indicator and button display

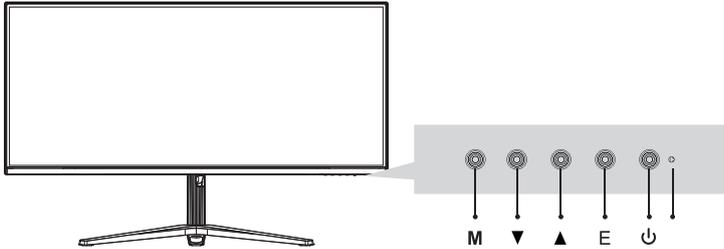


Table 3-4 Indicator description (1)

Name	Description
LED indicator light	<ul style="list-style-type: none"> • Solid blue light indicates that the power supply is normal and the monitor is running normally . • Flashing blue light indicates no video source, no horizontal or vertical signal or low voltage is detected. • The light is off when the screen is turned off.

Table 3-4 OSD Buttons (1)

OSD Button	Function
M	Menu button: Press to display OSD menu and enter sub-menus.
▼	Down button: Move down in the menu/quickly adjust the game crosshairs.
▲	Up button: Move up/quickly adjust contextual model.
E	Exit key: Returns to the previous menu/quickly adjust the input signal.
⏻	Power button: Press to turn monitor on/off.

 NOTE

The above content is for reference only, and everything is subject to actual conditions.

4. Cable Connection

DHI-LM30-E330C

Figure 4-1 Input and output interface

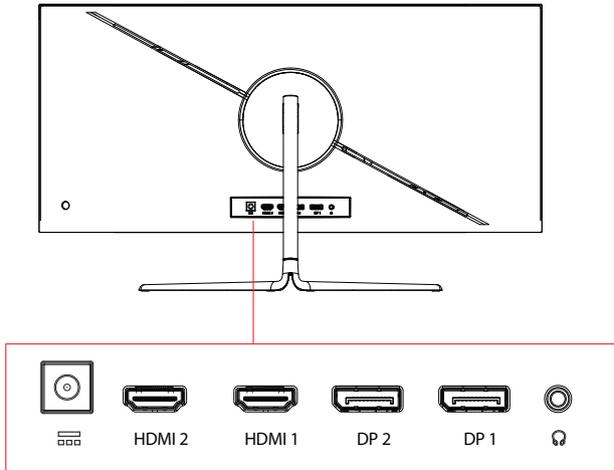


Table 4-1 Input and output ports

Port	Function
HDMI	x2/ Use the HDMI cable to connect the HDMI IN interface of the product to the HDMI OUT interface of a PC.
DP	x2/ Use the DP cable to connect to a desktop PC.
	x1/ Use to connect with external sound output devices such as headphones or earphones.
	x1/ Used to connect power adapter, then connect the power cable to a properly grounded power outlet.

 **NOTE**

The above ports are for reference only, the actual ports of different types of monitors may be slightly different from the ports in the figure, and everything is subject to the ports and functions of the actual product.

DHI-LM30-E330CA

Figure 4-2 Input and output interface

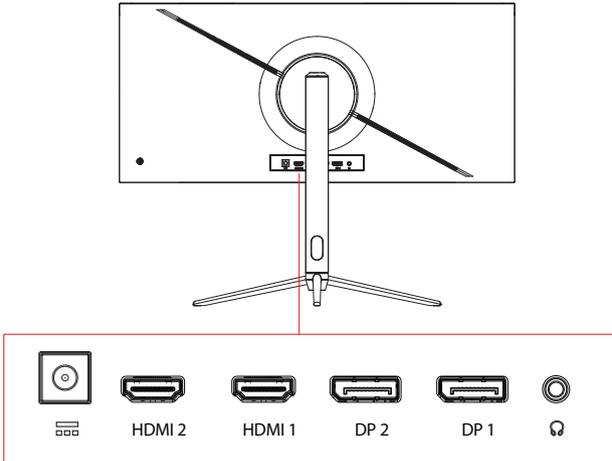


Table 4-2 Input and output ports

Port	Function
HDMI	x2/ Use the HDMI cable to connect the HDMI IN interface of the product to the HDMI OUT interface of a PC.
DP	x2/ Use the DP cable to connect to a desktop PC.
	x1/ Use to connect with external sound output devices such as headphones or earphones.
	x1/ Used to connect power adapter, then connect the power cable to a properly grounded power outlet.

NOTE

The above ports are for reference only, the actual ports of different types of monitors may be slightly different from the ports in the figure, and everything is subject to the ports and functions of the actual product.

DHI-LM34-E330C
Figure 4-3 Input and output interface

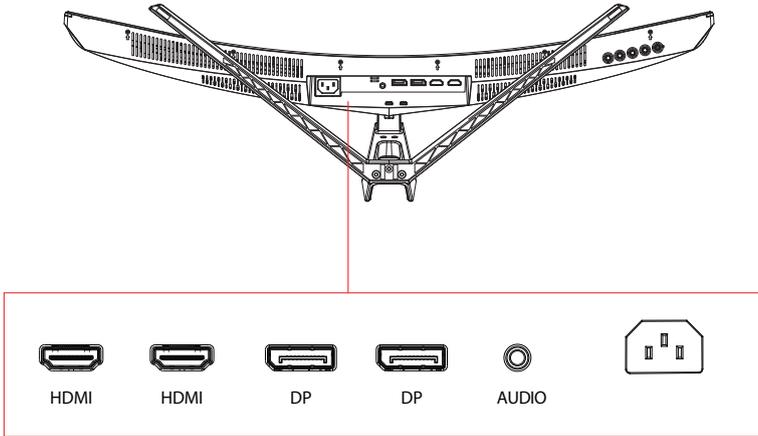


Table 4-3 Input and output ports

Port	Function
HDMI	x2/ Use the HDMI cable to connect the HDMI IN interface of the product to the HDMI OUT interface of a PC.
DP	x2/ Use the DP cable to connect to a desktop PC.
AUDIO	x1/ Use to connect with external sound output devices such as headphones or earphones.
AC	x1/ Insert the power cable to supply power to the monitor.

 NOTE

The above ports are for reference only, the actual ports of different types of monitors may be slightly different from the ports in the figure, and everything is subject to the ports and functions of the actual product.

DHI-LM34-E330CA
Figure 4-4 Input and output interface

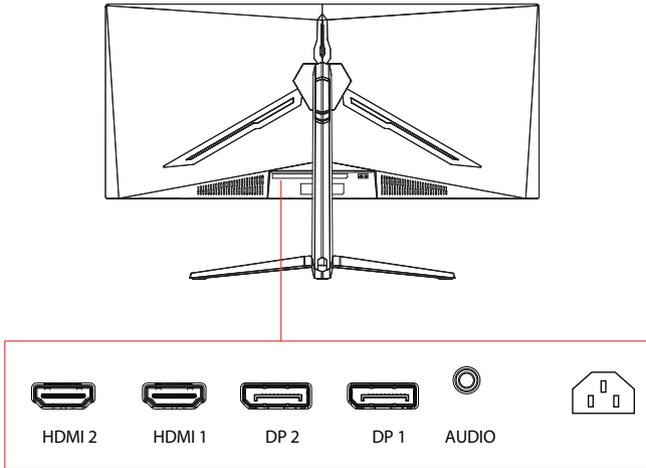


Table 4-4 Input and output ports

Port	Function
HDMI	x2/ Use the HDMI cable to connect the HDMI IN interface of the product to the HDMI OUT interface of a PC.
DP	x2/ Use the DP cable to connect to a desktop PC.
AUDIO	x1/ Use to connect with external sound output devices such as headphones or earphones.
AC	x1/ Please connect the power cable plug to the corresponding port of the monitor, and connect the other end to a properly grounded power outlet.

 NOTE

The above ports are for reference only, the actual ports of different types of monitors may be slightly different from the ports in the figure, and everything is subject to the ports and functions of the actual product.

5. Menu Description


- The color and shape of the OSD menu of the actual computer may be slightly different from that shown in the figure, and everything that has been actually displayed shall prevail.
- Specifications of the OSD menu may change with improvements of functions without prior notice.

DHI-LM30-E330C/E330CA

The On-Screen Display (OSD) menu allows you to adjust the settings of your display, turn on the monitor and move the joystick to the right to display the navigation interface.

Step 1. Rocker key (Right) to enter the OSD main menu or enter sub-menus.

Figure 5-1 OSD screen

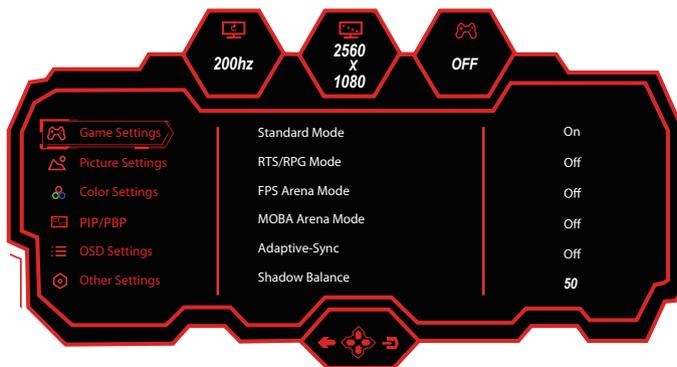

Step 2. Push the rocker buttons ▲ or ▼ to scroll through the functions.

- Select the desired function, then push the rocker buttons ► to enter the sub-menu.
- Push the rocker buttons ▲ or ▼ to scroll through sub-menus, and push the rocker buttons ► key to select and confirm the desired function.
- Push the rocker buttons ▲ or ▼ to select one option, and push the rocker buttons ► to confirm settings and exit from the current menu.


Step 3. Push the rocker buttons ◀ to exit from the menu screen.

DHI-LM34-E330C/E330CA

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the **M** button is pressed.

Step 1. Press the button **M** to activate the browser screen.

Figure 5-2 OSD screen

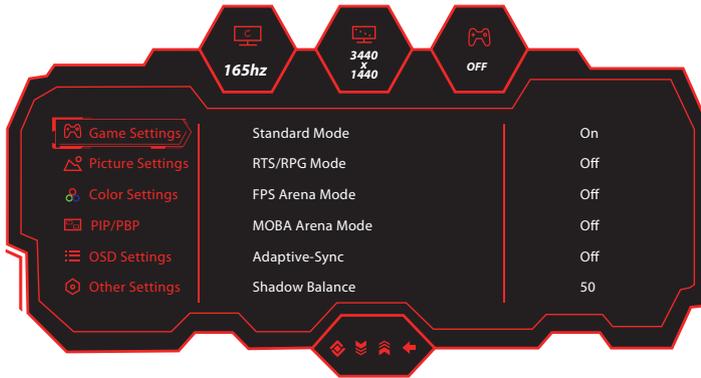

Step 2. Press **▲** or **▼** to scroll through the functions.

- Select the desired function, and press **M** to enter the sub-menu.
- Press **▲** or **▼** to scroll through sub-menus, and press **M** key to select and confirm the desired function.
- Press **▲** or **▼** to select one option, and press **M** to confirm settings and exit from the current menu.

Step 3. Press **E** to exit from the menu screen.

6. Operation Menu(OSD) Function Descriptions

DHI-LM30-E330C/E330CA

Table 6-1 OSD Menu description

Main Menu	Sub Menu	Option
Game Settings	Standard Mode	Off/On
	RTS/RPG Mode	Off/On
	FPS Arena Mode	Off/On
	MOBA Arena Mode	Off/On
	Adaptive-Sync	Off/On
	Shadow Balance	0-100
	Response Time	Off/Normal/Fast/Ultrafast
	Refresh Rate	Off/On/Position
	Game Crosshair	Off/Crosshair1/Crosshair2/Crosshair3/Crosshair4/Crosshair5/Crosshair6
	Game Time	Off/On: 15:00/30:00/45:00/60:00/Position
	Dynamic Brightness	Off/Normal/Expert/Elaboration
	MPRT	Off/On
	Ambient Lighting	Off/Led Bar
Picture Settings	Brightness	0-100
	Contrast	0-100
	DCR	Off/On
	Contextual Model	Off/Movie Mode/Reading Mode/Night Mode
	Low Blue Light	0-100
	Sharpness	0-5
	Gamma	1.8/2.0/2.2/2.4/2.6/5.curve
	Aspect Ratio	Wide Screen/4:3/1:1/Auto
Color Settings	Warm	Off/On
	Natural	Off/On
	Cool	Off/On
	User1	Off/On:0-100(R/G/B)
	User2	Off/On:0-100(R/G/B)

Main Menu	Sub Menu	Option
Color Settings	User3	Off/On:0-100(R/G/B)
	Hue	0-100(R/G/B/C/M/Y)
	Saturation	0-100(R/G/B/C/M/Y)
PIP/PBP	PIP/PBP Mode	Off/PIP Mode/PBP 2Win 1:1
	Sub-Signal Source	DP1/DP2/HDMI1/HDMI2
	Audio Source	Auto/DP1/DP2/HDMI1/HDMI2
	PIP Position	TopRight/TopLeft/BottomRight/BottomLeft
	PIP Size	Small/Medium/Large
	Window Swap	Off/On
OSD Settings	Language	简体中文/English/한국어 / عربي / Portugues do Brasilazil/Deutsch/Nederland/Suomi/Français/Ελληνικά/Indonesia/Italiano/日本語/Malaysia/Polskie/Português/Русский/Εσπαñol/ไทย/Українська/Tiếng Việt/繁体中文/Türkçe
	OSD Time Out	5-100
	OSD H-Position	0-100
	OSD V-Position	0-100
	OSD Transparency	0-5
	Hotkey1 Setting	Brightness/Contrast/Volume/Mute/Shadow Balance/Game Crosshair/Refresh Rate/Game Time/Contextual Model/Input Signal/Dynamic Brightness/Ambient Lighting
	Hotkey2 Setting	
	Hotkey3 Setting	
	OSD Rotation	Normal/90/180/270
OSD Lock	Off/On	
Other Settings	Input Signal	Auto/DP1/DP2/HDMI1/HDMI2
	Volume	0-100
	Mute	Off/On
	Auto Power	Off/On
	Eyeshield Remind	Off/On
	Reset	No/Yes
	Information	Input Source: /Resolution: /Mode: /SN:

 **NOTE**

The OSD features in the table above are for reference only and may differ from the actual display, so the OSD features of the actual display shall prevail.

DHI-LM34-E330C/E330CA

Table 6-2 OSD Menu description

Main Menu	Sub Menu	Option
Game Settings	Standard Mode	Off/On
	RTS/RPG Mode	Off/On
	FPS Arena Mode	Off/On
	MOBA Arena Mode	Off/On
	Adaptive-Sync	Off/On
	Shadow Balance	0-100
	Response Time	Off/Normal/Fast/Ultrafast
	Refresh Rate	Off/On/Position
	Game Crosshair	Off/Crosshair1/Crosshair2/Crosshair3/Crosshair4/Crosshair5/Crosshair6
	Game Time	Off/On:15:00/30:00/45:00/60:00
	Dynamic Brightness	Off/Standard/Expert/Elaboration
	HDR	Off/HDR Standard
	MPRT	Off/On
	Ambient Lighting	Off/On
Picture Settings	Brightness	0-100
	Contrast	0-100
	DCR	Off/On
	Contextual Model	Off/On: Movie Mode/Reading Mode/Night Mode
	Low Blue Light	0-100
	Sharpness	0-5
	Gamma	1.8/2.0/2.2/2.4/2.6/S.curve
	Aspect Ratio	Wide Screen/4:3/1:1/Auto
Color Settings	Warm	Off/On
	Natural	Off/On
	Cool	Off/On
	User1	Off/On:0-100(R/G/B)
	User2	Off/On:0-100(R/G/B)
	User3	Off/On:0-100(R/G/B)
	Hue	0-100(R/G/B/C/M/Y)
	Saturation	0-100(R/G/B/C/M/Y)

Main Menu	Sub Menu	Option
PIP/PBP	PIP/PBP Mode	Off/PIP Mode/PBP 2Win 1:1
	Sub-Signal Source	DP1/DP2/HDMI1/HDMI2
	Audio Source	Auto/DP1/DP2/HDMI1/HDMI2
	PIP Position	TopRight/TopLeft/BottomRight/BottomLeft
	PIP Size	Small/Medium/Large
	Window Swap	Off/On
OSD Settings	Language	简体中文/English/한국어 /عربي/Portugues do Brasilazil/Deutsch/Nederland /Suomi/Français/Ελληνικά/Indonesia/Italiano/日本語/Malaysia/Polskie/Português/Русский/Español/ไทย/Українська/Tiếng Việt/繁体中文/Türkçe
	OSD Time Out	5-60
	OSD H-Position	0-100
	OSD V-Position	0-100
	OSD Transparency	0-5
	Hotkey1 Setting	Brightness/Contrast/Volume/Mute/Shadow Balance/Game Crosshair/Refresh Rate/Game Time/Contextual Model/PIP/PBP Mode/Input Signal /Dynamic Brightness/HDR
	Hotkey2 Setting	
	Hotkey3 Setting	
OSD Lock	Off/On	
Other Settings	Input Signal	Auto/DP1/DP2/HDMI1/HDMI2
	Volume	0-100
	Mute	Off/On
	Auto Power	Off/On
	Eyeshield Remind	Off/On
	Reset	No/Yes
	Information	Input Source: /Resolution: /Mode: /HDR Ver:

 **NOTE**

The OSD features in the table above are for reference only and may differ from the actual display, so the OSD features of the actual display shall prevail.

7.Product Specifications

Table 7-1 Product specifications

Product model		DHI-LM30-E330C	DHI-LM30-E330CA	DHI-LM34-E330C	DHI-LM34-E330CA
Screen Size		30"		34"	
Aspect Ratio		21:9		21:9	
Viewing Angle		178°(H) / 178°(V)		178°(H) / 178°(V)	
Contrast ratio		3000:1 (TYP)		3000:1 (TYP)	
Colors		16.7M		16.7M	
Resolution		2560x1080		3440x1440	
Maximum refresh rate		200Hz		165Hz	
Product Dimensions	Without base	701.1x317.6x121.7mm		808.7x363.3x129.6mm	
	Lifting base With base	701.1x399.5x196.9mm	701.1x536.3x269.3mm	808.7x457.5x245.1mm	808.6x513.5x245.6mm
speaker		No		No	
Height range		No	115±5mm	No	100±5mm
Rotation angle		No	±25°(±2.0°)	No	±20°(±2.0°)
Vertical angle		No		No	
Tilting angle		Forward tilting: -5° ± 2° Backward tilting: 20° ± 2°		Forward tilting: -5° ± 2° Backward tilting: 15° ± 2°	Forward tilting: -5° ± 2° Backward tilting: 20° ± 2°
Environmental conditions	Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)			
	Storage	Temperature: -20°~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)			

Appendix 1 Troubleshooting

Appendix Table 1-1 FAQ

Faults occurring	Possible solutions
The power indicator light is not on	<ul style="list-style-type: none"> • Check if the power is on. • Check if the power cord is connected.
Impossible plug-and-play	<ul style="list-style-type: none"> • Check if the function of plug-and-play of the device is compatible with PC. • Check if the display card is compatible with the plug-and-play function.
Dimming picture	<ul style="list-style-type: none"> • Adjust brightness and contrast.
Flickering picture or picture with ripples	<ul style="list-style-type: none"> • There may be electrical appliances or equipment with electronic disturbance.
The power indicator light is on (flickering),but the monitor has no pictures.	<ul style="list-style-type: none"> • Check if the PC power is on. • Check if the PC display card is inserted properly. • Check if the signal cable of the monitor is correctly connected with the PC. • Check the signal cable plug of the monitor and make sure every pin has no bending. • Observe the indicator light by pressing the Caps Lock key on the PC keyboard and check if the PC is working.
Color shortage (red, green and blue)	<ul style="list-style-type: none"> • Check the signal cable of the monitor and make sure every pin has no bending.
The picture is not in the middle, or the size is not right	<ul style="list-style-type: none"> • Hot key(AUTO)
Picture with color difference (white looks not white)	<ul style="list-style-type: none"> • Adjust RGB color or reselect color temperature.
Screen font blur under VGA signal	<ul style="list-style-type: none"> • Select the "E" to automatically adjust the image.
Screen color error under VGA signal	<ul style="list-style-type: none"> • Select "Auto color" in OSD to correct under the white output screen.

 **NOTE**

The above workarounds are for reference only. If you have any problems, please contact the after-sales service center or find a professional to help.

Appendix 2 Cybersecurity Recommendations

Cybersecurity is more than just a buzzword: it's something that pertains to every device that is connected to the internet. IP video surveillance is not immune to cyber risks, but taking basic steps toward protecting and strengthening networks and networked appliances will make them less susceptible to attacks. Below are some tips and recommendations from Dahua on how to create a more secured security system.

Mandatory actions to be taken for basic device network security:

1. Use Strong Passwords

Please refer to the following suggestions to set passwords.

- The length should not be less than 8 characters.
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols.
- Do not contain the account name or the account name in reverse order.
- Do not use continuous characters, such as 123, abc, etc.
- Do not use overlapped characters, such as 111, aaa, etc.

2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your device (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the device is connected to the public network, it is recommended to enable the "auto-check for updates" function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

"Nice to have" recommendations to improve your device network security:

1. Physical Protection

We suggest that you perform physical protection to device, especially storage devices. For example, place the device in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable device (such as USB flash disk, serial port), etc.

2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

3. Set and Update Passwords Reset Information Timely

The device supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024–65535, reducing the risk of outsiders being able to guess which ports you are using.

6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

7. MAC Address Binding

We recommend you to bind the IP and MAC address of the gateway to the device, thus reducing the risk of ARP spoofing.

8. Assign Accounts and Privileges Reasonably

According to business and management requirements, reasonably add users and assign a minimum set of permissions to the.

9. Disable Unnecessary Services and Choose Secure Modes

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

10. Audio and Video Encrypted Transmission

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

11. Secure Auditing

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check device log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

12. Network Log

Due to the limited storage capacity of the device, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

13. Construct a Safe Network Environment

In order to better ensure the safety of device and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.
- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the network isolation effect.
- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.
- Enable IP/MAC address filtering function to limit the range of hosts allowed to access the device.

More information

Please visit Dahua official website security emergency response center for security announcements and the latest security recommendations.

ENABLING A SAFER SOCIETY AND SMARTER LIVING

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No.1399, Binxing Road, Binjiang District, Hangzhou, P. R. China | Website: www.dahuasecurity.com | Postcode: 310053

Email: overseas@dahuatech.com | Fax: +86-571-87688815 | Tel: +86-571-87688883