

低温度 高性能

安装说明

Peerless Assassin 120 VISION 系列

！安装前请先去除铜底保护膜

www.thermalright.com

配件清单

AMD AM4/AM5

移除AMD原装塑胶支架，保留背板,使用AM4/AM5螺丝将支架锁紧到主板原配背板

INTEL 115X/1200

将背板【F】推到115X位置放置在主板背面,然后正面放置胶柱【H】,扣具【E】,再用螺丝【I】固定住扣具。

INTEL 1700/1851


将背板【F】推到1851/1700位置放置在主板背面,然后正面放置胶柱【N】,扣具【E】,再用螺丝【I】固定住扣具。

风扇接线

将风扇4针PWM接头插入主板CPU_FAN插座,如果使用双风扇,请使用Y型转接线。

液晶屏接线

- 液晶屏的供电和数据通信传输均由主板 9针USB接口提供。软件安装前请确认接线完整
- 软件可在官网下载: <https://www.thermalright.com.cn/support/download/> 解压并双击安装程序安装
- 桌面双击软件快捷方式图标运行软件
- 本液晶屏的实时数据监控/数据传输/开启关闭等功能均由软件控制。安装完成默认随电脑开机启动,并在任务栏常驻后台,请勿关闭/强制退出。



低温度 高性能

INSTALLATION GUIDE

Peerless Assassin 120 VISION Series

Please remove protective sticker before install

www.thermalright.com

Parts List

AMD AM4/AM5

Remove AMD plastic brackets, KEEP the backplate, install AM4/AM5 metal brackets on AM4/AM5 spacers with AM4/AM5 screws.

INTEL 115X/1200

Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA115X/1200 spacer from front side, install intel brackets on spacers with intel screws.

INTEL 1700/1851

Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA1851/1700 spacer from front side, install intel brackets on spacers with intel screws.

Fan Wiring

Connect 4 pin PWM fan cable to motherboard CPU_FAN header, use Fan Y-Cable to sync fan speed for dual fan setup.

LED Display Wiring

- Check USB cable connection between motherboard 9 pin USB2.0 socket and Led display.
- Download software at: <https://www.thermalright.com.cn/support/download/> Unzip setup file and start install by double click setup.
- After install completed, double click shortcut icon on desktop to run software.
- All functions on Led screen are controlled by software, and software will startup at OS boot. Please do not exit the program.