



SuperServer®
SYS-222H-TN

USER'S MANUAL

Revision 1.0b (MNL-2717)

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Note: For the most up-to-date version of this manual, see our website at <https://www.supermicro.com>.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See <https://www.dtsc.ca.gov/hazardouswaste/perchlorate>".



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to <https://www.P65Warnings.ca.gov>.



AVERTISSEMENT : Ce produit peut vous exposer à des agents chimiques, y compris le plomb, identifié par l'État de Californie comme pouvant causer le cancer, des malformations congénitales ou d'autres troubles de la reproduction. Pour de plus amples informations, prière de consulter <https://www.P65Warnings.ca.gov>.

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0b

Release Date: September 23, 2025

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2025 by Super Micro Computer, Inc.
All rights reserved.

Published in the United States of America

Preface

About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the SYS-222H-TN server. Installation and maintenance should be performed by certified service technicians only.

Notes

For your system to work properly, follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: <https://www.supermicro.com/support/manuals>
- Product drivers and utilities: <https://www.supermicro.com/wdl>
- Product safety info: https://www.supermicro.com/about/policies/safety_information.cfm
- A secure data deletion tool designed to fully erase all data from storage devices can be found on our website:
https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility
- Frequently Asked Questions: <https://www.supermicro.com/FAQ/index.php>
- If you still have questions after referring to our FAQs, contact our support team. Region-specific Technical Support email addresses can be found at: "[Contacting Supermicro](#)" on page 14
- If you have any feedback on Supermicro product manuals, contact our writing team at: Techwriterteam@supermicro.com

This manual may be periodically updated without notice. Check the Supermicro website for possible updates to the manual revision level.

Conventions Used in the Manual

Special attention should be given to the following symbols for proper installation and to prevent damage done to the components or injury to yourself.



Warning! Indicates important information given to prevent equipment/property damage or personal injury.



Warning! Indicates high voltage may be encountered while performing a procedure.

Important: Important information given to ensure proper server installation or to relay safety precautions.

Note: Additional information given to differentiate various models or to provide information for proper server setup.

Contents

Contacting Supermicro	14
Chapter 1: Introduction	15
1.1 Overview	16
1.2 System Features	18
Front View	18
Control Panel	20
Rear View	21
1.3 System Architecture	23
Main Components	23
System Block Diagram	24
System PCIe Lane Distribution	25
1.4 Motherboard Quick Reference	27
Motherboard Layout	27
Quick Reference Table	28
Motherboard Features	32
Chapter 2: Server Installation	35
2.1 Unpacking the System	36
2.2 Preparing for Setup	37
Choosing a Setup Location	37
Rack Precautions	37
System Precautions	37
Rack Mounting Considerations	38
Ambient Operating Temperature	39
Airflow	39
Mechanical Loading	39
Circuit Overloading	39
Reliable Ground	39
2.3 Installing the Rails	40
Identifying the Rails	40
Releasing the Inner Rail	41
Installing the Inner Rails onto the Chassis	41

Installing the Outer Rails onto the Rack	42
2.4 Installing the Chassis into a Rack	44
Installing the Chassis into a Rack	44
Removing the Chassis from the Rack	45
Chapter 3: Maintenance and Component Installation	47
3.1 Removing Power	49
Removing Power from a Node	49
Removing Power from the System	49
3.2 Accessing the System	50
Removing the Top Cover	50
3.3 Static-Sensitive Devices	52
Precautions	52
3.4 Processor and Heatsink Installation	53
LGA 4710 Socket E2 Processors	53
Processor Top View	53
Overview of the Processor Socket	54
Overview of the Processor Carrier	54
Processor Carriers	55
Overview of the Processor Heatsink Module	56
Installing the Processor	57
Assembling the Processor Heatsink Module	60
Preparing to Install the PHM into the Processor Socket	63
Preparing the Processor Socket for Installation	65
Installing the Processor Heatsink Module	66
Removing the Processor Heatsink Module	69
Installing EVAC Heatsinks (Optional)	73
Installing X14DBM-SP EVAC Heatsinks	73
3.5 Memory Support and Installation	77
Memory Support	77
Intel Xeon 6700-Series Processors with E-Cores	77
Intel Xeon 6700-Series Processors with P-Cores	80
General Guidelines for Optimizing Memory Performance	85
DIMM Installation	86
DIMM Removal	88

3.6 Motherboard Battery Removal and Installation	89
Battery Removal	89
Proper Battery Disposal	89
Battery Installation	89
3.7 Storage Drives	90
Installing Drives	90
Removing a Hot-Swap Drive Carrier from the Chassis	90
Hot-Swap for NVMe Drives	90
Ejecting a Drive	91
Replacing a Drive	91
3.8 Boot Drives	92
Installing M.2 Solid State Drives on Motherboard	92
Installing M.2 SSDs	92
3.9 System Cooling	94
Fans	94
Changing a System Fan	94
Air Shrouds	95
Air Shroud for Memory (CPU1/2)	95
3.10 Expansion Cards	97
Expansion Card Slot Configurations	97
Installing Expansion Cards	98
3.11 AIOM Cards	100
Installing AIOMs	100
3.12 Cable Routing Diagrams	102
SYS-222H-TN Storage Cables - NVMe	102
SYS-222H-TN Storage Cables - SAS/SATA	103
PCIe Cables - PCIe x8 Expansion Card Slot Configurations	104
PCIe Cables - PCIe x16 Expansion Card Slot Configurations	105
PCIe Cables - AIOM/OCP 3.0 NIC Slots	107
I/O Board Cable	108
Power Cables	109
3.13 Power Supply	111
Replacing the Power Supply	111

Chapter 4: Motherboard Connections, Jumpers, and LEDs	113
4.1 Power Supply and Power Connections	115
6-Pin Riser Card Power Connectors (JPWR1/JPWR2)	115
8-Pin/16-Pin Backplane/GPU Power Connectors (JPMW1–JPMW4 and JPMW5–JPMW7)	115
Main Server Power Connectors (PSU1/PSU2)	115
Power Supply	116
4.2 Headers and Connections	118
6-pin BMC External I ² C Header	118
Chassis Intrusion	118
Fan Headers	118
Liquid Leak Check Header (JLC1)	118
Low-profile (LP) Slim SAS I/O Connector	119
M.2 Slots	119
MCIO NVMe Connectors	119
NC-SI Connection	119
NVMe SMBus Headers	120
NVMe VPP Bus Connector	120
TPM/Port 80 Header	120
VROC RAID Key Header	121
Control Panel	122
Front Control Panel Header with I ² C	122
Power On and BMC/BIOS Status LED Button	122
UID LED and System_Reset Button Select Jumper	123
UID LED	123
Fail LED (Information LED for OH/FF/PF)	123
LAN1/LAN2 (NIC1/NIC2) LED	124
Storage Drive Activity LED	124
Standby Power LED	125
Root of Trust (RoT) Power LED	125
Standby Power	125
Power Fail LED Indicators	125
FP USB Power	126
Front Control Panel Header 2	126
4.3 Rear I/O Connectors/Ports	127

Advanced I/O Module (AIOM) for I/O Support	127
AIOM Sideband Connector (JAIOMSB1)	127
BMCLAN/USB/VGA/COM Slot (JIO1)	127
Universal Serial Bus (USB) 3.2 Header	127
VGA Connection Ports	128
4.4 Jumper Settings	129
CMOS Clear	129
UID LED and System_Reset Button Select Jumper	130
4.5 LED Indicators	131
BMC Heartbeat LED	131
BMC LAN LEDs	131
Onboard Power LED	131
Unit ID (UID) LED	132
Chapter 5: Software	133
5.1 Microsoft Windows OS Installation	134
Installing the OS	134
5.2 Driver Installation	136
5.3 BMC	138
BMC ADMIN User Password	138
Logging into the BMC	138
Logging into the BMC	138
Chapter 6: Optional Components	139
6.1 Storage Protocols Supported	141
6.2 Configuration Ordering Information	142
SYS-222H-TN Drive Bay Configuration Options - 8 Drive Bays	142
SYS-222H-TN Drive Bay Configuration Options - 16 Drive Bays	143
SYS-222H-TN Drive Bay Configuration Options - 24 Drive Bays	144
SYS-222H-TN PCIe Slot Configuration Options - Slot 1-2	146
SYS-222H-TN PCIe Slot Configuration Options - Slot 3-4	147
SYS-222H-TN PCIe Slot Configuration Options - Slot 5-8	148
SYS-222H-TN AIOM/OCP 3.0 NIC Slot A2 Option	149
6.3 Power Supply Configurations	151
6.4 Cable Management Arm	152
Installing the Cable Management Arm	152

Removing the Cable Management Arm	153
6.5 TPM Security Module	154
6.6 Intel Virtual RAID on CPU (VROC)	155
Requirements and Restrictions	155
Supported SSDs and Operating Systems	155
Additional Information	156
Hardware Key	156
Configuring Intel VMD	156
Configuring VMD Manually	157
Intel VMD BIOS Settings for X14 Hyper-SP Systems	158
Creating NVMe RAID Configurations	163
Status Indications	165
Hot-Swap Drives	166
Hot-unplug	166
Hot-plug	166
Related Information Links	166
6.7 GPUs	167
Installing GPUs	167
Storing the Air Blocks for 1U GPU Air Shrouds	170
Air Shroud MCP-310-82940-0N (top removed)	171
Air Shroud MCP-310-82941-0N (top removed)	171
Chapter 7: Troubleshooting and Support	173
7.1 Online Resources	174
Direct Links for the SYS-222H-TN System	174
Direct Links for General Support and Information	174
7.2 Baseboard Management Controller (BMC)	175
7.3 Troubleshooting Procedures	176
Before Power On	176
No Power	176
No Video	176
System Boot Failure	176
Memory Errors	177
Losing the System's Setup Configuration	177
If the System Becomes Unstable	177

7.4 CMOS Clear	179
7.5 Motherboard Battery	180
7.6 Where to Get Replacement Components	181
7.7 Technical Support Procedures	182
Returning Merchandise for Service	182
7.8 Feedback	184
Chapter 8: UEFI BIOS	185
8.1 Introduction	186
Updating BIOS	186
Starting the Setup Utility	186
8.2 Main Setup	188
8.3 Advanced Setup Configurations	190
Boot Feature Menu	190
CPU Configuration Menu	191
Advanced Power Management Configuration Menu	195
CPU P State Control Menu	195
Hardware PM State Control Menu	196
CPU C State Control Menu	197
Package C State Control Menu	197
CPU1 Core Disable Bitmap Menu	198
Chipset Configuration Menu	198
Uncore Configuration Menu	198
Memory Configuration Menu	200
Memory Topology Menu	201
Memory Map Menu	201
Memory RAS Configuration Menu	201
Security Configuration Menu	203
IIO Configuration Menu	209
CPU1 Configuration Menu	210
Intel VT for Directed I/O (VT-d) Menu	211
PCIe Leaky Bucket Configuration Menu	212
Trusted Computing Menu	213
ACPI Settings Menu	213
Super IO Configuration Menu	214

Serial Port 1 Configuration Menu	214
Serial Port 2 Configuration Menu	215
Serial Port Console Redirection Menu	215
Network Stack Configuration Menu	220
MAC:(MAC address)-IPv4 Network Configuration Menu	221
MAC:(MAC address)-IPv6 Network Configuration Menu	221
PCIe/PCI/PnP Configuration Menu	222
HTTP Boot Configuration Menu	224
Supermicro KMS Server Configuration Menu	225
Super-Guardians Configuration Menu	227
TLS Authenticate Configuration Menu	229
Driver Health Menu	230
8.4 Event Logs	231
8.5 BMC	233
System Event Log Menu	233
BMC Network Configuration Menu	234
8.6 Security	237
Secure Boot Menu	238
8.7 Boot	241
8.8 Save & Exit	243
Appendix A: Standardized Warning Statements for AC Systems	245
Warning Definition	245
Installation Instructions	247
Circuit Breaker	249
Power Disconnection Warning	250
Equipment Installation	252
Restricted Area	253
Battery Handling	255
Redundant Power Supplies	256
Backplane Voltage	258
Comply with Local and National Electrical Codes	259
Product Disposal	260
Fan Warning	262
Power Cable and AC Adapter	264

<i>Appendix B: System Specifications</i>	267
Power Supply Options	270
BSMI/RoHS	272

Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: Marketing@supermicro.com (General Information)
Sales-USA@supermicro.com (Sales Inquiries)
Government_Sales-USA@supermicro.com (Gov. Sales Inquiries)
Support@supermicro.com (Technical Support)
RMA@Supermicro.com (RMA Support)
Webmaster@supermicro.com (Webmaster)

Website: <https://www.supermicro.com>

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: Sales_Europe@supermicro.com (Sales Inquiries)
Support_Europe@supermicro.com (Technical Support)
RMA_Europe@supermicro.com (RMA Support)

Website: <https://www.supermicro.nl>

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235 Taiwan (R.O.C)

Tel: +886 (2) 8226-3990

Fax: +886 (2) 8226-3992

Email: Sales-Asia@supermicro.com.tw (Sales Inquiries)
Support@supermicro.com.tw (Technical Support)
RMA@supermicro.com.tw (RMA Support)

Website: <https://www.supermicro.com.tw>

Chapter 1:

Introduction

This chapter provides a brief outline of the functions and features of the SYS-222H-TN system. It is based on the X14DBM-SP motherboard and the CSE-HS219-R000NP chassis.

1.1 Overview	16
1.2 System Features	18
Front View	18
Rear View	21
1.3 System Architecture	23
Main Components	23
System Block Diagram	24
1.4 Motherboard Quick Reference	27
Motherboard Layout	27
Quick Reference Table	28
Motherboard Features	32

1.1 Overview

This chapter provides a brief outline of the functions and features of the SuperServer SYS-222H-TN system. It is based on the X14DBM-SP motherboard and the CSE-HS219-R000NP chassis. The CSE-HS219-R000NP provides up to twenty-four configurable SAS/SATA/NVMe drive bays with an optional front bezel. The X14DBM-SP motherboard provides a flexible number of NVMe ports per CPU via the PCIe MCIO connectors. An overview of the system is listed below.

System Overview	
Motherboard	X14DBM-SP
Chassis	CSE-HS219-R000NP
Processor Support	Supports dual Intel® Xeon® 6 processors (in Socket E2 LGA 4710) with four UPIs (24 GT/s max.) and a thermal design power (TDP) up to 330 W.
Memory	Supports ECC DDR5 memory with speeds up to 6400 MT/s (1DPC) or up to 5200 MT/s (2DPC). (Memory speed/capacity support depends on the processors used in the system.)
Drive Support	Eight 2.5" hot-swap front SAS/SATA/NVMe drive bays, optional configuration for 16 drive bays or 24 SAS/SATA/NVMe drive bays Two M.2 PCIe 5.0 x2 NVMe slots (M-key 2280/22110)
Expansion Slots	Four PCIe 5.0 x16 FH/10.5" L double-width slots One PCIe 5.0 x16 AIOM slot (OCP 3.0 compatible) One PCIe 5.0 x8 AIOM slot (OCP 3.0 compatible) or Eight PCIe 5.0 x8 (in x16) FH/10.5" L slots One PCIe 5.0 x16 AIOM slot (OCP 3.0 compatible) One PCIe 5.0 x8 AIOM slot (OCP 3.0 compatible)
I/O Ports	One RJ45 dedicated BMC LAN port Two USB 3.0 ports (rear) One VGA port
System Cooling	Four 8-cm heavy-duty mid fans with optimal fan speed control Two air shrouds Direct to Chip (D2C) Cold Plate (optional)
Power	1200 / 1600 / 2000 / 2600 W 80Plus Platinum Level
Form Factor	2U Rackmount: 3.5 x 17.3 x 29.73 in. or 88 x 438.4 x 755.2 mm (H x W x D)

Note: A Quick Reference Guide can be found on the product page of the Supermicro website. The following safety models associated with the SYS-222H-TN have been certified as compliant with UL or CSA: HS219-R12X14, HS219-R16X14, HS219-R20X14, and HS219-R26X14.

1.2 System Features

The following views of the system display the main features. Refer to the System Specifications appendix of this manual for additional specifications.

Front View

The illustration below shows the features included on the front of the SYS-222H-TN server.

Note: Two options for the drive bay configuration. Option A: Total 16 bays. Option B: Total 24 bays.



Figure 1-1. SYS-222H-TN Front Views

System Features: Front	
Feature	Description
Control Panel	One control panel (see "Control Panel" on page 20 for details)
Service Tag	Service Tag with BMC Password Reset

Logical Storage Drive Numbers	
Item	Description
0–23	24 hot-swap 2.5" NVMe/SATA3/SAS3* drive bays
*NVMe, SATA3, or SAS3 support requires additional parts in Optional Components.	

Logical Storage Drive Numbers	
Item	Description
0–7 (Default)	8 hot-swap 2.5" NVMe/SATA3/SAS3* drive bays
*NVMe, SATA3, or SAS3 support requires additional parts in Optional Components.	

Control Panel

Power switches and status LEDs are located on the control panel on the front of the SYS-222H-TN server.

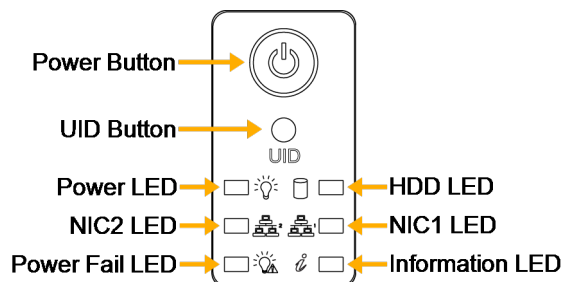


Figure 1-2. Control Panel

Control Panel Features	
Feature	Description
Power Button	The main power button is used to apply or remove power from the power supply to the server. Turning off system power with this button removes the main power but maintains standby power. To perform many maintenance tasks, you must also unplug the system before servicing.
UID Button	Use a pin to press the UID button.
Power LED	Steady on: Power on Blinking at 4 Hz: Checking BIOS/BMC integrity Blinking at 4 Hz and "i" LED is blue: BIOS firmware updating Two blinks at 4 Hz, one pause 2 Hz and "i" LED blue: BMC firmware updating
HDD LED	Indicates activity on a hard drive when flashing.
NIC2 LED	Indicates network activity on LAN port 2 when flashing.
NIC1 LED	Indicates network activity on LAN port 1 when flashing.
Power Fail LED	Indicates a power supply module has failed.
Universal Information LED	See table below for details.

Information LED	
Color, Status	Description
Red, solid	An overheat condition has occurred.
Red, blinking at 1 Hz	Fan failure; check for an inoperative fan.

Information LED	
Color, Status	Description
Red, blinking at 0.25 Hz	Power failure; check for an inoperative power supply.
Red, solid with Power LED blinking green	Fault detected.
Blue and red, blinking at 10 Hz	Recovery mode.
Blue, solid	UID has been activated locally to locate the server in a rack environment.
Blue, blinking at 1 Hz	UID has been activated via BMC to locate the server in a rack environment.
Blue, blinking at 2 Hz	BMC is resetting.
Blue, blinking at 4 Hz	BMC is setting factory defaults.
Blue, blinking at 10 Hz with Power LED blinking green	BMC/BIOS firmware is updating.

Rear View

The illustration below shows the features included on the rear of the SYS-222H-TN server. Power supply modules display status lights.

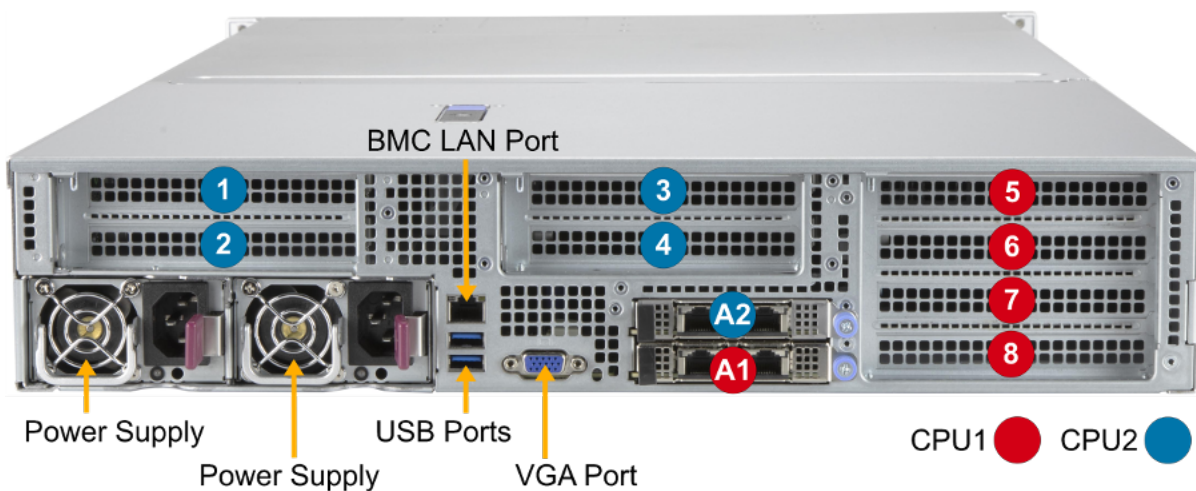


Figure 1-3. SYS-222H-TN Rear View

System Features: Rear	
Feature	Description
Power Supplies	Two redundant power supply modules, PWS1 on the left, PWS2 on the right
USB Ports	Two USB 3.0 ports

System Features: Rear	
Feature	Description
BMC LAN Port	One RJ45 dedicated BMC LAN port
VGA	One VGA port
A1	AIOM/OCP NIC 3.0 Slot
A2	Optional AIOM/OCP NIC 3.0 Slot
1–4	<ol style="list-style-type: none"> 1. PCIe 5.0 x8 (in x16) slot or PCIe 5.0 x16 slot (FH, 10.5" L) 2. PCIe 5.0 x8 (in x16) slot (FH, 10.5" L) 3. PCIe 5.0 x8 (in x16) slot or PCIe 5.0 x16 slot (FH, 10.5" L) 4. PCIe 5.0 x8 (in x16) slot (FH, 10.5" L)
5–8	<ol style="list-style-type: none"> 5. PCIe 5.0 x8 (in x16) slot or PCIe 5.0 x16 slot (FH, 10.5" L) 6. PCIe 5.0 x8 (in x16) slot (FH, 10.5" L) 7. PCIe 5.0 x8 (in x16) slot or PCIe 5.0 x16 slot (FH, 10.5" L) 8. PCIe 5.0 x8 (in x16) slot (FH, 10.5" L)
Note: PCIe slots (1-8) are optional on the SYS-222H-TN system.	

Power Supply Indicators		
Power Supply Condition	Green LED	Amber LED
No AC power to power supply	Off	Off
Power supply critical events causing a shutdown/failure/OCP/OVP/Fan Fail/OTP/UVP	Off	On
Power supply warning events where the power supply continues to operate; high temperature; over voltage; under voltage, etc.	Off	1 Hz Blinking
AC present only 12 VSB ON (PS OFF)	1 Hz Blinking	Off
Output ON and OK	On	Off
AC cord unplugged and in redundant mode	Off	On

1.3 System Architecture

This section covers the locations of the system's main components and provides a system block diagram.

Main Components

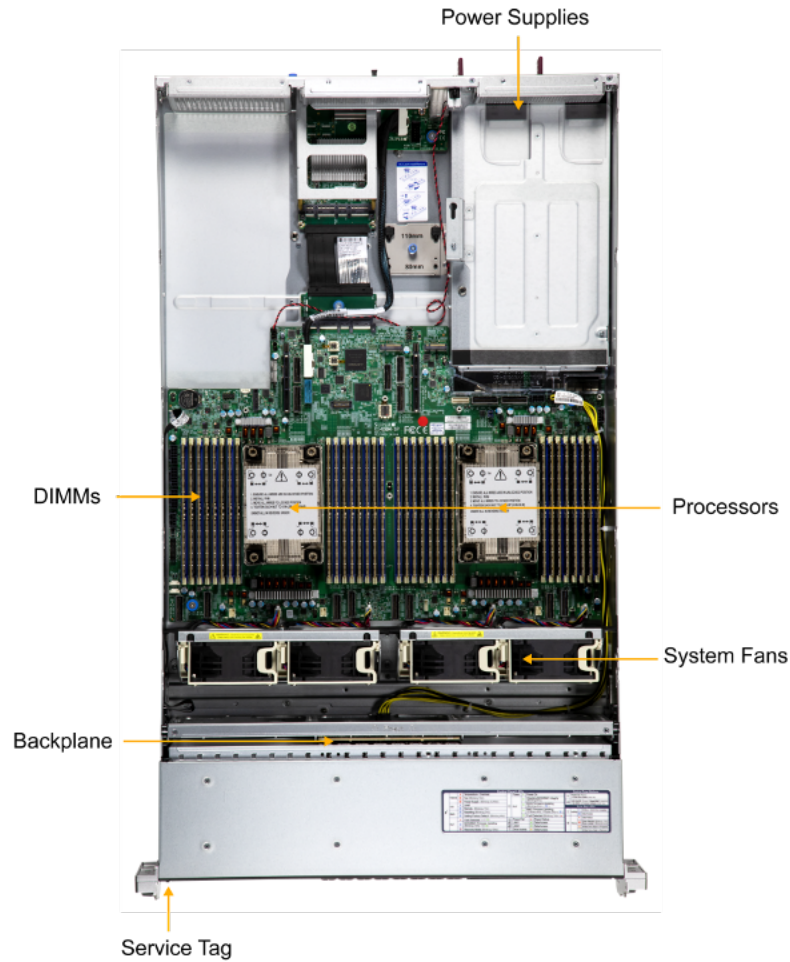


Figure 1-4. Main Component Locations

System Features: Top	
Feature	Description
Power Supply	Dual redundant modules
DIMM Slots	32 DIMM memory slots
Processors	Dual Intel® Xeon® 6 processors (in Socket E2 LGA 4710) with four UPIs (24 GT/s max.) and a thermal design power (TDP) up to 330 W.
System Fans	Four 8-cm mid fans

System Features: Top	
Feature	Description
Service Tag	Service tag with serial number / BMC ADMIN password
Backplane	Eight SAS3/SATA3/NVMe5 storage device backplane, BPN-NVME5-HS219N-S8 (configurations supporting up to three backplanes installed)

System Block Diagram

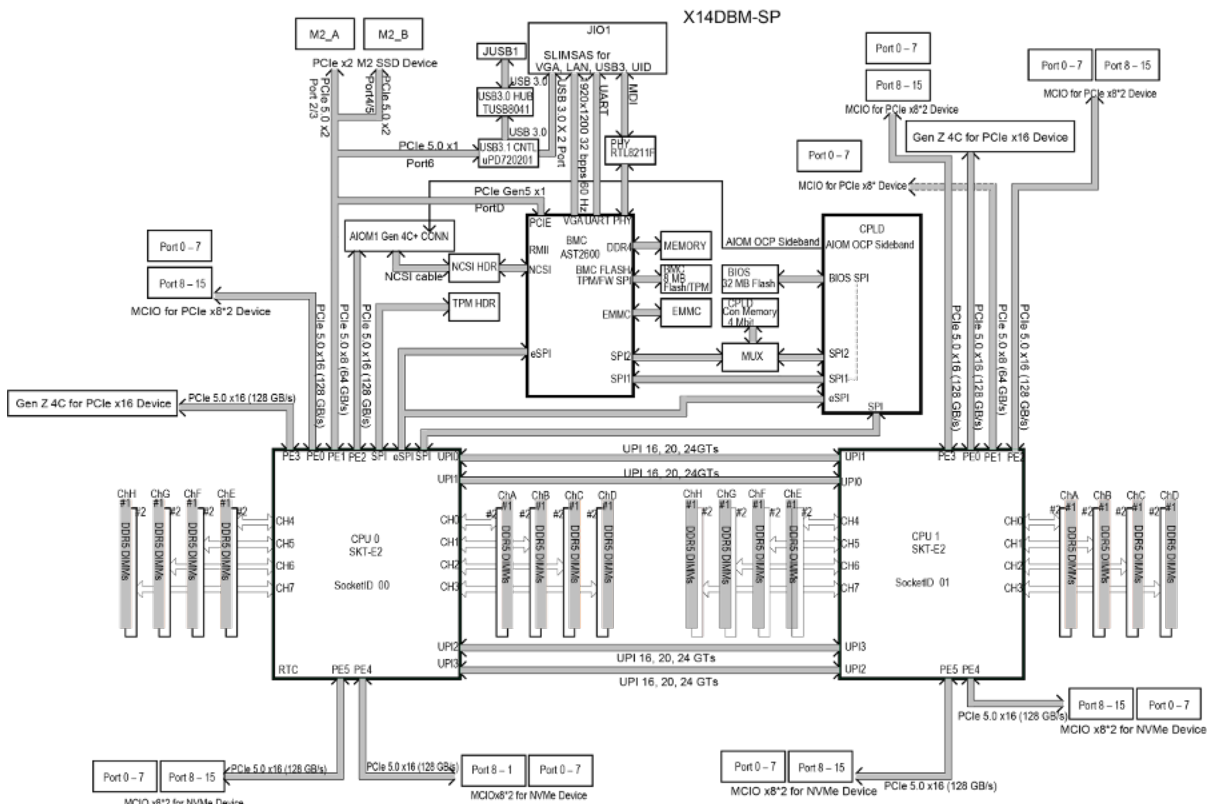


Figure 1-5. System Block Diagram

System PCIe Lane Distribution

SYS-222H-TN PCIe Lane Distribution					
CPU	Port	PCIe	Motherboard Connector	Primary PCIe Lane Assignment	Alternate PCIe Lane Assignment
CPU0	PE0	x8	JPCIE2A1	PCIe Expansion Slot 5, 6	N/A
		x8	JPCIE2B1		
	PE1	x8 ¹	M.2-C1 (x2), M.2-C2 (x2)	Internal 2x NVMe M.2 Slots	N/A
	PE2	x16	JAIOM1	AIOM/OCP 3.0 NIC Slot A1	N/A
	PE3	x16	JPCIE1	NVMe Drive Bays 0, 1, 2, 3	PCIe Expansion Slot 7, 8
	PE4	x8	P1_NVME0	NVMe Drive Bays 4,5	N/A
		x8	P1_NVME1	NVMe Drive Bays 6,7	N/A
	PE5	x8	P1_NVME2	NVMe Drive Bays 8,9	N/A
x8		P1_NVME3	NVMe Drive Bays 10,11	N/A	
CPU1	PE0	x16	JPCIE5	PCIe Expansion Slot 3, 4	N/A
	PE1	x8	JPCIE3A1	NVMe Drive Bays 12,13	N/A
	PE2	x8	JPCIE6A1	PCIe Expansion Slot 1, 2	N/A
		x8	JPCIE6B1		N/A
	PE3	x8	JPCIE4A1	AIOM/OCP 3.0 NIC Slot A2	N/A
		x8	JPCIE4B1	NVMe Drive Bays 14, 15	N/A
	PE4	x8	P2_NVME0	NVMe Drive Bays 16, 17	N/A
		x8	P2_NVME1	NVMe Drive Bays 18, 19	N/A
PE5	x8	P2_NVME2	NVMe Drive Bays 20, 21	N/A	
	x8	P2_NVME3	NVMe Drive Bays 22, 23	N/A	

¹Some PCIe lanes from this port are routed directly to onboard devices (USB controller & BMC)

1.4 Motherboard Quick Reference

For details on the X14DBM-SP motherboard layout and other quick reference information, refer to the content below.

Motherboard Layout

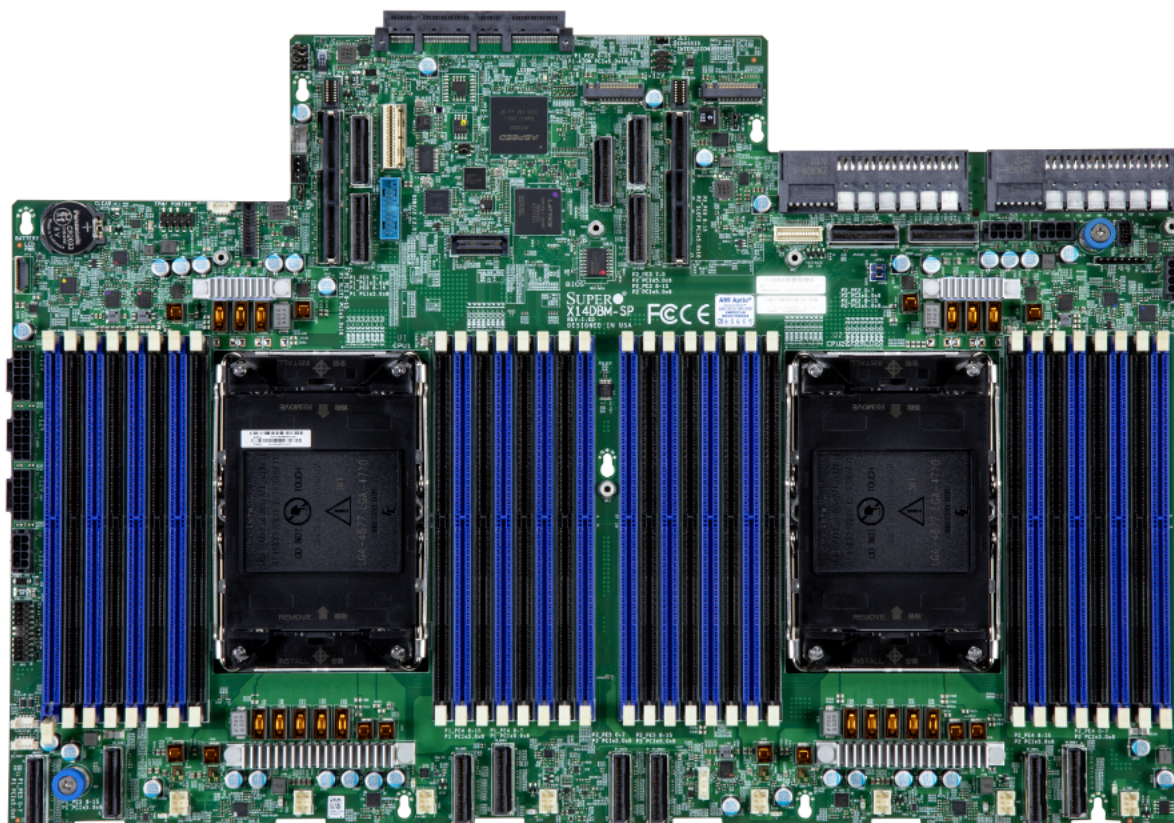


Figure 1-6. X14DBM-SP Motherboard Image

Note: All graphics shown in this manual were based upon the latest PCB revision available at the time of publication of the manual. The motherboard you received may or may not look exactly the same as the graphics shown in this manual.

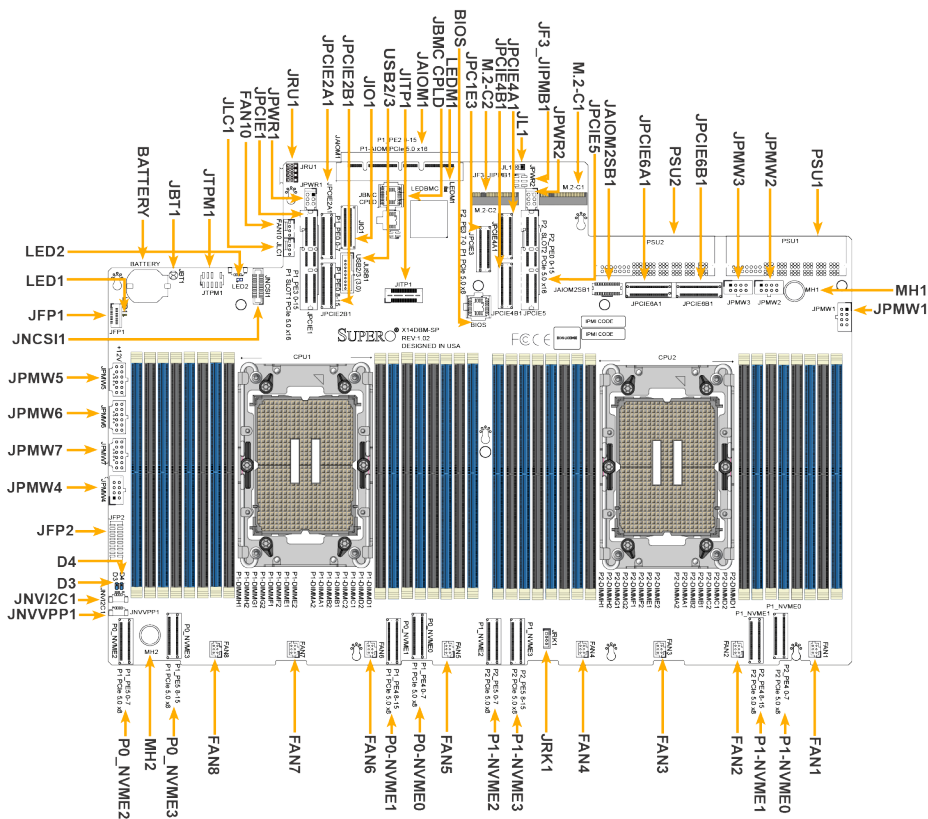


Figure 1-7. X14DBM-SP Motherboard Layout

Notes:

- For detailed information on jumpers, connectors, and LED indicators, see ["Maintenance and Component Installation"](#) on page 47.
- "■" indicates the location of pin 1.
- "MH" indicates the location of a mounting hole.
- Components not documented are for internal testing purposes only.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. To avoid possible explosion, do not install the onboard battery upside down.

Quick Reference Table

Jumper	Description	Jumper Setting
JBT1	CMOS Clear	Open (Normal)

LED	Description	Status
LED1 (LEDPWR)	Onboard Power LED	LED On: Onboard Power On

LED	Description	Status
LED2 (UID-LED)	Unit Identifier (UID) LED	Solid Blue: Unit Identified
LEDM1 (LEDBMC)	BMC Heartbeat LED	Blinking Green: BMC Normal (Active) Solid Green: (During BMC Reset or during a Cold Reboot)

Connector	Description
Battery (BT1)	Onboard Battery
FAN1–FAN8, FAN10	Eight 6-pin cooling fan headers (FAN1–FAN 8) and one 4-pin cooling fan header (FAN10)
JAIOM1 (P1_PE2 0–15)	Supermicro Advanced Input/Output Module (AIOM) PCIe 5.0 x16 connector for rear I/O support
JAIOMSB1	Supermicro Advanced Input/Output Module (AIOM2) sideband connector
JJF3_JIPMB1 (JIPMB1)	6-pin BMC external I ² C header
JFP1	Front Control Panel header
JFP2	Front Control Panel header with USB and VGA support
JIO1 (BMCLAN/USB/VGA)	Low-profile (LP) Slim SAS I/O connector used for dedicated BMC LAN/USB/VGA connections
JL1	Chassis Intrusion header
JLC1	Liquid Leak Check Header
JPCIE1 (P1_PE3 0–15)	(P1-SLOT1) PCIe 5.0 x16 slot supported by CPU1
JPCIE2A1 (P1_PE0 0–7)	(P1) PCIe 5.0 x8 MCIO connector supported by CPU1
JPCIE2B1 (P1_PE0 8–15)	(P1) PCIe 5.0 x8 MCIO connector support by CPU1
JPCIE3	(P1) PCIe 5.0 x8 MCIO connector support by CPU1
JPCIE4A1 (P2_PE3 7–0)	(P2) PCIe 5.0 x8 MCIO connector supported by CPU2

Connector	Description
JPCIE4B1 (P2_PE3 8–15)	(P2) PCIe 5.0 x8 MCIO connector supported by CPU2
JPCIE5 (P2_PE0 0–15)	(P2 SLOT2) PCIe 5.0 x16 slot supported by CPU2
JPCIE6A1 (P2_PE2 0–7)	(P2) PCIe 5.0 x8 MCIO connector supported by CPU2
JPCIE6B1 (P2_PE2 8–15)	(P2) PCIe 5.0 x8 MCIO connector supported by CPU2
JPMW1–JPMW4	+12 V 8-pin power connectors used for system backplane/GPU devices (via cables)
JPMW5–JPMW7	+12 V 16-pin power connectors used for system backplane/GPG devices (via cables)
JPWR1–JPWR2	+12 V 6-pin power connectors for riser card use
PSU1/PSU2	Power Supply Unit1/Unit2 for system power use (for 1U systems) (see the first note)
JNCSI	NC-SI (Network Controller Sideband Interface) connector (see the second note)
JNVI2C1	NVMe SMBus I ² C header used for PCIe SMBus clock and data connections with hot-plug support
JNVVPP1	NVMe VPP SMBus (System Management Bus) with hot-plug support
JTPM1	Trusted Platform Module/Port 80 connector
M.2-C1/M.2-C2	PCIe 5.0 x2 slots for PCIe device use (with M-Key 2280, and 22110 supported)
P0_NVME 0 (P1_PE4 0–7)	P1_P PCIe 5.0 x8 MCIO connectors supported by CPU1 with NVMe Connections 0–7
P0_NVME1 (P1_PE4 8–15)	P1_P PCIe 5.0 x8 MCIO connectors supported by CPU1 with NVMe Connections 8–15
P0_NVME2 (P1_PE5 0–7)	P1_P PCIe 5.0 x8 MCIO connectors supported by CPU1 with NVMe Connections 0–7

Connector	Description
P0_NVME3 (P1_PE5 8–15)	P1_PClE 5.0 x8 MCIO connectors supported by CPU1 with NVMe Connections 8–15
P1_NVME0 (P2_PE4 0–7)	P2_PClE 5.0 x8 MCIO connectors supported by CPU2 with NVMe Connections 0–7
P1_NVME1 (P2_PE4 8–15)	P2_PClE 5.0 x8 MCIO connectors supported by CPU2 with NVMe Connections 8–15
P1_NVME2 (P2_PE5 0–7)	P2_PClE 5.0 x8 MCIO connectors supported by CPU2 with NVMe Connections 0–7
P1_NVME3 (P2_PE5 8–15)	P2_PClE 5.0 x8 MCIO connectors supported by CPU2 with NVMe Connections 8–15
USB2/3 (3.0) (JUSB1)	Rear USB header with support for two USB 3.2 Gen1 ports
VROC RAID Key (JRK1)	Intel VROC RAID key header for NVMe RAID support (see the third note)

Notes:

- The tables below represent the power supplies that support the main power supply units (PSU1/PSU2) in Supermicro Hyper SuperServer SYS-222H-TN.
 - For Hyper Systems:

PWS-2K07A-1R
PWS-1K63A-1R
PWS-2K63A-1R
PWS-1K24A-1R

- For details on how to configure Network Interface Card (NIC) settings, refer to the Network Interface Card Configuration User's Guide posted on our website under the link: <https://www.supermicro.com/support/manuals>.
- For detailed instructions on how to configure VROC RAID settings, refer to the VROC RAID Configuration User's Guide posted on the web page under the link: <https://www.supermicro.com/support/manuals>.

Motherboard Features

Motherboard Features
Processor
<ul style="list-style-type: none"> Supports dual Intel® Xeon® 6 processors (in Socket E2 LGA 4710) with four UPIs (24 GT/s max.) and a thermal design power (TDP) up to 330 W
Memory
<ul style="list-style-type: none"> Supports ECC DDR5 memory with speeds up to 6400 MT/s (1DPC) or up to 5200 MT/s (2DPC). (Memory speed/capacity support depends on the processors used in the system.)
DIMM Size
<ul style="list-style-type: none"> 32 GB, 64 GB, 96 GB, and 128 GB <p>Note: For the latest processor/memory updates, please refer to our website at https://www.supermicro.com/en/products/motherboards.</p>
Expansion Slots
<ul style="list-style-type: none"> Up to 88 PCIe 5.0 lanes (PCIe or CXL) per processor, including: <ul style="list-style-type: none"> Two GenZ 4C CONN for two PCIe 5.0 x16 One GenZ 4C+ for two AIOM (Advanced IO Module) 15 MCIO CONN for eight PCIe 5.0 X8 Two M.2 M-key PCIe 5.0 x2 (with support for 2280 and 22110 form factor) Two USB 3.1 (Header)/two USB 3.0 (IO Board)
Baseboard Management Controller (BMC)/Network
<ul style="list-style-type: none"> ASPEED AST2600 BMC One dedicated BMC LAN/VGA (via AST2600 BMC HW RoT)
Graphics
<ul style="list-style-type: none"> Graphics controller and VGA support via ASPEED AST2600 BMC
I/O Devices
<ul style="list-style-type: none"> One VGA connection header (JFP2): used for dedicated VGA via BMC and for front accessible VGA connection One LP (low-profile) SlimSAS x8 I/O connector (JIO1): used for I/O mezzanine card from a cable to provide VGA/COM/USB*2/RJ45 (dedicated BMC LAN) connections

Motherboard Features
Peripheral Devices
<ul style="list-style-type: none"> • Two USB 3.0 ports on the I/O riser board via a cable • One USB 3.1 header on the motherboard with support for two USB connections
BIOS
<ul style="list-style-type: none"> • AMI SPI BIOS® • NAND Flash 64/256 Mb support • SPI dual/quad speed control, RTC (Real Time Clock) wakeup, riser card auto detection support, IPMIView, SMCIPMITOOL, IPMI CFG, Redundant power supply unit detection, SPM, SUM-OOB/InBand
Power Connections
<ul style="list-style-type: none"> • Two power supply units (PSU1/PSU2) (Main server power) • Two 6-pin 12 V power connectors (JPWR1/JPWR2) (for riser cards) • Four 8-pin 12 V power connectors (JPMW1–JPMW4) (for backplane or GPU devices) • Three 16-pin 12 V power connectors (JPMW5–JPMW7) (for backplane or GPU devices)
Power Management
<ul style="list-style-type: none"> • ACPI power management • S1, S5 support • Power button override mechanism • Power-on mode for AC power recovery • Wake-on-LAN • Power supply monitoring
System Health Monitoring
<ul style="list-style-type: none"> • Onboard voltage monitoring for +3.3 V, +3.3 V Standby, +5 V, +5 V Standby, +12 V, Vcore, Vmem • Onboard temperature monitoring for CPU, GPU, VRM, LAN, system, peripheral, memory, NIC, M.2 SSD, AOM, and NVMe devices • 8 processor switch phase voltage regulator • Processor thermal trip support • Platform Environment Control Interface (PECI)

Motherboard Features
Fan Control
<ul style="list-style-type: none"> • Fan status monitoring via BMC connections • Three cooling zones • Low-noise fan speed control • 6-pin proprietary fans and 4-pin fans supported
System Management
<ul style="list-style-type: none"> • Chassis intrusion header and detection • Server platform service • RoHS support
Firmware Integrity/System Security
<ul style="list-style-type: none"> • Trusted Platform Module (TPM) support • Root of Trust (RoT) support to protect firmware security by detecting critical data corruption, and restoring platform integrity
LED Indicators
<ul style="list-style-type: none"> • Processor/system overheat LED • Power/suspend state indicator LED • Fan-Failed LED • UID/remote UID • HDD activity LED • LAN activity LED • BMC/CPLD firmware LED
Dimensions
10.75" x 17.0" (273.05 mm x 431.80 mm) (L x W) Proprietary

Notes:

- The processor maximum TDP (Thermal Design Power) is subject to chassis and heatsink cooling restrictions, and it also depends on server SKUs. For proper thermal management, check the chassis and heatsink specifications.
- For BMC configuration instructions, refer to the Embedded BMC Configuration User's Guide available at <https://www.supermicro.com/support/manuals>.

Chapter 2:

Server Installation

This chapter provides advice and instructions for mounting your server in a server rack. If your server is not already fully integrated with processors, system memory, etc., refer to ["Maintenance and Component Installation"](#) on page 47 for details on installing those specific components.

Important: Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to printed circuit boards (PCBs), it is important to use a grounded wrist strap, handle all PCBs by their edges, and keep PCBs in anti-static bags when not in use.

2.1 Unpacking the System	36
2.2 Preparing for Setup	37
Choosing a Setup Location	37
Rack Precautions	37
System Precautions	37
Rack Mounting Considerations	38
2.3 Installing the Rails	40
Identifying the Rails	40
Releasing the Inner Rail	41
Installing the Inner Rails onto the Chassis	41
Installing the Outer Rails onto the Rack	42
2.4 Installing the Chassis into a Rack	44
Installing the Chassis into a Rack	44
Removing the Chassis from the Rack	45

2.1 Unpacking the System

Inspect the box the SYS-222H-TN server was shipped in and note if it was damaged in any way. If any equipment appears damaged, file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold the server. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. It will also require a grounded AC power outlet nearby. Be sure to read the precautions and considerations noted in ["Standardized Warning Statements for AC Systems"](#) on page 245.

2.2 Preparing for Setup

The box in which the SYS-222H-TN server was shipped should include the rackmount hardware needed to install it into the rack. Read this section in its entirety before you begin the installation.

Choosing a Setup Location

- The server should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (~25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).
- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.
- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time. Extending two or more simultaneously may cause the rack to become unstable.

System Precautions

- Review the electrical and general safety precautions in "[Standardized Warning Statements for AC Systems](#)" on page 245.
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.

- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the servers closed to maintain proper cooling.

Rack Mounting Considerations



Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.



Avertissement!

Danger d'instabilité. Le rack peut basculer et provoquer des blessures corporelles graves.

Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

Important: To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- If this unit is the only unit in the rack, it should be mounted at the bottom of the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top, placing the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
- Slide rail mounted equipment is not to be used as a shelf or a workspace.
- Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

2.3 Installing the Rails


This section provides information on installing the CSE-HS219-R000NP chassis into a rack unit with the rails provided. There are a variety of rack units on the market, which may mean that the assembly procedure will differ slightly from the instructions provided. You should also refer to the installation instructions that came with the rack unit you are using.

Note: This rail will fit a rack between 26.8" and 36.4" deep.

Identifying the Rails

The CSE-HS219-R000NP chassis package includes two rail assemblies. Each assembly consists of three sections: an inner rail that secures directly to the chassis, an outer rail that secures to the rack, and a middle rail which extends from the outer rail. These assemblies are specifically designed for the left and right side of the chassis and labeled.

Note: Both front chassis rails and the rack rails have a locking tab, which serves two functions. First, it locks the chassis into place when installed and pushed fully into the rack (its normal operating position). In addition, these tabs lock the chassis in place when fully extended from the rack. This prevents the chassis from coming completely out of the rack when pulled out for servicing.

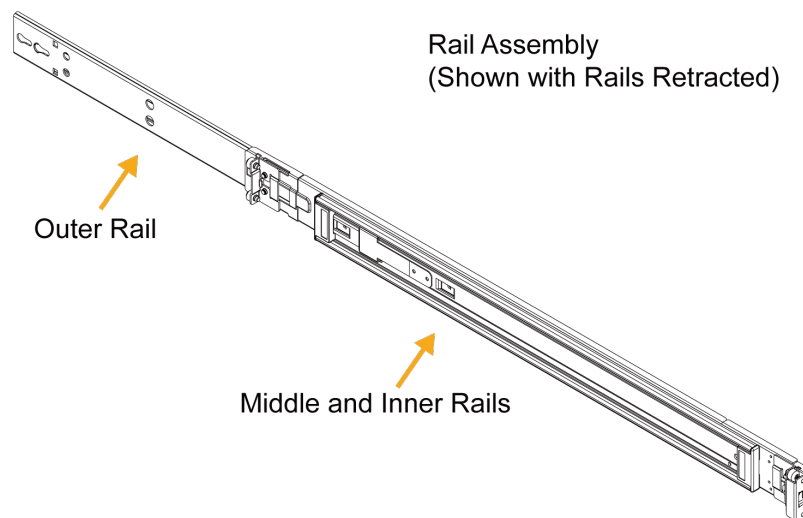

**Figure 2-1. Identifying the Outer, Middle, and Inner Rails
(Left Rail Assembly Shown)**

Releasing the Inner Rail

Each inner rail has a locking latch. This latch prevents the CSE-HS219-R000NP chassis from coming completely out of the rack when the chassis is pulled out for servicing.

To mount the rail onto the chassis, first release the inner rail from the outer rails.

1. Pull the inner rail out of the outer rail until it is fully extended as illustrated below.
2. Press the locking tab down to release the inner rail.
3. Pull the inner rail all the way out.

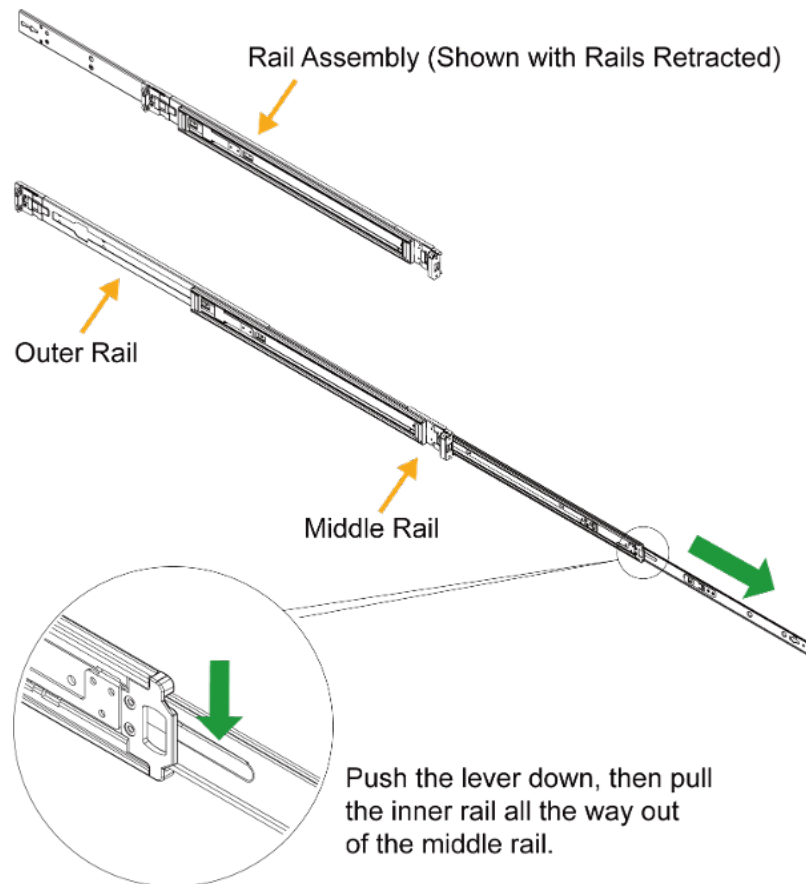


Figure 2-2. Extending and Releasing the Inner Rail

Installing the Inner Rails onto the Chassis

Begin the rack mounting procedure by installing the inner rails to the CSE-HS219-R000NP chassis.

1. Confirm that the left and right inner rails have been correctly identified.
2. Place the inner rail firmly against the side of the chassis, aligning the hooks on the side of the chassis with the holes in the inner rail.
3. Slide the inner rail forward toward the front of the chassis and under the hooks until the quick release bracket snaps into place, securing the rail to the chassis.
4. Optionally, you can further secure the inner rail to the chassis with a screw.
5. Repeat for the other inner rail.

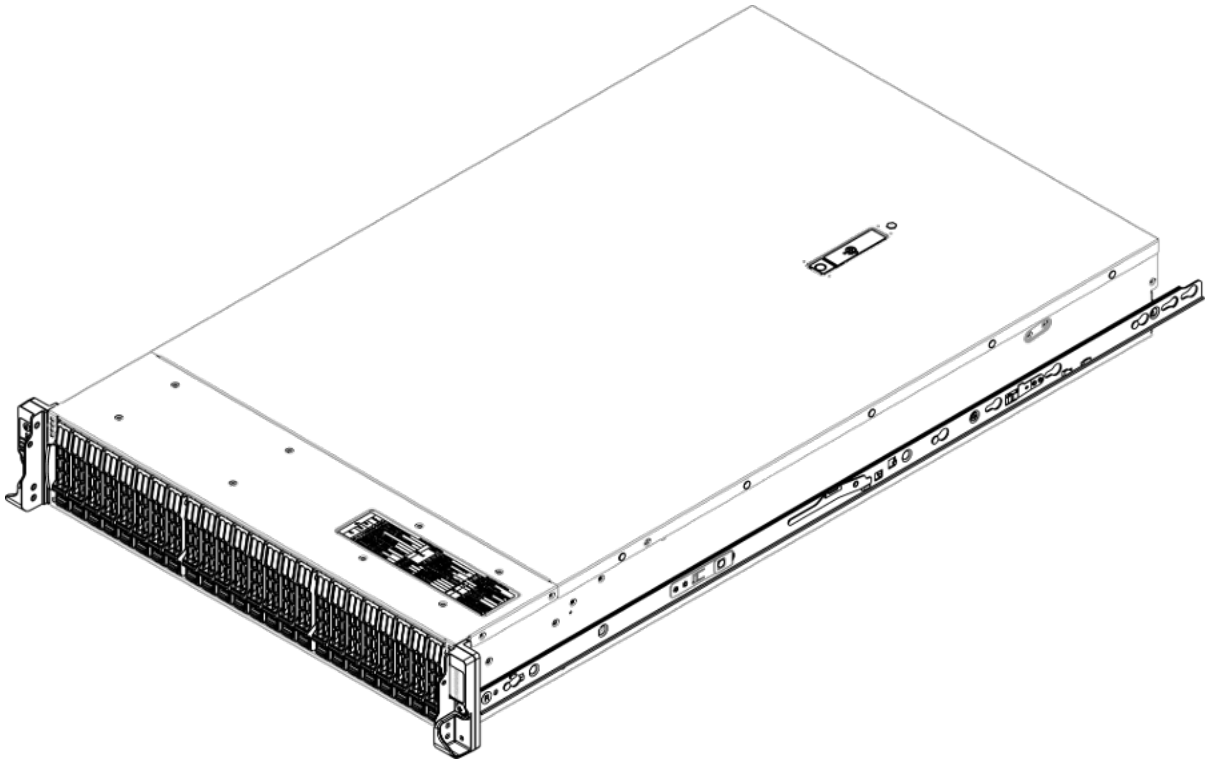


Figure 2-3. Installing the Inner Rails

Important: Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Installing the Outer Rails onto the Rack

1. Press upward on the locking tab at the rear end of the middle rail.
2. Push the middle rail back into the outer rail.
3. Hang the hooks on the front of the outer rail onto the square holes on the front of the rack. If desired, use screws to secure the outer rails to the rack.

4. Pull out the rear of the outer rail, adjusting the length until it just fits within the posts of the rack.
5. Hang the hooks of the rear section of the outer rail onto the square holes on the rear of the rack. Take care that the proper holes are used so the rails are level. If desired, use screws to secure the rear of the outer rail to the rear of the rack.
6. Repeat for the other outer rail.

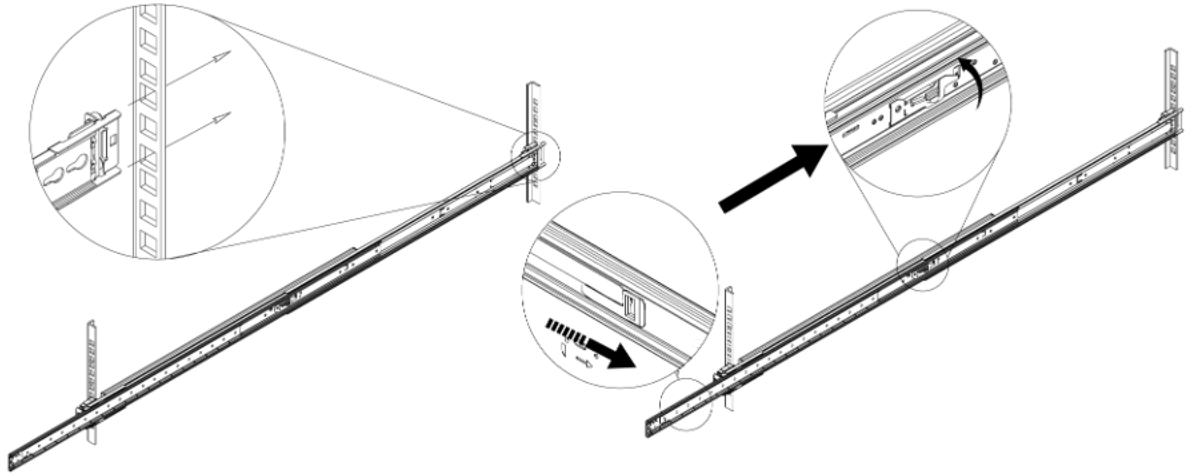


Figure 2-4. Extending and Mounting the Outer Rails

Important: Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over.

Important: Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Important: Slide rail mounted equipment is not to be used as a shelf or a work space.

2.4 Installing the Chassis into a Rack

Once rails are attached to the CSE-HS219-R000NP chassis and the rack, you can install the server.

Important: Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

Installing the Chassis into a Rack

1. Extend the outer rails as illustrated.
2. Align the inner rails of the chassis with the outer rails on the rack.
3. Slide the inner rails into the outer rails, keeping the pressure even on both sides. When the chassis has been pushed completely into the rack, it should click into the locked position.
4. Optional screws may be used to hold the front of the chassis to the rack.

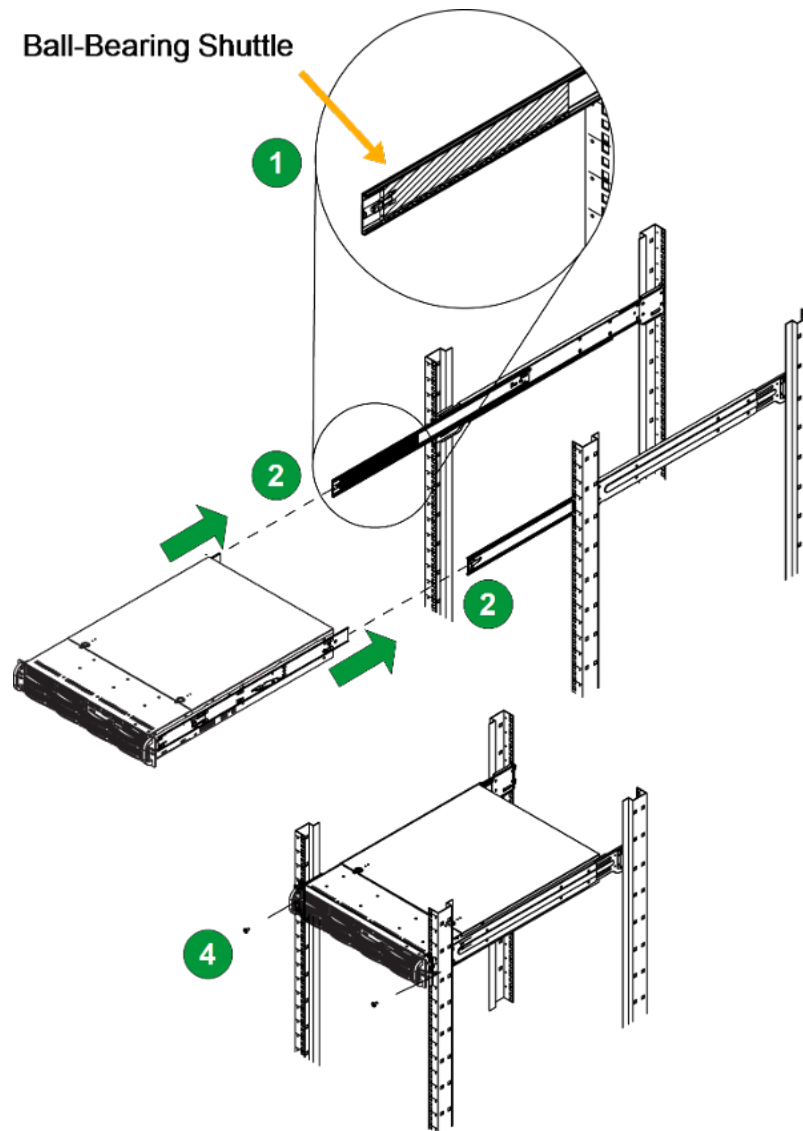


Figure 2-5. Installing the Server into the Rack

Note: Keep the ball bearing shuttle locked at the front of the middle rail during installation.

Important: This figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

Removing the Chassis from the Rack

Important: Use caution when mounting or removing the system from the rack. For large systems, at least one other person must assist during installation or removal. Follow the safety recommendations printed on the rails. Depending on the size of the system, you might need to use a lift.

1. If necessary, loosen the thumb screws on the front of the chassis that hold it in the rack.
2. Pull the chassis forward out the front of the rack until it stops.
3. Press the release latches on each of the inner rails downward simultaneously and continue to pull the chassis forward and out of the rack.

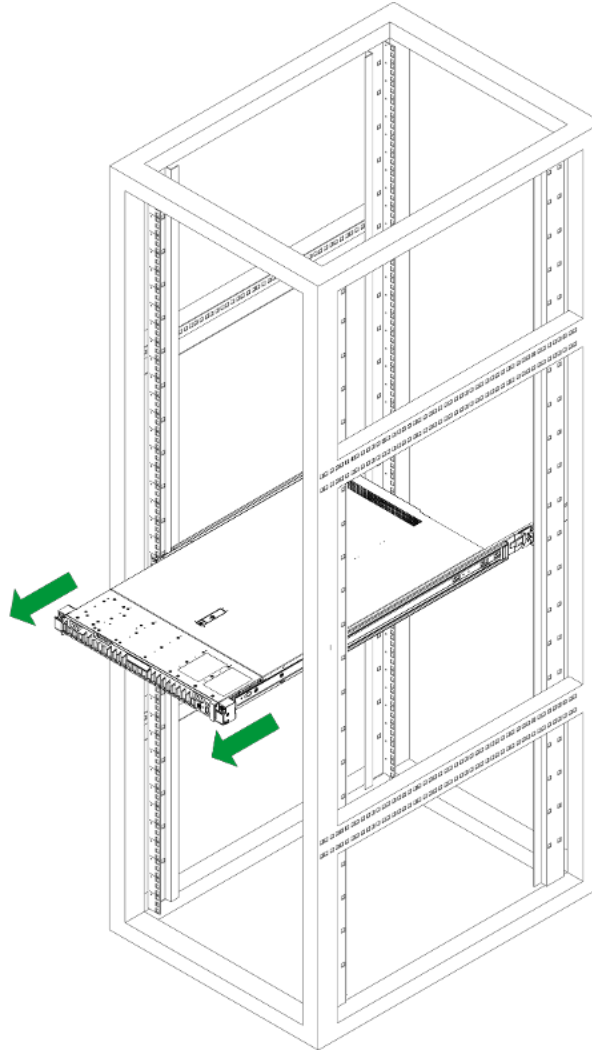


Figure 2-6. Removing the Chassis From the Rack

Chapter 3:

Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components for the SYS-222H-TN server. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Follow the procedures given in each section.

3.1 Removing Power	49
Removing Power from a Node	49
Removing Power from the System	49
3.2 Accessing the System	50
Removing the Top Cover	50
3.3 Static-Sensitive Devices	52
Precautions	52
3.4 Processor and Heatsink Installation	53
LGA 4710 Socket E2 Processors	53
Overview of the Processor Socket	54
Overview of the Processor Carrier	54
Overview of the Processor Heatsink Module	56
Installing the Processor	57
Assembling the Processor Heatsink Module	60
Preparing to Install the PHM into the Processor Socket	63
Installing the Processor Heatsink Module	66
Removing the Processor Heatsink Module	69
Installing EVAC Heatsinks (Optional)	73
3.5 Memory Support and Installation	77
Memory Support	77
General Guidelines for Optimizing Memory Performance	85
DIMM Installation	86
DIMM Removal	88
3.6 Motherboard Battery Removal and Installation	89

Battery Removal	89
Proper Battery Disposal	89
Battery Installation	89
3.7 Storage Drives	90
Installing Drives	90
Hot-Swap for NVMe Drives	90
3.8 Boot Drives	92
Installing M.2 Solid State Drives on Motherboard	92
3.9 System Cooling	94
Fans	94
Air Shrouds	95
3.10 Expansion Cards	97
Expansion Card Slot Configurations	97
Installing Expansion Cards	98
3.11 AIOM Cards	100
Installing AIOMs	100
3.12 Cable Routing Diagrams	102
SYS-222H-TN Storage Cables - NVMe	102
SYS-222H-TN Storage Cables - SAS/SATA	103
PCIe Cables - PCIe x8 Expansion Card Slot Configurations	104
PCIe Cables - PCIe x16 Expansion Card Slot Configurations	105
PCIe Cables - AIOM/OCP 3.0 NIC Slots	107
I/O Board Cable	108
Power Cables	109
3.13 Power Supply	111
Replacing the Power Supply	111

3.1 Removing Power

Before performing some setup or maintenance tasks, use the following procedure to ensure that power has been removed from one or more nodes of the SYS-222H-TN server.

Removing Power from a Node

Use the operating system to power down the node.

Removing Power from the System

1. Use the operating system to power down all nodes.
2. Grasp the head of each power cord and gently pull it out of the back of the power supply.
3. Disconnect the cords from the power strip or wall outlet.

3.2 Accessing the System

The SYS-222H-TN server features a removable top cover, which allows easy access to the inside of the server.

Removing the Top Cover

Important: Except for short periods of time, do not operate the server without the cover in place. The chassis cover must be in place to allow for proper airflow and to prevent overheating.

1. Press the release button and slide the cover toward the rear.
2. Lift the top cover up.
3. Check that all ventilation openings on the top cover and the top of the chassis are clear and unobstructed.

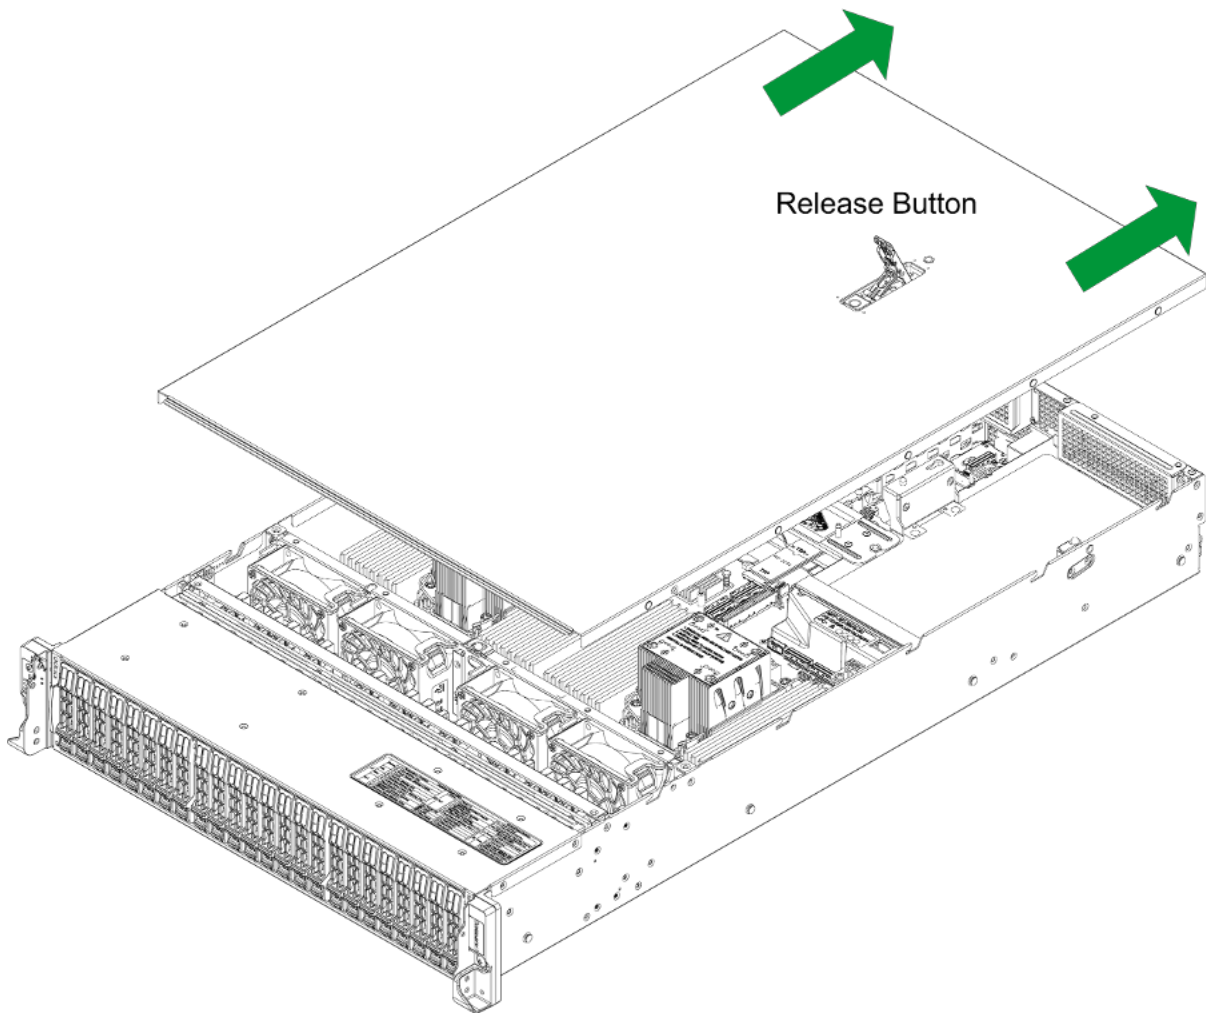


Figure 3-1. Removing the Chassis Cover

3.3 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your motherboard, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Handle the motherboard only by its edges. Do not touch its components, peripheral chips, memory modules, or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure that your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the motherboard.
- Use only the correct type of onboard CMOS battery. To avoid possible explosion, do not install the onboard battery upside down.

3.4 Processor and Heatsink Installation

This section provides procedures to install the processor(s) and heatsink(s).

Notes:

- Take industry standard precautions to avoid ESD damage. For details, see "[Static-Sensitive Devices](#)" on the previous page.
- Before starting, make sure that the plastic socket cap is in place and none of the socket pins are bent. If any damage is noted, contact your retailer.
- Do not connect the system power cord before the processor and heatsink installation is complete.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or processor socket.
- When buying a processor separately, use only a Supermicro certified heatsink.
- Refer to the Supermicro website for the most recent processor support.
- When installing the heatsink, ensure a torque driver set to the correct force is used for each screw.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.

LGA 4710 Socket E2 Processors

Processor Top View

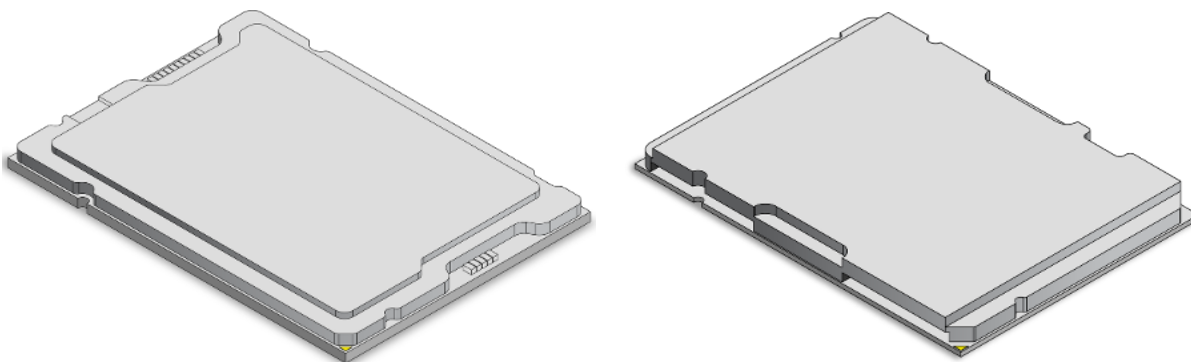


Figure 3-2. Processor (SP XCC left, SP HCC/LCC right)

Note: The motherboard supports three processor SKUs: SP XCC, SP HCC, and SP LCC. Each SKU supports a specific carrier; the SP XCC processor supports Carrier E2A while SP HCC and SP LCC support Carrier E2B. Make sure the processors of the same SKU are on the motherboard.

Overview of the Processor Socket

The processor socket is protected by a plastic protective cover.

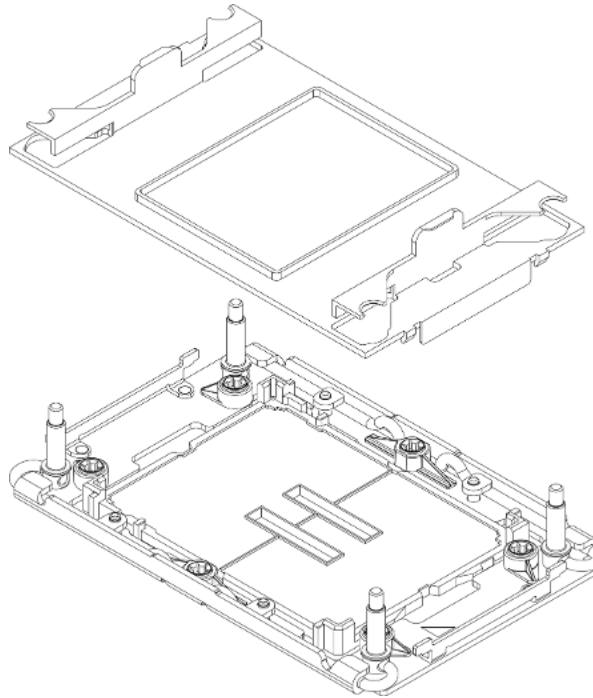


Figure 3-3. Plastic Protective Cover and Processor Socket

Overview of the Processor Carrier

The motherboard supports two types of processors and their associated processor carrier.

Processor Carriers

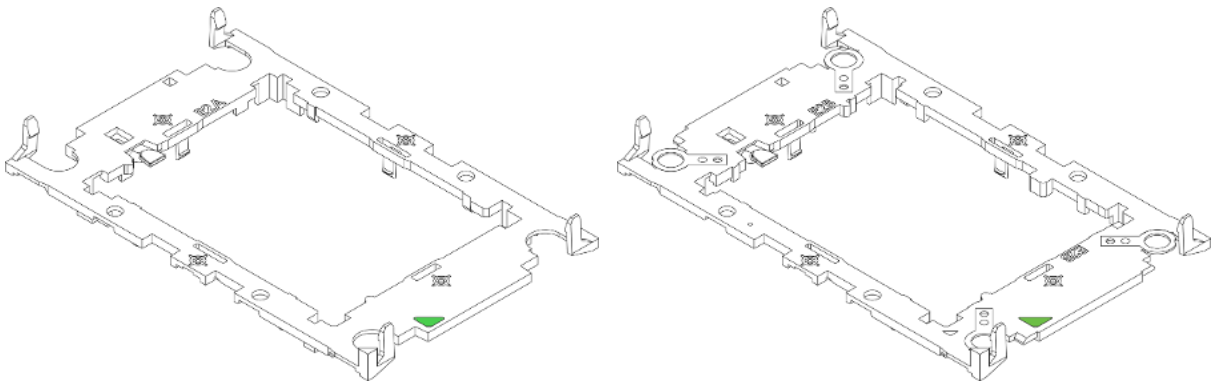


Figure 3-4. Carrier (SP XCC E2A left, SP HCC/LCC E2B right)

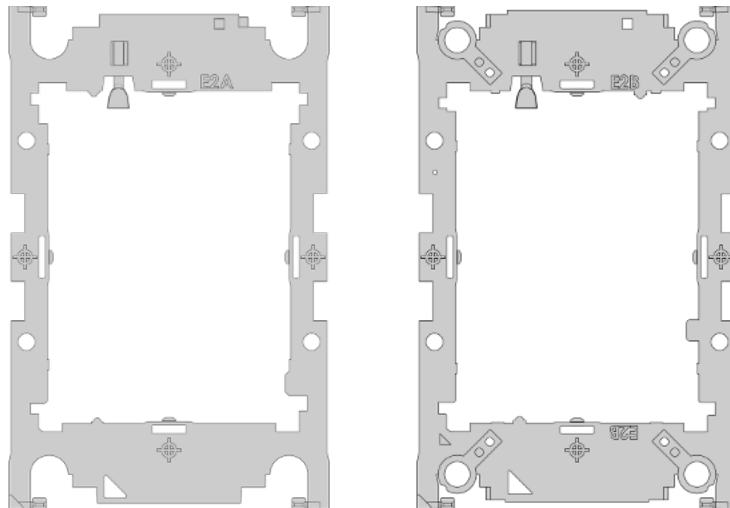


Figure 3-5. Carrier Top View (SP XCC E2A left, SP HCC/LCC E2B right)

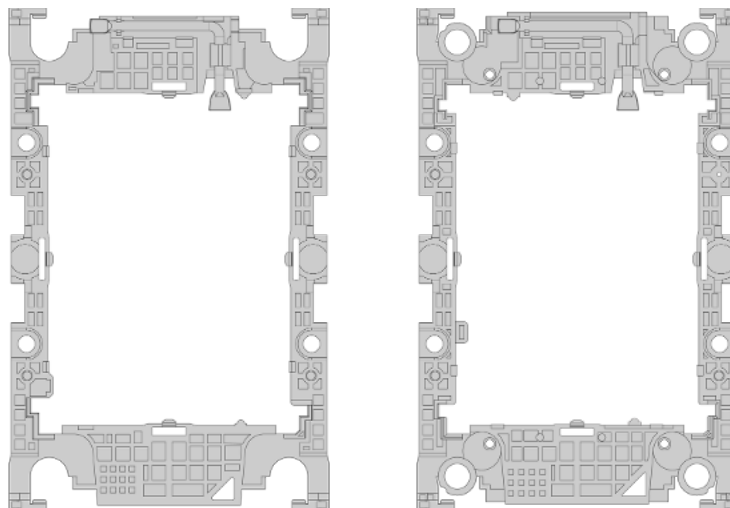


Figure 3-6. Carrier Bottom View (SP XCC E2A left, SP HCC/LCC E2B right)

Overview of the Processor Heatsink Module

The Processor Heatsink Module (PHM) contains a heatsink, a processor carrier, and the processor.

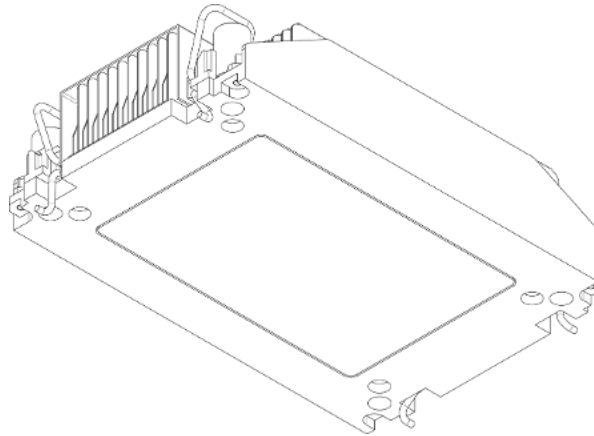


Figure 3-7. Heatsink (1U)

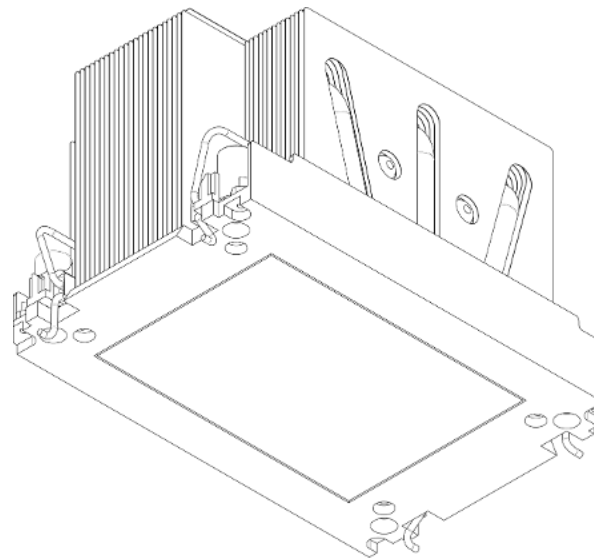


Figure 3-8. Heatsink (2U)

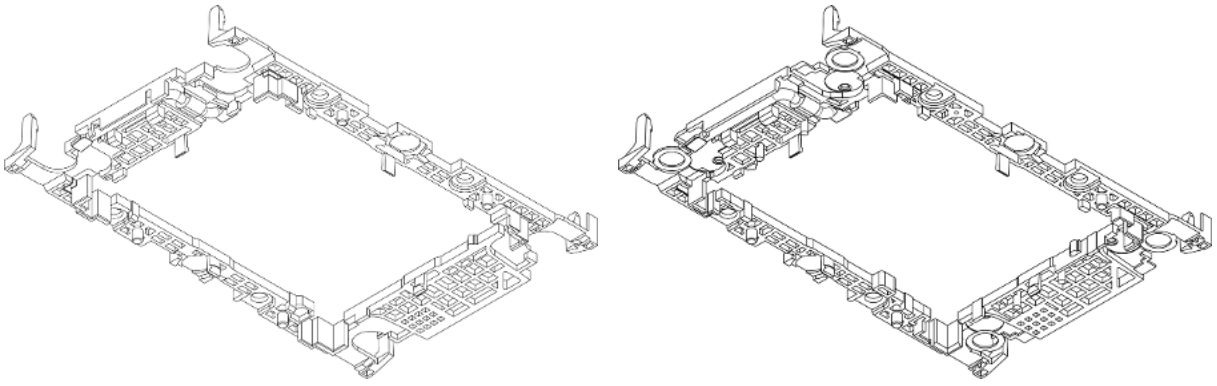


Figure 3-9. Carrier (SP XCC E2A left, SP HCC/LCC E2B right)

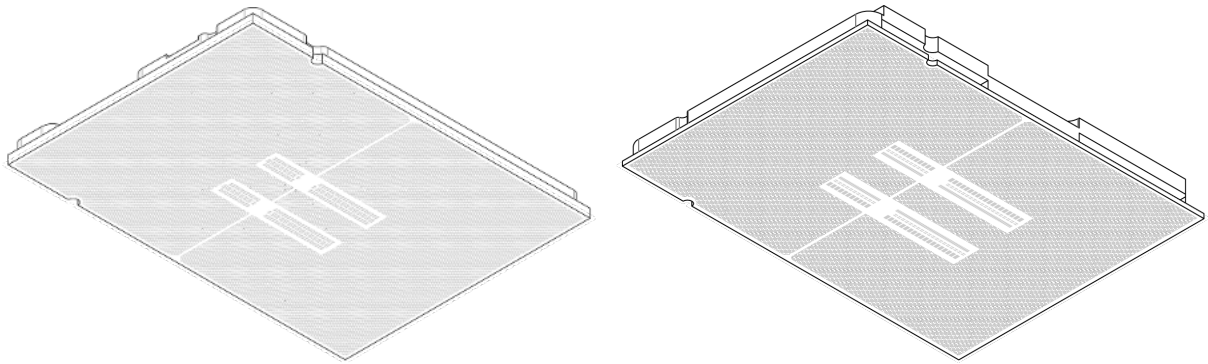


Figure 3-10. Processor (SP XCC E2A left, SP HCC/LCC E2B right)

Installing the Processor

To install the processor, follow the steps below:

1. Before installation, make sure the lever on the processor carrier is pressed down as shown below.

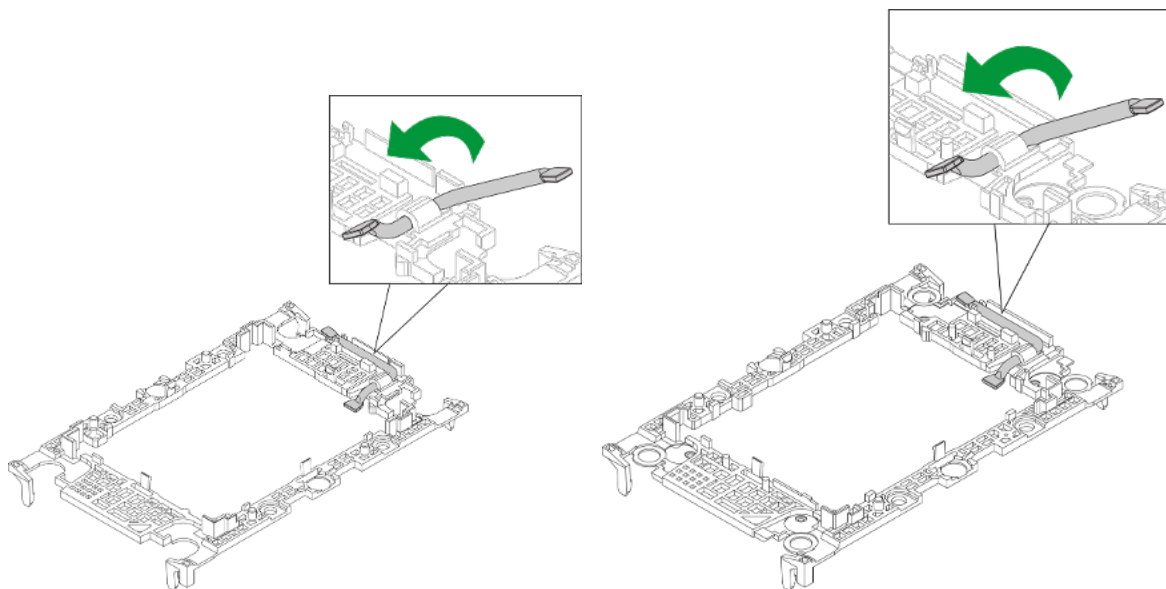


Figure 3-11. Carrier Lever (SP XCC left, SP HCC/LCC right)

2. Hold the processor with the LGA lands (gold contacts) facing up. Locate the small, gold triangle in the corner of the processor and the corresponding hollowed triangle on the processor carrier. These triangles indicate pin 1.

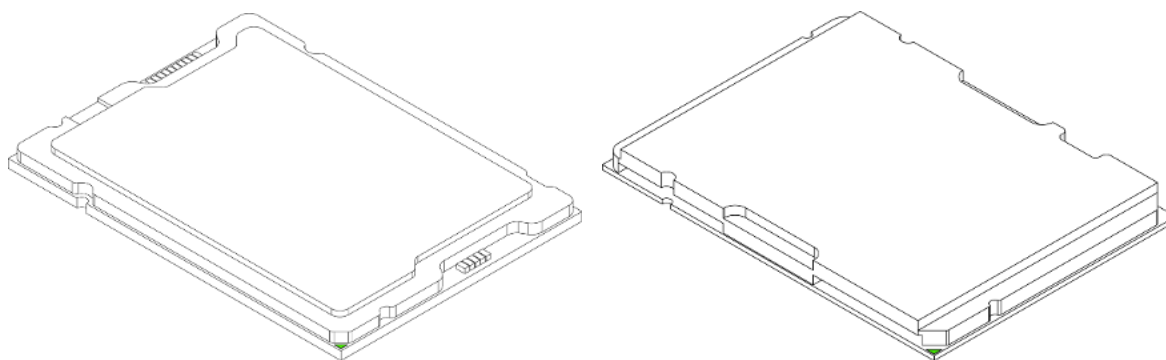


Figure 3-12. Processor (SP XCC E2A left, SP HCC/LCC E2B right)

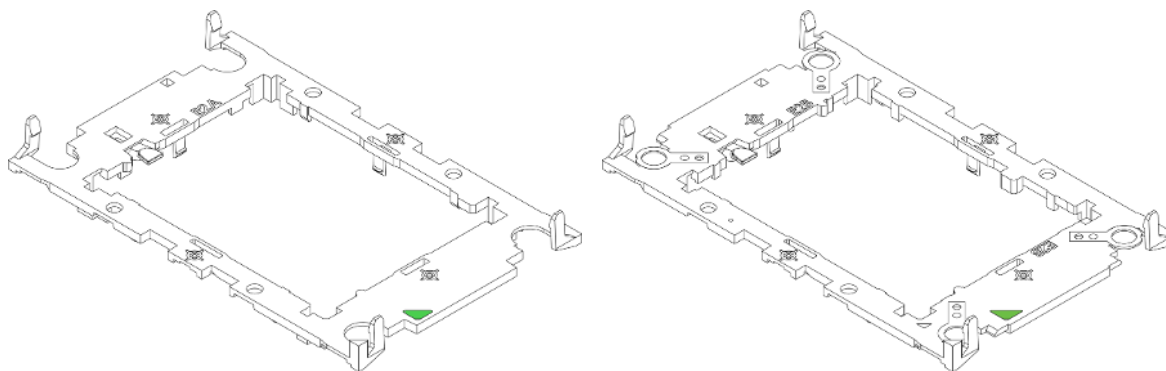


Figure 3-13. Carrier (SP XCC E2A left, SP HCC/LCC E2B right)

- Use the triangles as a guide to carefully align and place one end of the processor into the latch marked A, and place the other end of the processor into the latch marked B as shown below.

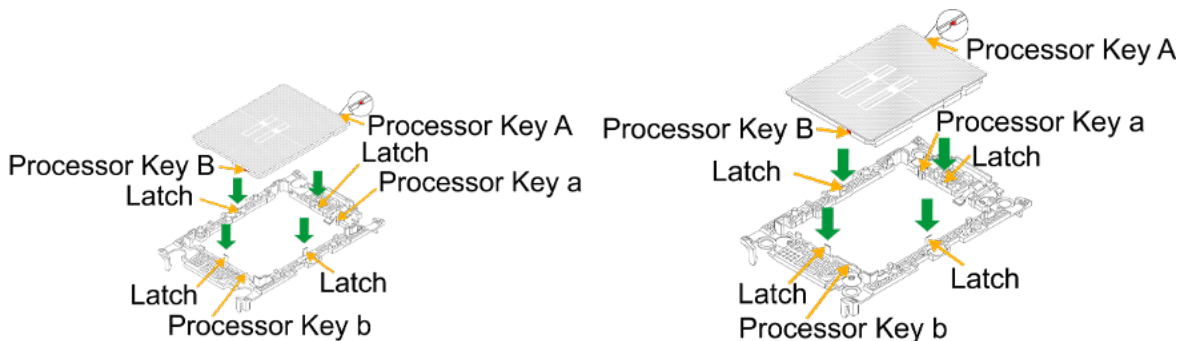


Figure 3-14. Keys and Latches Locations (SP XCC E2A left, SP HCC/LCC E2B right)

- Examine all corners to ensure that the processor is firmly attached to the carrier.

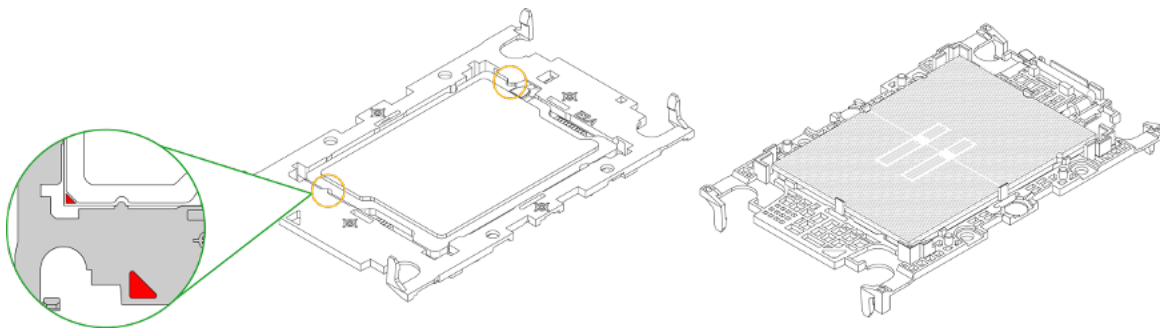


Figure 3-15. SP XCC E2A Keys and Latches

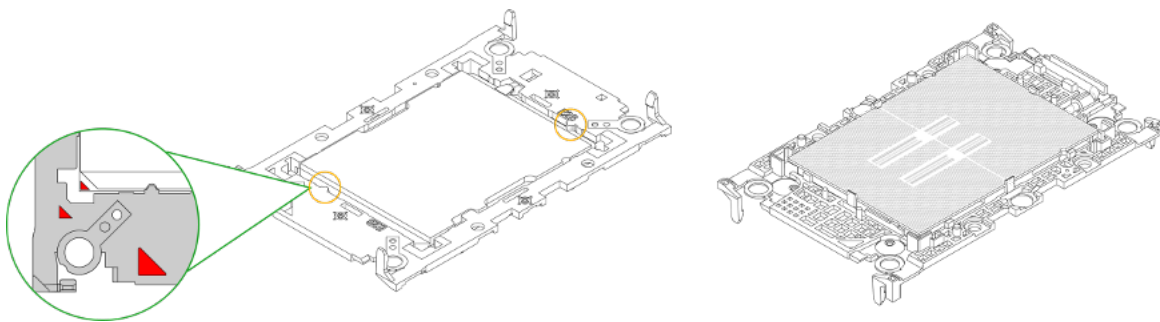


Figure 3-16. SP HCC/LCC E2B Keys and Latches Together

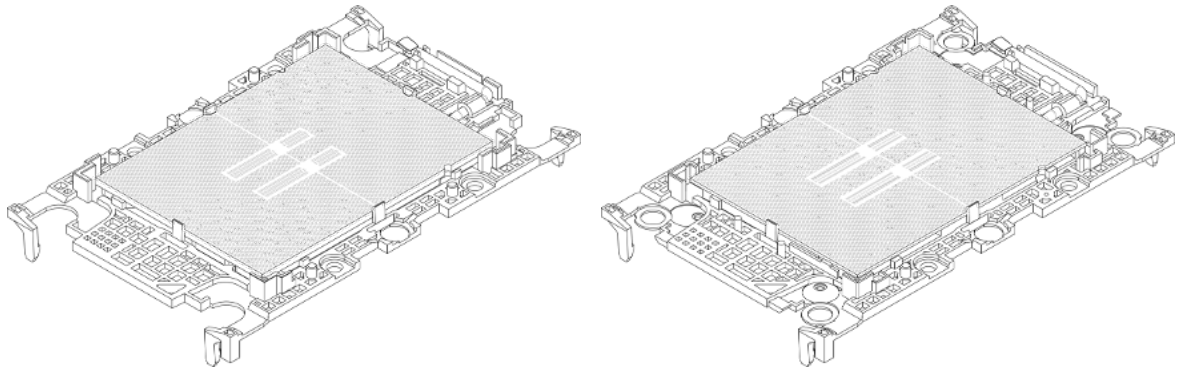


Figure 3-17. Carrier Assembly Completed (SP XCC E2A left, SP HCC/LCC E2B right)

Assembling the Processor Heatsink Module

After installing the processor into the carrier, mount it onto the heatsink to create the processor heatsink module (PHM):

1. Note the label on top of the heatsink, which marks the airflow direction. Turn the heatsink over and orient the heatsink so the airflow arrow is pointing towards the triangle on the processor.
2. If this is a new heatsink, the thermal grease has been pre-applied. Otherwise, apply the proper amount of thermal grease.
3. Hold the processor carrier so the processor's gold contacts are facing up, then align the holes of the processor carrier with the holes on the heatsink. Press the processor carrier down until it snaps into place. The plastic clips of the processor carrier will lock at the four corners.

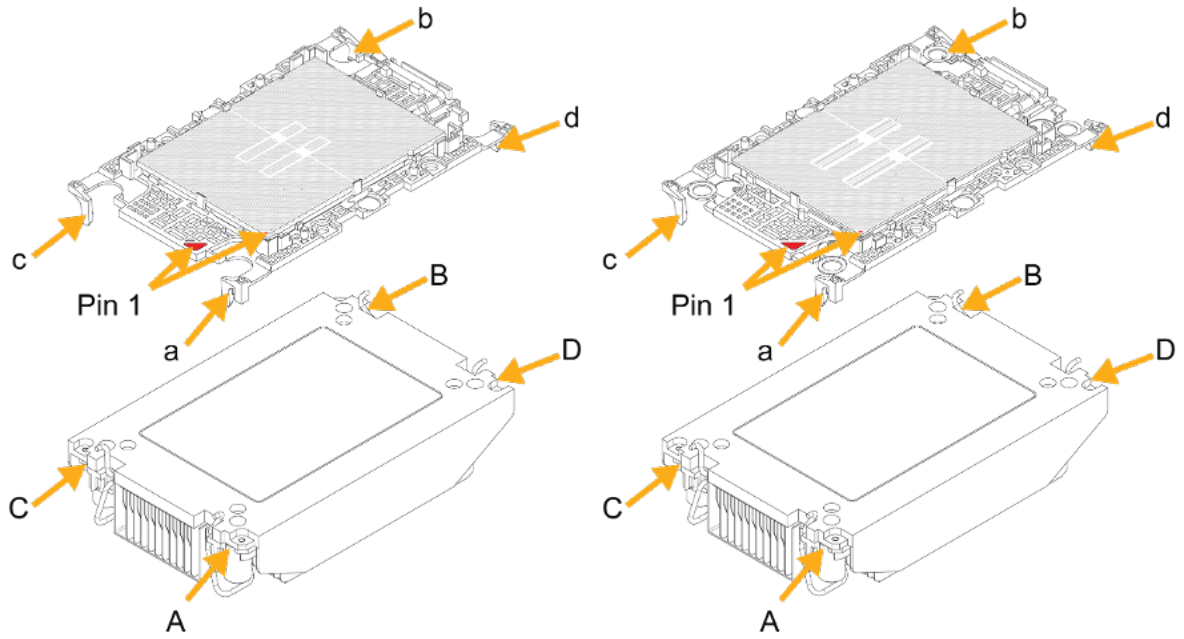


Figure 3-18. Carrier with 1U Heatsink (SP XCC left, SP HCC/LCC right)

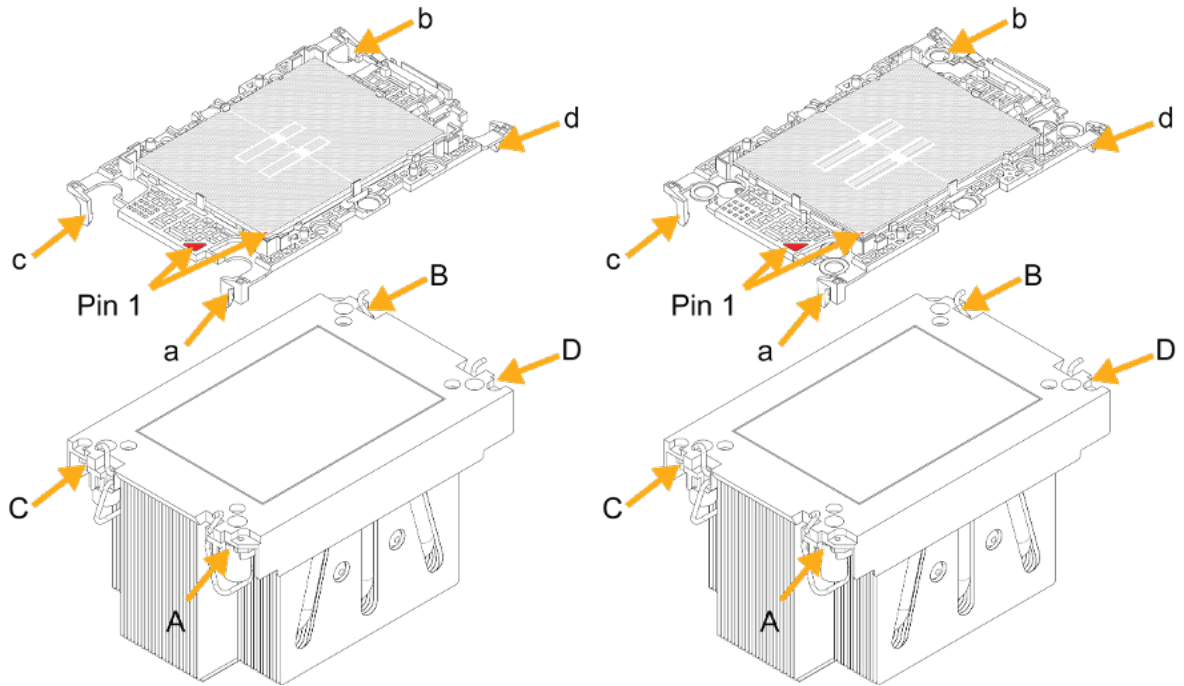


Figure 3-19. Carrier with 2U Heatsink (SP XCC left, SP HCC/LCC right)

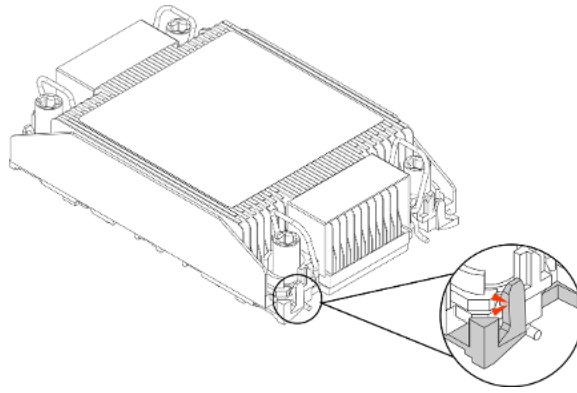


Figure 3-20. PHM Plastic Clips Locked(1U)

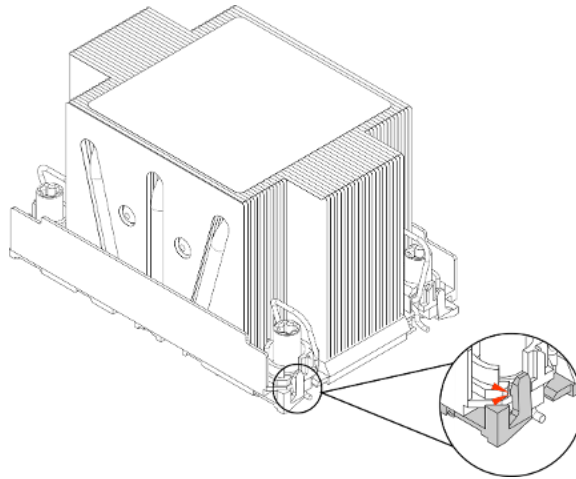


Figure 3-21. PHM Plastic Clips Locked (2U)

4. Examine all corners to ensure that the plastic clips on the processor carrier are firmly attached to the heatsink.

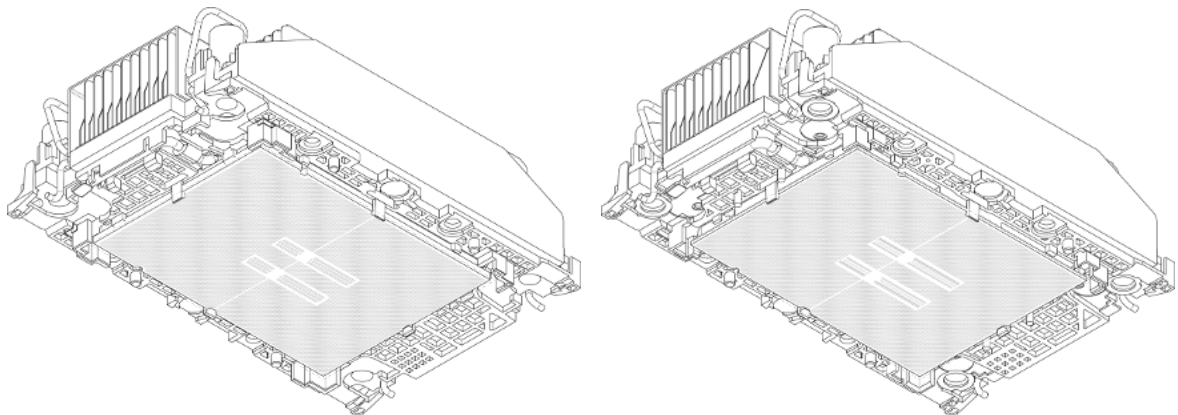


Figure 3-22. 1U PHM Completed (SP XCC left, SP HCC/LCC right)


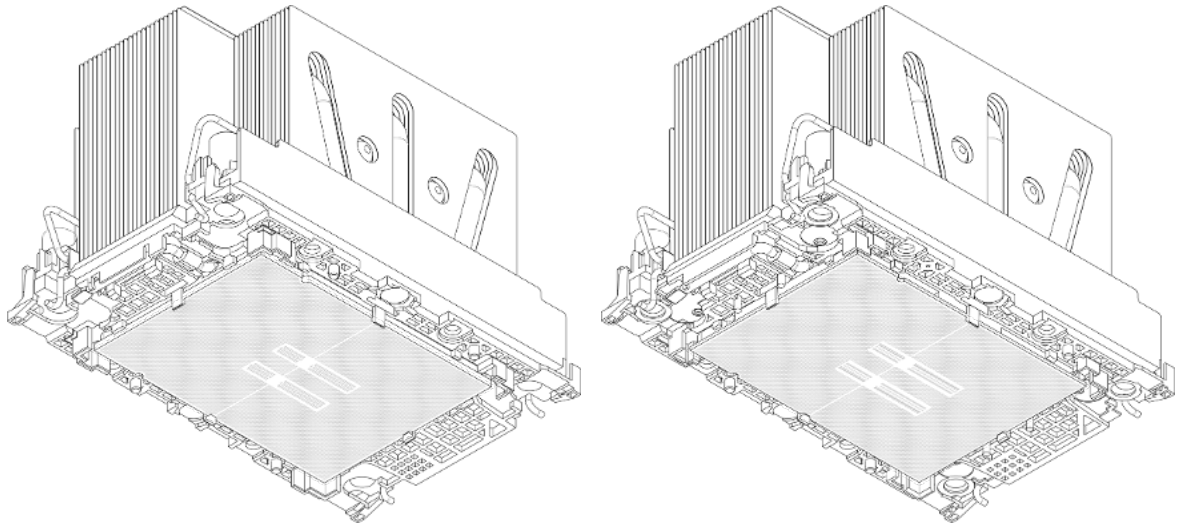


Figure 3-23. 2U PHM Completed (SP XCC left, SP HCC/LCC right)

Preparing to Install the PHM into the Processor Socket

After assembling the Processor Heatsink Module (PHM), you are ready to install it into the processor socket. To ensure the proper installation, follow the procedures below:

1. Locate four threaded fasteners (marked a, b, c, and d) on the processor socket.

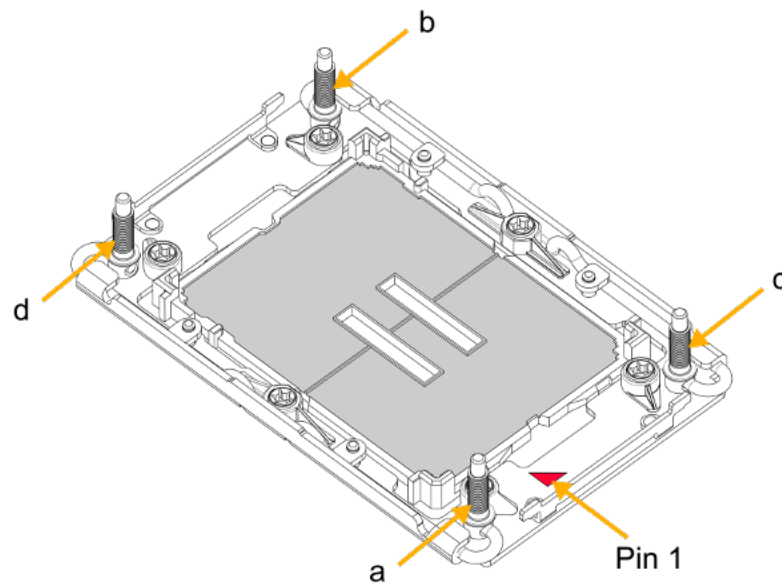

a, b, c, d: Threaded Fasteners

Figure 3-24. Threaded Fasteners

2. Locate four PEEK nuts (marked A, B, C, and D) and four rotating wires (marked 1, 2, 3, and 4) on the heatsink.

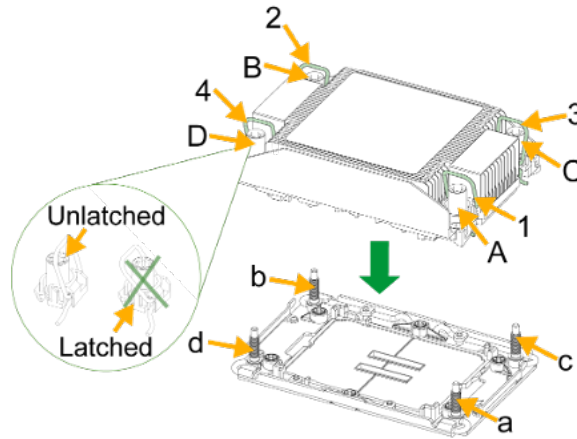


Figure 3-25. PEEK Nuts and Rotating Wires (1U)

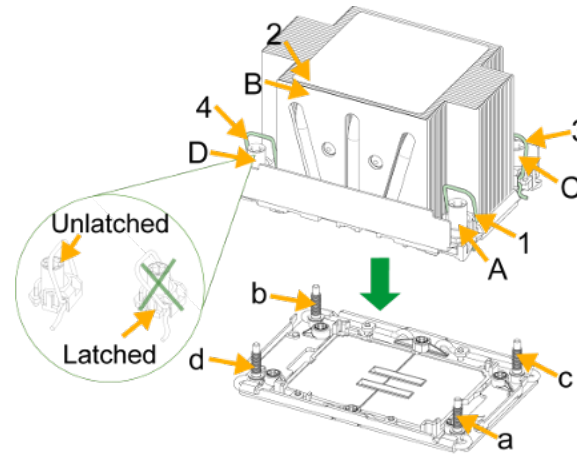


Figure 3-26. PEEK Nuts and Rotating Wires (2U)

3. Check the rotating wires (marked 1, 2, 3, and 4) to make sure that they are at unlatched positions before installing the PHM into the processor socket.

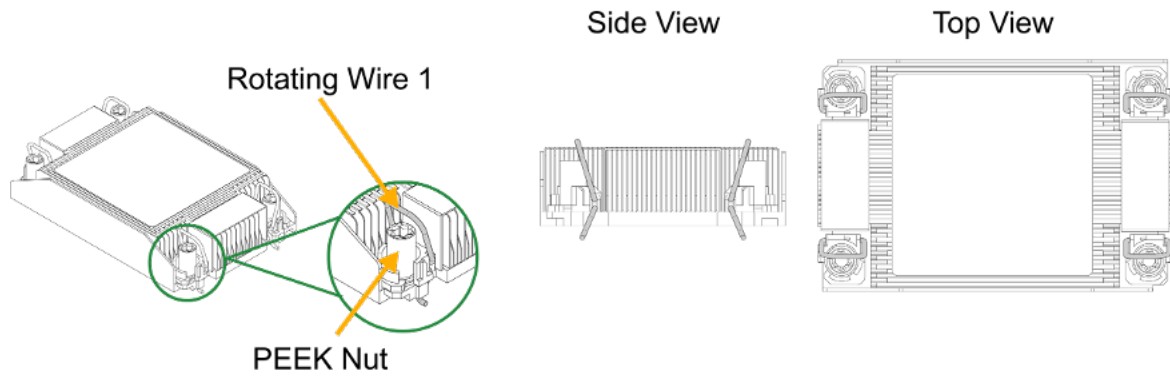


Figure 3-27. 1U Unlatched Positions

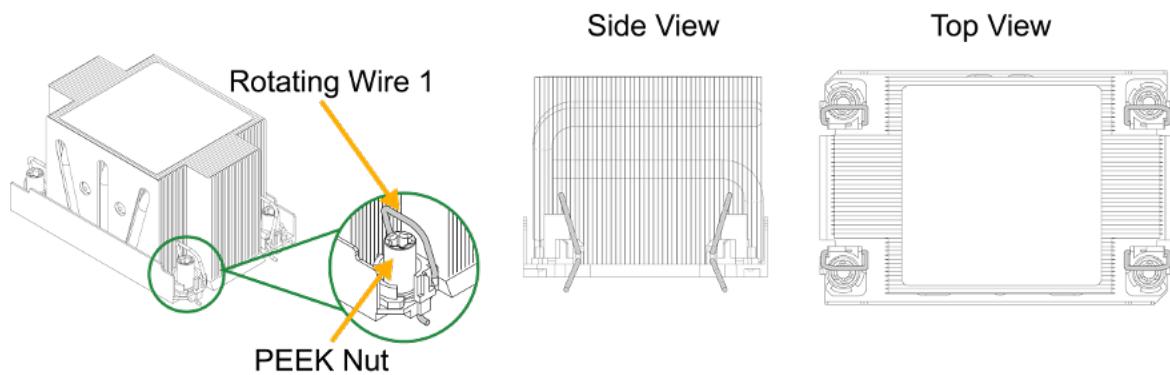


Figure 3-28. 2U Unlatched Positions

Preparing the Processor Socket for Installation

This motherboard comes with a plastic protective cover installed on the processor socket. Remove it from the socket to install the Processor Heatsink Module (PHM). Gently pull up one corner of the plastic protective cover to remove it.

1. Press the tabs inward.

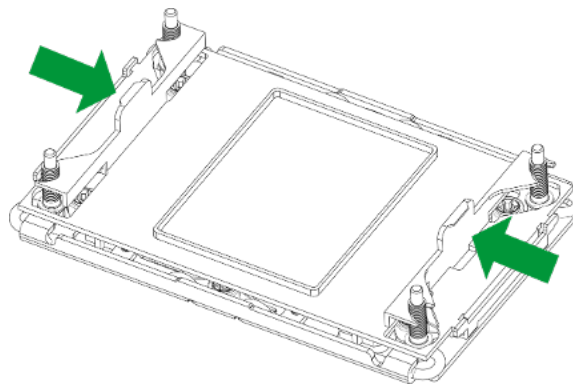


Figure 3-29. Processor Socket with Plastic Protective Cover

2. Pull up the protective cover from the socket.

Note: Do not touch or bend the socket pins.


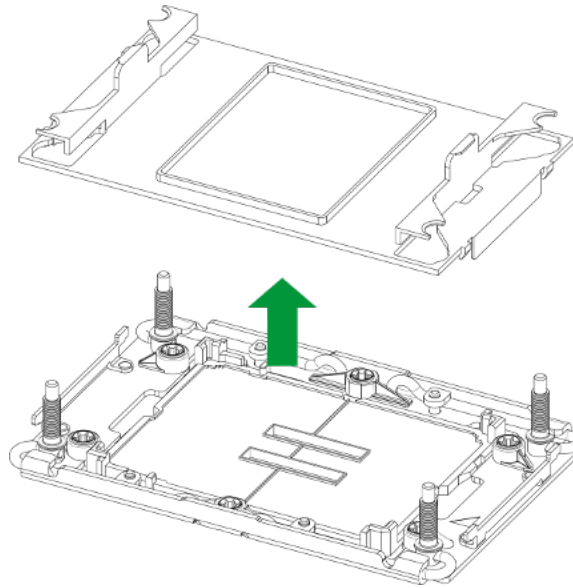


Figure 3-30. Plastic Protective Cover Removed

Installing the Processor Heatsink Module

1. Align pin 1 of the PHM with the printed triangle on the processor socket.
2. Make sure all four PEEK nuts of the heatsink (marked A, B, C, and D) are aligned with the threaded fasteners (marked a, b, c, and d), then gently place the heatsink on top of the processor socket.


A, B, C, D:
PEEK Nut on the Heatsink

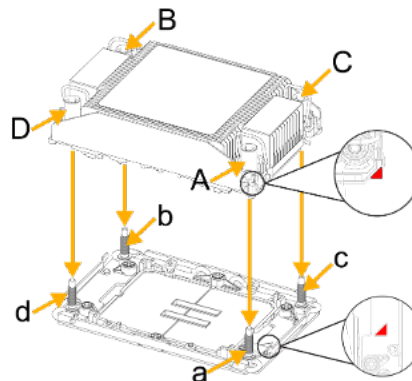

a, b, c, d:
Threaded Fastener on the processor socket

Figure 3-31. Aligning the Heatsink with the Socket (1U)

A, B, C, D:
PEEK Nut on the Heatsink

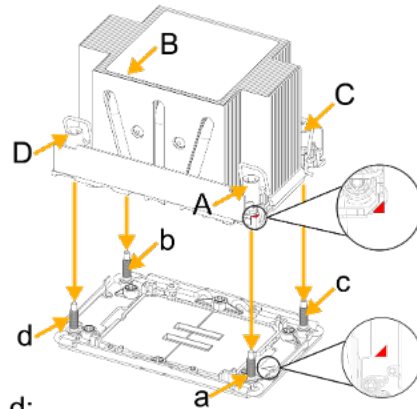

a, b, c, d:
Threaded Fastener on the processor socket

Figure 3-32. Aligning the Heatsink with the Socket (2U)

3. Press all four rotating wires outwards and make sure that the heatsink is securely latched into the processor socket.

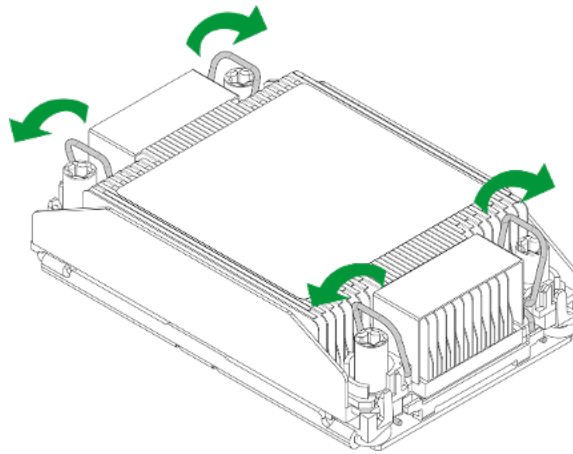


Figure 3-33. Latching the PHM (1U)

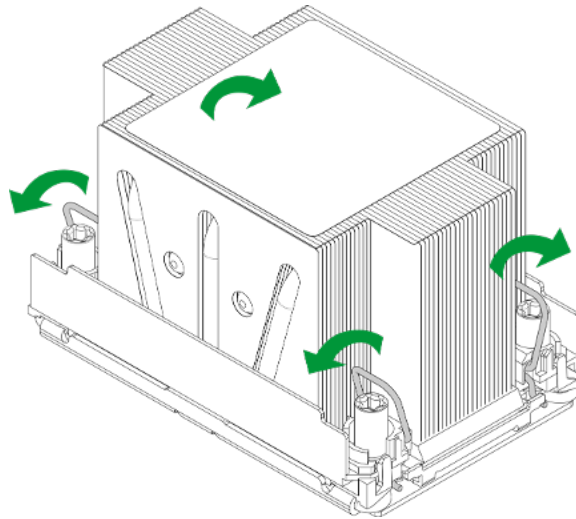


Figure 3-34. Latching the PHM (2U)

4. With a T30 bit torque driver set to a force of 8.0 lbf-in (0.904 N-m), gradually tighten the four screws to ensure even pressure. You can start with any screw, but make sure to tighten the screws in a diagonal pattern.

Important: Do not use a force greater than 8.0 lbf-in (0.904 N-m). Exceeding this force may over-torque the screw, causing damage to the processor, heatsink, and screw.

5. Examine all corners to ensure that the PHM is firmly attached to the socket.

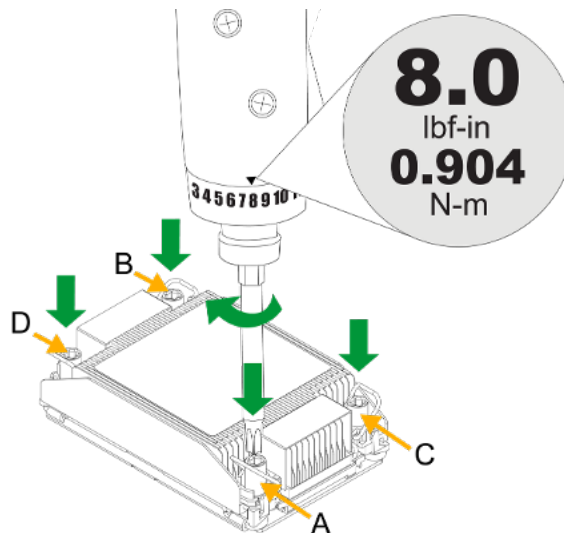


Figure 3-35. Installing the PHM with a Torque Driver (1U)

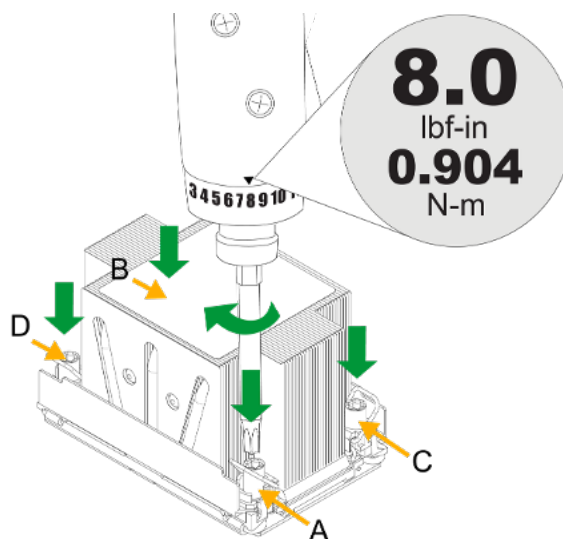


Figure 3-36. Installing the PHM with a Torque Driver (2U)

Removing the Processor Heatsink Module

Before removing the processor heatsink module (PHM) from the motherboard, shut down the system and then unplug the AC power cord from all power supplies.

Then follow the steps below:

1. Use a screwdriver to loosen the four screws. You can start with any screw, but make sure to loosen the screws in a diagonal pattern.

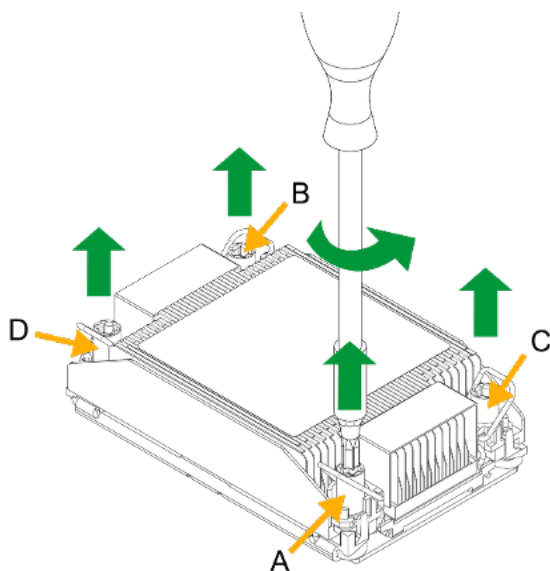


Figure 3-37. Loosening the Screws (1U)

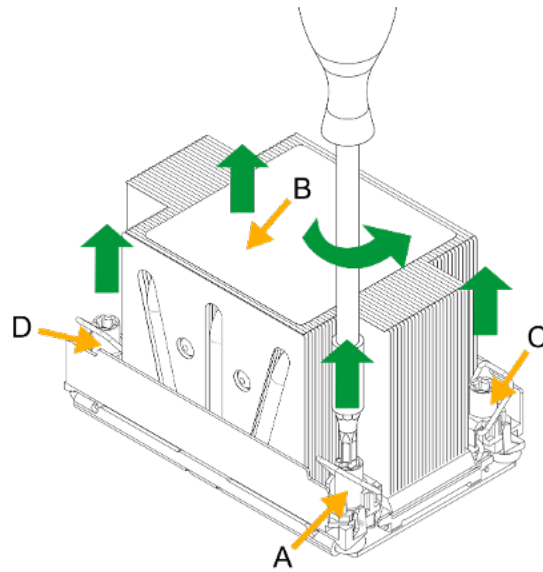


Figure 3-38. Loosening the Screws (2U)

2. Press the four rotating wires inwards to unlatch the PHM from the socket.

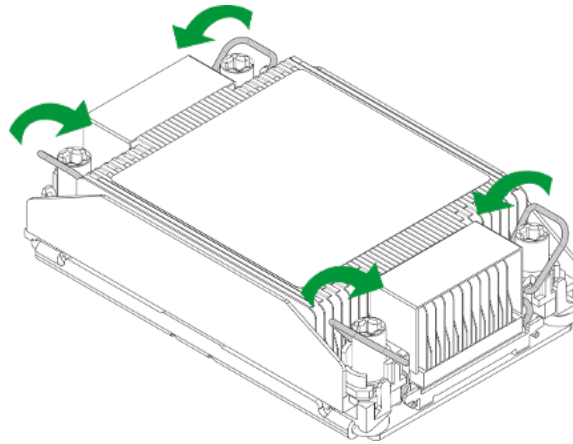


Figure 3-39. Unlatching the PHM (1U)

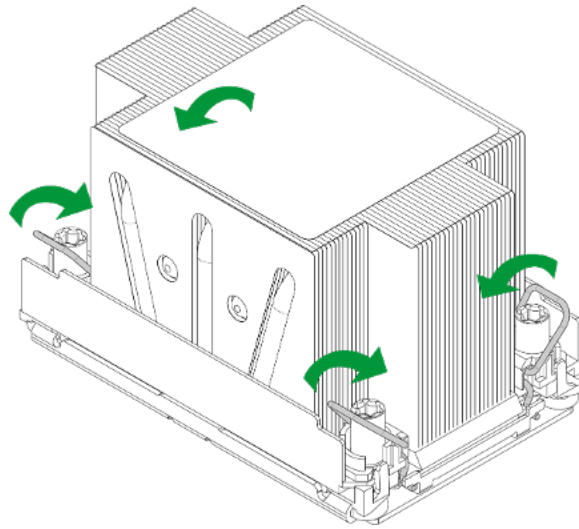


Figure 3-40. Unlatching the PHM (2U)

3. Gently lift the PHM upwards to remove it from the socket.

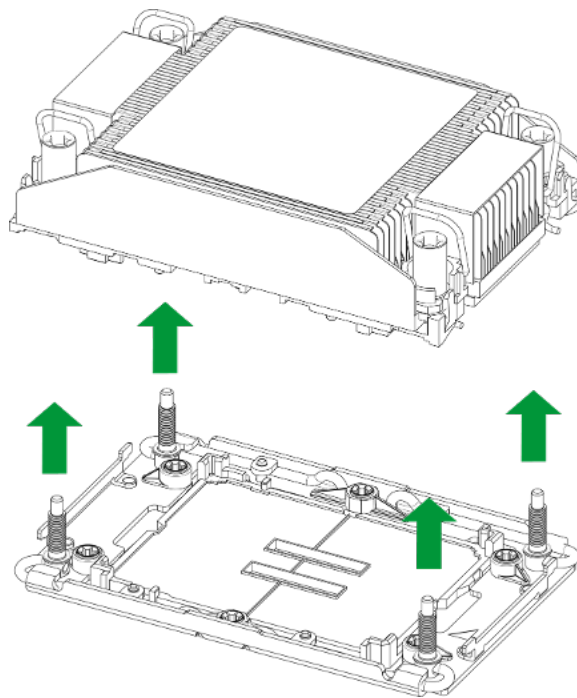


Figure 3-41. Removing the PHM from the Socket (1U)

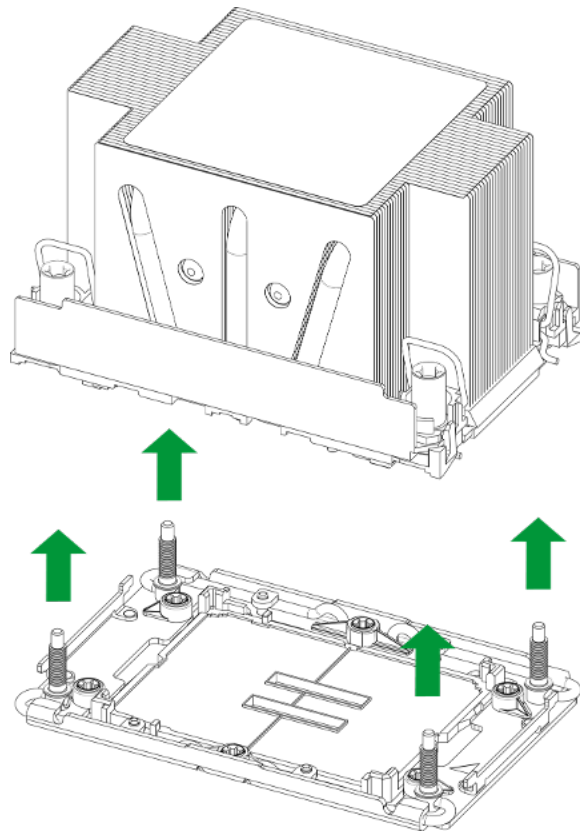


Figure 3-42. Removing the PHM from the Socket (2U)

4. To remove the processor from the heatsink, gently lift the lever from the processor carrier.

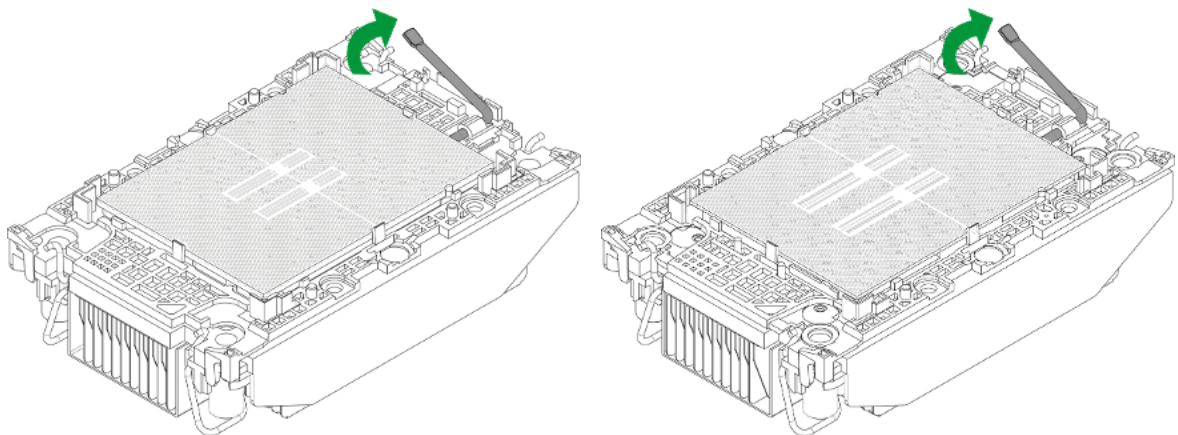


Figure 3-43. Carrier with 1U Heatsink (SP XCC left, SP HCC/LCC right)

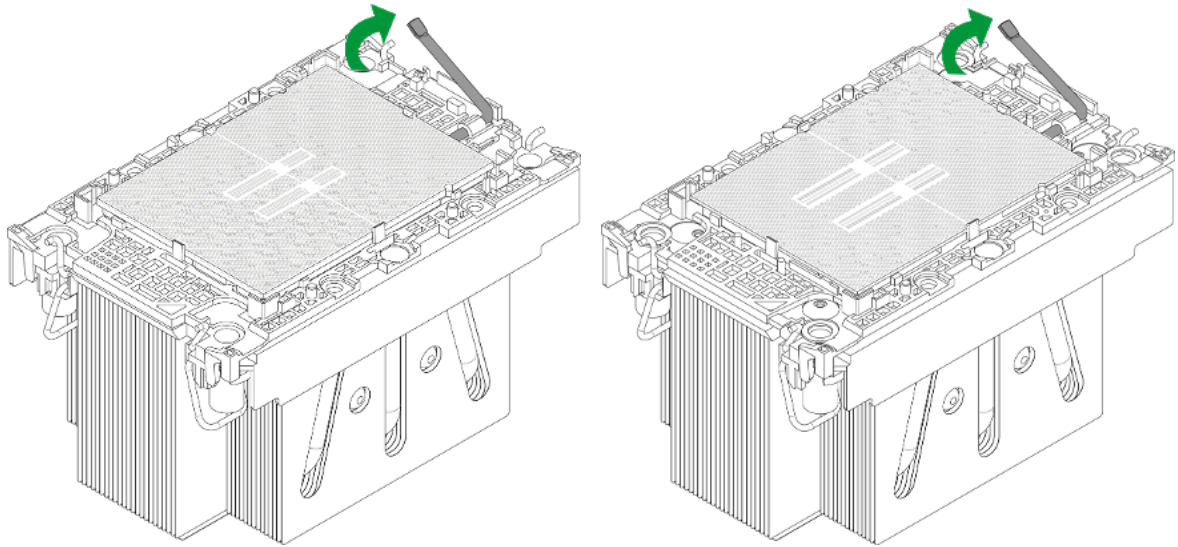


Figure 3-44. Carrier with 2U Heatsink (SP XCC left, SP HCC/LCC right)

- To remove the processor, move the lever to its unlocked position and gently remove the processor.

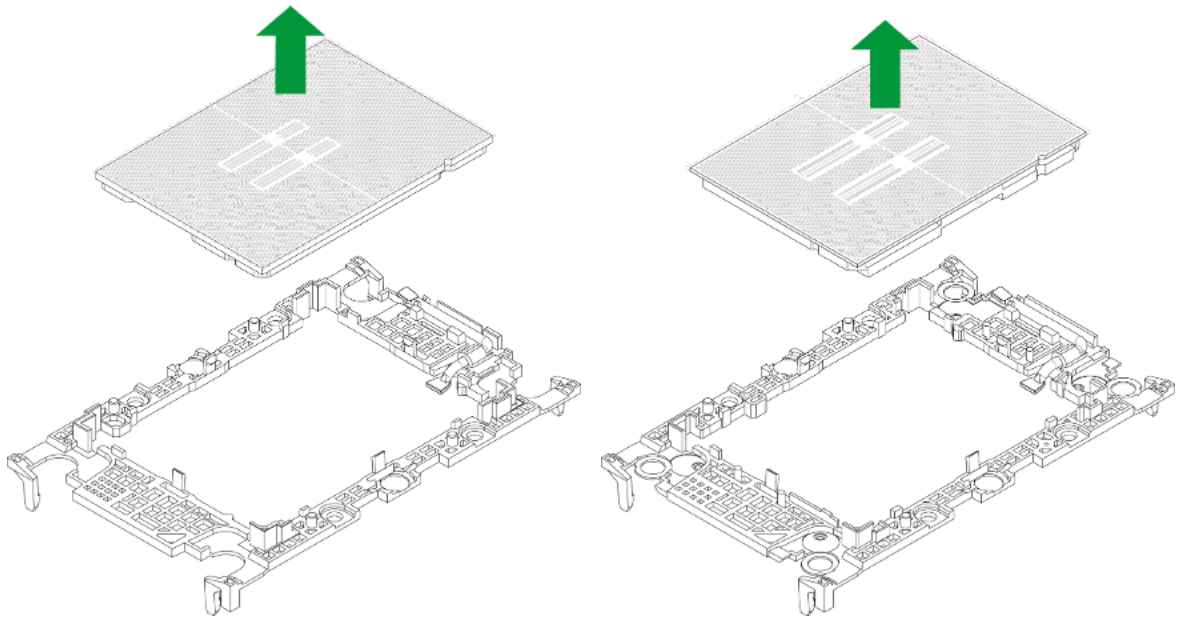


Figure 3-45. Removing the Processor (SP XCC left, SP HCC/LCC right)

Installing EVAC Heatsinks (Optional)

The optional Extended Volume Air Cooling (EVAC) SNK-P2089P 2U heatsink designed for X14DBM-SP supports dual Intel® Xeon® 6 processor (in Socket E2 LGA 4710).

Installing X14DBM-SP EVAC Heatsinks

Begin by creating the PHM and installing the PHM into the CPU socket.

1. With a T30 bit torque driver set to a force of **8.0 in-lbf (0.904 N-m)**, gradually tighten the six PEEK nuts to ensure even pressure in the sequence of 1-2-3-4-5-6.

Important: Do not use a force greater than 8.0 in-lbf (0.904 N-m). Exceeding this force may over-torque the screw, causing damage to the processor, heatsink, and screw.

2. Examine all the extended sections of the heatsink to ensure that the EVAC heatsink is firmly attached to the standoffs.

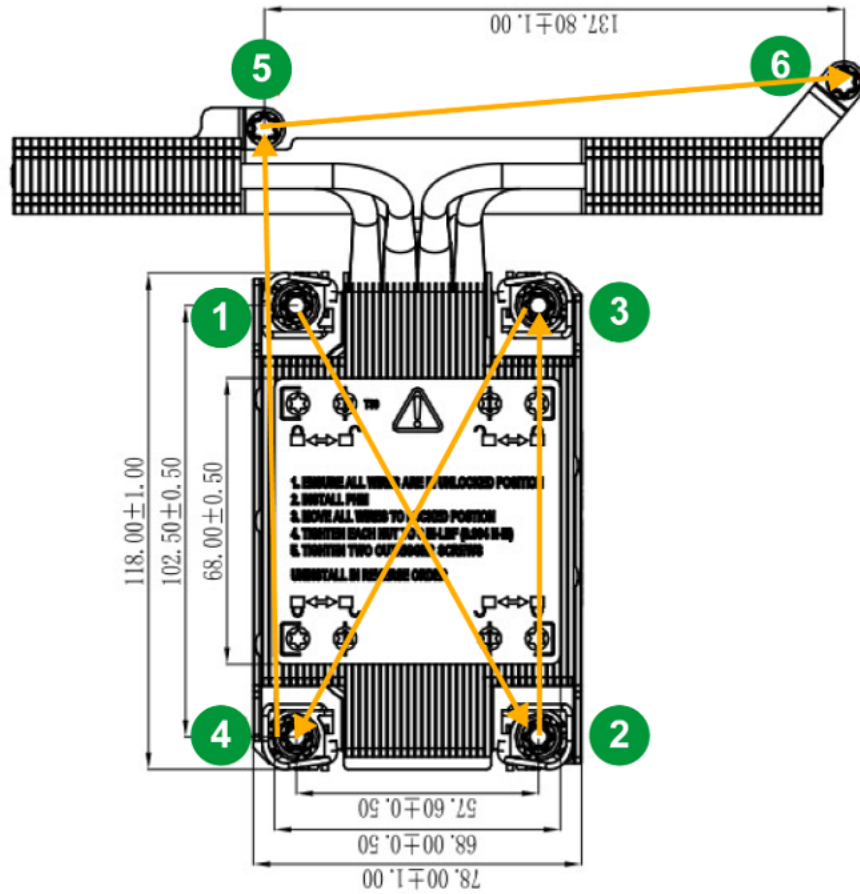


Figure 3-46. Top View of the EVAC Heatsink

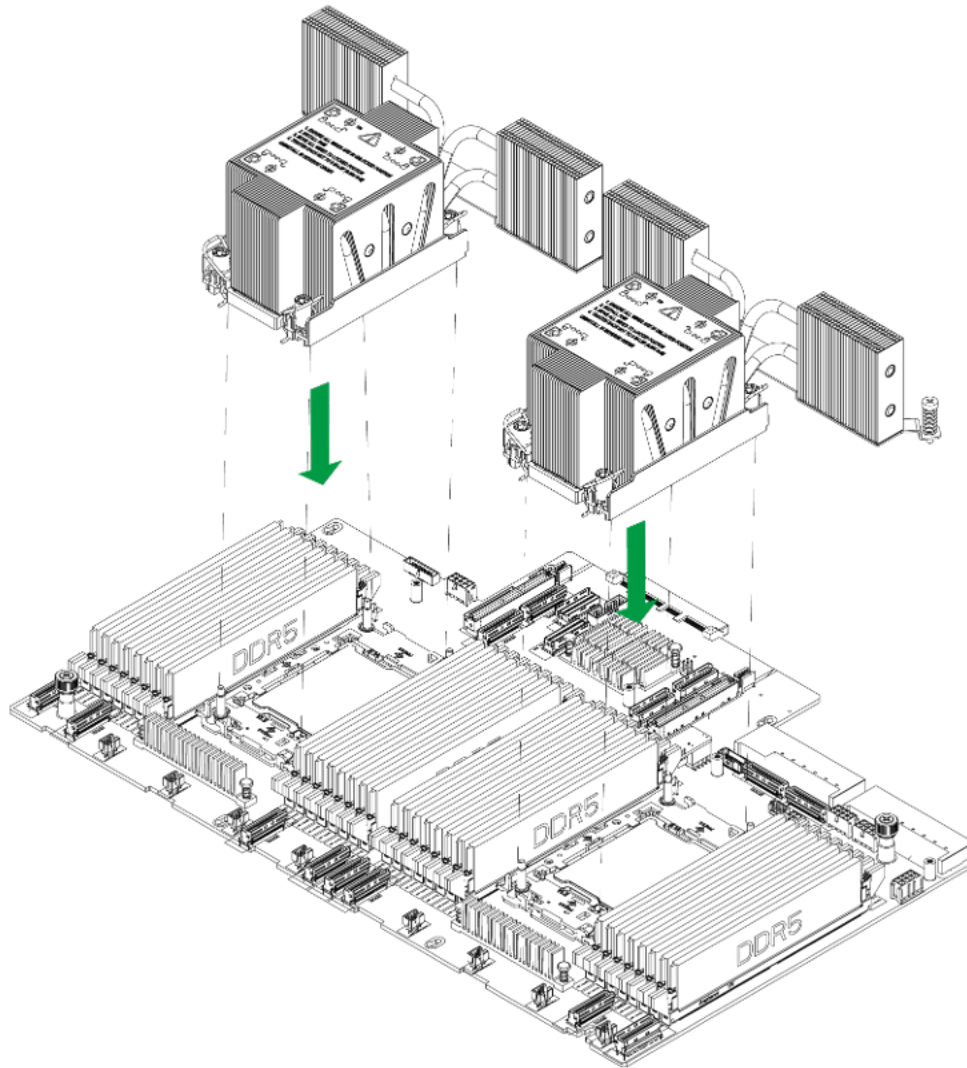


Figure 3-47. Installing EVAC Heatsinks (Optional)

Note: To remove the EVAC heatsink from the CPU package, unscrew the screws in the sequence of 6-5-4-3-2-1. To avoid over-tension on PEEK nuts 5 and 6, do not loosen the screws in the order of 1-2-3-4.

3.5 Memory Support and Installation

Important: To prevent any damage, exercise extreme care when installing or removing memory modules.

Note: Check the Supermicro website for recommended memory modules.

Memory Support

The X14DBM-SP motherboard supports up to 4 TB of ECC DDR5 RDIMM/RDIMM 3DS memory with speeds of up to 6400 MT/s (1DPC) or up to 5200 MT/s (2DPC) in DIMM slots. In addition, MRDIMM DDR5 memory with speeds up to 8000 MT/s (1DPC or 2 slots per channel) is also supported.

To enhance memory performance and ensure system stability, do not mix memory modules of different speeds, different sizes, and different types in your server.

Note: Memory speed/capacity support depends on the processors used in the system.

Intel Xeon 6700-Series Processors with E-Cores

DDR5-6400 Memory Support for Intel® Xeon® 6700-Series Processors with E-Cores									
Type	Ranks Per DIMM, Data Width (Stack)	DIMM Capacity (GB)						Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)	
		DRAM Density						1DPC/2SPC	2DPC/2SPC
		16 Gb		24 Gb		32 Gb			
		1DPC	2DPC	1DPC	2DPC	1DPC	2DPC		
RDIMM	1Rx4	32 GB	-	-	-	-	-	6400, 6000, 5600, 5200, 4800 (DDR5-6400 rated RDIMMs only)	N/A
	2Rx8	32 GB	-	-	-	-	-		N/A
	2Rx4	64 GB	64 GB	96 GB	96 GB	-	-		5200, 4800 (DDR5-6400 rated RDIMMs only)
	2Rx4	-	-	-	-	128 GB	128 GB		
3DS RDIMM	4Rx4					256 GB	256 GB		

CXL Memory Configuration Support for Intel® Xeon® 6700-Series Processors with E-Cores								
Native DDR5 Memory Per Socket				CXL Memory Per Socket				
Slot 0 DIMM Ranks	Slot 0 DIMM Capacity (GB)	DIMM Type	DRAM Density (Gb)	CXL Memory Channels	CXL Memory Type	CXL Capacity Per Device/Module	CXL Interleave	CXL Mode
2Rx4	64	10x4	16	2+2	DDR5 x8	64 GB	1x4*, 2x2, 4x1	1LM+Vol
2Rx4	64	10x4	16	1+1	DDR5 x16	128 GB	1x2*, 2x1	1LM+Vol
1Rx4	32	10x4	16	2	DDR5 x8	128 GB	1x2*	Intel Flat Memory Mode

Notes:

- The items with an asterisk (*) are the default settings in the BIOS.
- The Intel® Xeon® 6700-series processors with E-cores CXL memory configurations are 1DPC ('Slot 0') only for native DDR5.
- CXL Memory Channel: number of devices per root port, with root ports separated by "+," e.g. 2+2+2+2 = four root ports populated with two devices per root port.
- CXL Interleave: sets x ways, e.g. 2x4 = One set of two modules, interleaved four-way.
- CXL Modes:
 - 1LM + Vol = DDR5 ('1LM') and (volatile) CXL memory visible to SW as separate tiers, separately interleaved.
 - Flat Memory Mode = HW manages data movement between DDR5 and CXL memory, total capacity visible to SW.

Intel® Xeon® 6700-Series Processors with E-Cores DDR5 Memory Population Table

(2 Processors and 32 DIMMs Installed)

1 Processor DIMM Count	Memory Population Sequence
1 Processor and 1 DIMM	P1-DIMMA1

Intel® Xeon® 6700-Series Processors with E-Cores DDR5 Memory Population Table (2 Processors and 32 DIMMs Installed)	
1 Processor and 4 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1
1 Processor and 4 DIMMs	P1-DIMMB1/P1-DIMMD1/P1-DIMMF1/P1-DIMMH1
1 Processor and 8 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMC1/P1-DIMMC2/P1-DIMME1/P1-DIMME2/P1-DIMMG1/P1-DIMMG2
1 Processor and 8 DIMMs	P1-DIMMB1/P1-DIMMB2/P1-DIMMD1/P1-DIMMD2/P1-DIMMF1/P1-DIMMF2/P1-DIMMH1/P1-DIMMH2
1 Processor and 8 DIMMs (*)	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1
1 Processor and 16 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMB1/P1-DIMMB2/P1-DIMMC1/P1-DIMMC2/P1-DIMMD1/P1-DIMMD2/P1-DIMME1/P1-DIMME2/P1-DIMMF1/P1-DIMMF2/P1-DIMMG1/P1-DIMMG2/P1-DIMMH1/P1-DIMMH2
2 Processor DIMM Count (Recommended)	Memory Population Sequence
2 Processors and 2 DIMMs	P1-DIMMA1 P2-DIMMA1
2 Processors and 8 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1 P2-DIMMA1/P2-DIMMC1/P2-DIMME1/P2-DIMMG1
2 Processors and 8 DIMMs	P1-DIMMB1/P1-DIMMD1/P1-DIMMF1/P1-DIMMH1 P2-DIMMB1/P2-DIMMD1/P2-DIMMF1/P2-DIMMH1
2 Processors and 16 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMC1/P1-DIMMC2/P1-DIMME1/P1-DIMME2/P1-DIMMG1/P1-DIMMG2 P2-DIMMA1/P2-DIMMA2/P2-DIMMC1/P2-DIMMC2/P2-DIMME1/P2-DIMME2/P2-DIMMG1/P2-DIMMG2
2 Processors and 16 DIMMs	P1-DIMMB1/P1-DIMMB2/P1-DIMMD1/P1-DIMMD2/P1-DIMMF1/P1-DIMMF2/P1-DIMMH1/P1-DIMMH2 P2-DIMMB1/P2-DIMMB2/P2-DIMMD1/P2-DIMMD2/P2-DIMMF1/P2-DIMMF2/P2-DIMMH1/P2-DIMMH2

Intel® Xeon® 6700-Series Processors with E-Cores DDR5 Memory Population Table (2 Processors and 32 DIMMs Installed)	
2 Processors and 16 DIMMs (*)	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1 P2-DIMMA1/P2-DIMMB1/P2-DIMMC1/P2-DIMMD1/P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1
2 Processors and 32 DIMMs (*)	P1-DIMMA1/P1-DIMMA2/P1-DIMMB1/P1-DIMMB2/P1-DIMMC1/P1-DIMMC2/P1-DIMMD1/P1-DIMMD2/P1-DIMME1/P1-DIMME2/P1-DIMMF1/P1-DIMMF2/P1-DIMMG1/P1-DIMMG2/P1-DIMMH1/P1-DIMMH2 P2-DIMMA1/P2-DIMMA2/P2-DIMMB1/P2-DIMMB2/P2-DIMMC1/P2-DIMMC2/P2-DIMMD1/P2-DIMMD2/P2-DIMME1/P2-DIMME2/P2-DIMMF1/P2-DIMMF2/P2-DIMMG1/P2-DIMMG2/P2-DIMMH1/P2-DIMMH2

Notes:

- The memory configurations with an asterisk (*) are recommended by Supermicro for optimal memory performance.
- DIMMs must be all DDR5-6400 rated RDIMMs.
- All DIMMs in a channel must have the same number of ranks (unless explicitly specified otherwise).
- x8 DIMMs and x4 DIMMs cannot be mixed in the same channel or same processor socket (see the memory support table above).
- Rank mixing is not allowed.
- Vendor mixing is not allowed.

Intel Xeon 6700-Series Processors with P-Cores

DDR5-6400 Memory Support for Intel® Xeon® 6700-Series Processors with P-Cores							
Type	Ranks Per DIMM, Data Width (Stack)	DIMM Capacity (GB)					Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)
		DRAM Density					
		16 Gb		24 Gb		32 Gb	
		1DPC	2DPC	1DPC	2DPC	2DPC	1DPC/2SPC 2DPC/2SPC
						+1.1 V	

DDR5-6400 Memory Support for Intel® Xeon® 6700-Series Processors with P-Cores									
RDIMM	1Rx8	16 GB	-	24 GB	-	-	6400, 6000, 5600, 5200, 4800 (DDR5-6400 rated RDIMMs only)	5200, 4800 (DDR5-6400 rated RDIMMs only)	
	1Rx4	32 GB	-	48 GB	-	-			
	2Rx8	32 GB	32 GB	48 GB	-	-			
	2Rx4	64 GB	64 GB*	96 GB	96 GB*	128 GB*			
3DS RDIMM	4Rx4	-	128 GB	-	-	-	8000, 7200 (MRDIMM-8800 only)	N/A	
	8Rx4	-	256 GB	-	-	-			
MRDIMM	2Rx8	32 GB	-	-	-	-	8000, 7200 (MRDIMM-8800 only)	N/A	
	2Rx4	64 GB	-	-	-	-		N/A	

Note: The items marked with an asterisk (*) are supported in 1S/2S/4S/8S systems. All others support 1S/2S only.

CXL Memory Configuration Support for Intel® Xeon® 6700-Series Processors with P-Cores									
Native DDR5 Memory Per Socket				CXL Memory Per Socket					
Slot 0 DIMM Ranks	Slot 0 DIMM Capacity (GB)	DIMM Type	DRAM Density (Gb)	CXL Memory Channels	CXL Memory Type	CXL Capacity Per Device/Module	CXL Interleave	CXL Mode	4S and 8S support
2Rx4	96	10x4	24	2+2	DDR5 x8	96 GB	1x4*, 2x2, 4x1	1LM+Vol	Yes
2H 3DS	128	10x4	16	2+2	DDR5 x8, DDR x8	128 GB	1x4*, 2x2, 4x1	1LM+Vol	Yes
2Rx4	64	10x4	16	2+2	DDR5 x8	64 GB	hetero x12	Hetero	Yes
2Rx4	64	10x4	16	1+1	DDR5 x16	2ch 64 GB	hetero x12	Hetero	Yes
2Rx4	64	10x4	16	2+2+2+2	DDR5 x8	64 GB	1x8*, 2x4, 4x2	1LM+Vol	No
2Rx4	64	10x4	16	2	DDR5 x8	256 GB	1x2*	1LM+Vol	No

CXL Memory Configuration Support for Intel® Xeon® 6700-Series Processors with P-Cores

2Rx4	64	10x4	16	1+1	DDR4 x16, DDR5 x16	2ch 128 GB	1x2*	Intel Flat Memory Mode	No
------	----	------	----	-----	-----------------------------	---------------	------	------------------------------	----

Notes:

- The items with an asterisk (*) are the default settings in the BIOS.
- The Intel® Xeon® 6700-series processors with P-cores CXL memory configurations are 1DPC ('Slot 0') only for native DDR5.
- CXL Memory Channel: number of devices per root port, with root ports separated by "+," e.g. 2+2+2+2 = four root ports populated with two devices per root port.
- CXL Interleave: sets x ways, e.g. 2x4 = One set of two modules, interleaved four-way.
- CXL Modes:
 - 1LM + Vol = DDR5 ('1LM') and (volatile) CXL memory visible to SW as separate tiers, separately interleaved.
 - Hetero x12 = DDR5 and (volatile) CXL memory interleaved together in one 12-way set.
 - Flat Memory Mode = HW manages data movement between DDR5 and CXL memory, total capacity visible to SW.

Intel® Xeon® 6700-Series Processors with P-Cores DDR5 Memory Population Table

(2 Processors and 32 DIMMs Installed, 1DPC)

1 Processor DIMM Count	Memory Population Sequence (1DPC)
1 Processor and 1 DIMM	P1-DIMMA1
1 Processor and 4 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1 P1-DIMMB1/P1-DIMMD1/P1-DIMMH1/P1-DIMMF1
1 Processor and 8 DIMMs	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1
2 Processor (Recommended)	Memory Population Sequence (1DPC)
2 Processors and 8 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1 P2-DIMMA1/P2-DIMMC1/P2-DIMME1/P2-DIMMG1

Intel® Xeon® 6700-Series Processors with P-Cores DDR5 Memory Population Table	
(2 Processors and 32 DIMMs Installed, 1DPC)	
2 Processors and 8 DIMMs	P1-DIMMB1/P1-DIMMD1/P1-DIMMF1/P1-DIMMH1 P2-DIMMB1/P2-DIMMD1/P2-DIMMF1/P2-DIMMH1
2 Processors and 16 DIMMs	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1 P2-DIMMA1/P2-DIMMB1/P2-DIMMC1/P2-DIMMD1/P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1

Intel® Xeon® 6700-Series Processors with P-Cores DDR5 Memory Population Table	
(2 Processors and 32 DIMMs Installed, 2DPC)	
1 Processor DIMM Count	Memory Population Sequence (2DPC)
1 Processor and 1 DIMM	P1-DIMMA1
1 Processor and 4 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1 P1-DIMMB1/P1-DIMMD1/P1-DIMMF1/P1-DIMMH1
1 Processor and 8 DIMMs	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1 P1-DIMMA1/P1-DIMMA2/P1-DIMMC1/P1-DIMMC2/P1-DIMME1/P1-DIMME2/P1-DIMMG1/P1-DIMMG2 P1-DIMMB1/P1-DIMMB2/P1-DIMMD1/P1-DIMMD2/P1-DIMMF1/P1-DIMMF2/P1-DIMMH1/P1-DIMMH2
1 Processor and 12 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMB1/P1-DIMMC1/P1-DIMMC2/P1-DIMMD1/P1-DIMME1/P1-DIMME2/P1-DIMMF1/P1-DIMMG1/P1-DIMMG2/P1-DIMMH1
1 Processor and 16 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMB1/P1-DIMMB2/P1-DIMMC1/P1-DIMMC2/P1-DIMMD1/P1-DIMMD2/P1-DIMME1/P1-DIMME2/P1-DIMMF1/P1-DIMMF2/P1-DIMMG1/P1-DIMMG2/P1-DIMMH1/P1-DIMMH2
2 Processor DIMM Count (Recommended)	Memory Population Sequence (2DPC)
2 Processors and 2 DIMMs	P1-DIMMA1 P2-DIMMA1

Intel® Xeon® 6700-Series Processors with P-Cores DDR5 Memory Population Table	
(2 Processors and 32 DIMMs Installed, 2DPC)	
2 Processors and 8 DIMMs	P1-DIMMA1/P1-DIMMC1/P1-DIMME1/P1-DIMMG1 P2-DIMMA1/P2-DIMMC1/P2-DIMME1/P2-DIMMG1
2 Processors and 8 DIMMs	P1-DIMMB1/P1-DIMMD1/P1-DIMMF1/P1-DIMMH1 P2-DIMMB1/P2-DIMMD1/P2-DIMMF1/P2-DIMMH1
2 Processors and 16 DIMMs	P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1/P1-DIMME1/P1-DIMMF1/P1-DIMMG1/P1-DIMMH1 P2-DIMMA1/P2-DIMMB1/P2-DIMMC1/P2-DIMMD1/P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1
2 Processors and 16 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMC1/P1-DIMMC2/P1-DIMME1/P1-DIMME2/P1-DIMMG1/P1-DIMMG2 P2-DIMMA1/P2-DIMMA2/P2-DIMMC1/P2-DIMMC2/P2-DIMME1/P1-DIMME2/P2-DIMMG1/P2-DIMMG2
2 Processors and 16 DIMMs	P1-DIMMB1/P1-DIMMB2/P1-DIMMD1/P1-DIMMD2/P1-DIMMF1/P1-DIMMF2/P1-DIMMH1/P1-DIMMH2 P2-DIMMB1/P2-DIMMB2/P2-DIMMD1/P2-DIMMD2/P2-DIMMF1/P2-DIMMF2/P2-DIMMH1/P2-DIMMH2
2 Processors and 24 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMB1/P1-DIMMC1/P1-DIMMC2/P1-DIMMD1/P1-DIMME1/P1-DIMME2/P1-DIMMF1/P1-DIMMG1/P1-DIMMG2/P1-DIMMH1 P2-DIMMA1/P2-DIMMA2/P2-DIMMB1/P2-DIMMC1/P2-DIMMC2/P2-DIMMD1/P2-DIMME1/P2-DIMME2/P2-DIMMF1/P2-DIMMG1/P2-DIMMG2/P2-DIMMH1
2 Processors and 32 DIMMs	P1-DIMMA1/P1-DIMMA2/P1-DIMMB1/P1-DIMMB2/P1-DIMMC1/P1-DIMMC2/P1-DIMMD1/P1-DIMMD2/P1-DIMME1/P1-DIMME2/P1-DIMMF1/P1-DIMMF2/P1-DIMMG1/P1-DIMMG2/P1-DIMMH1/P1-DIMMH2 P2-DIMMA1/P2-DIMMA2/P2-DIMMB1/P2-DIMMB2/P2-DIMMC1/P2-DIMMC2/P2-DIMMD1/P2-DIMMD2/P2-DIMME1/P2-DIMME2/P2-DIMMF1/P2-DIMMF2/P2-DIMMG1/P2-DIMMG2/P2-DIMMH1/P2-DIMMH2

Notes:

- DIMMs must be all DDR5 RDIMM or all MRDIMMs.
- All DIMMs in a channel must have the same number of ranks (unless explicitly specified otherwise).
- x8 DIMMs and x4 DIMMs cannot be mixed in the same channel or same processor socket (see the memory support table above).
- Mixing of non-3DS and 3DS RDIMMs is not allowed in the same channel, across different channels, and across different sockets.
- 9x4 RDIMMs cannot be mixed with other DIMMs.
- All DDR5 DIMM must be in the same speed per processor socket.
- Rank mixing is not allowed.
- Mixing of DDR5 operating frequencies is not validated within a socket or across sockets by Intel. When DIMMs with different maximum frequencies are mixed in the same channel or across different channels across processor sockets, BIOS determines and sets the DIMM speed to the highest common frequency across all channels on the platform. For example, if a 6000 MT/s max frequency DIMM is installed in one channel and a 6400 MT/s max frequency DIMM in another, BIOS sets the platform speed to 6000 MT/s.
- Mixing memory made by different vendors is allowed for both RDIMM and 3DS RDIMM.
- The 1-DIMM per processor configuration supports only 16 GB 1Rx8 and 32 GB 2Rx8 modules.

General Guidelines for Optimizing Memory Performance

- It is recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will support an odd number amount of memory modules. However, to achieve the best memory performance, a balanced memory population is recommended.

DIMM Installation

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in "[Static-Sensitive Devices](#)" on [page 52](#).

1. Insert the desired number of DIMMs into the memory slots based on the recommended DIMM population table earlier in this section.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.

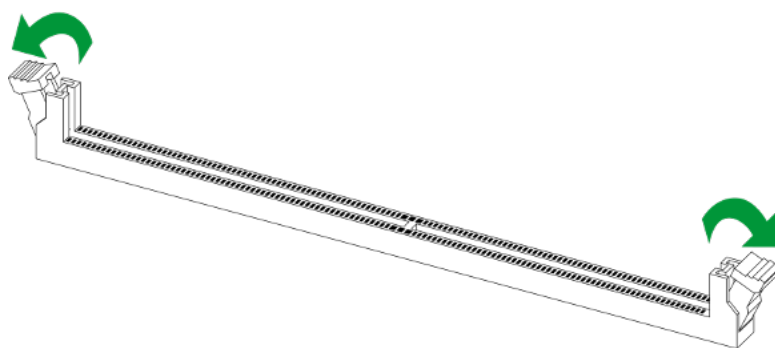


Figure 3-48. Unlocking the DIMM Slot

3. Align the key of the DIMM with the receptive point on the memory slot.

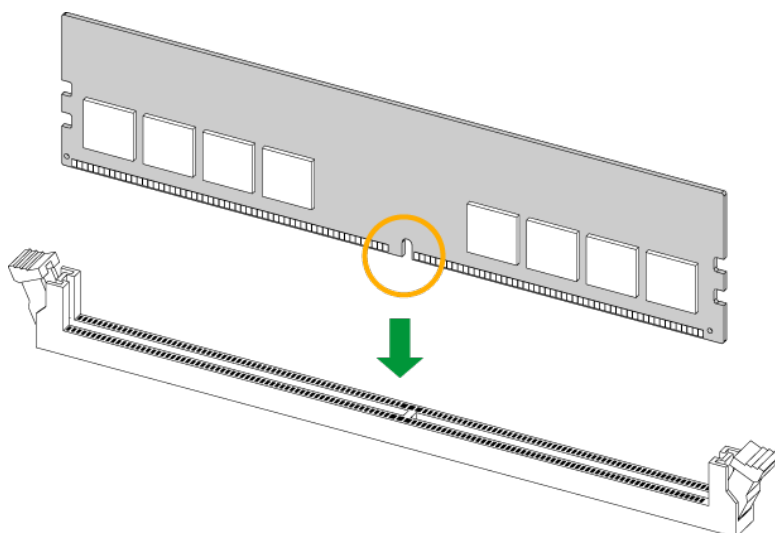


Figure 3-49. Aligning the DIMM Slot with the Receptive Point

- Align the notches on both ends of the module against the receptive points on the ends of the slot.

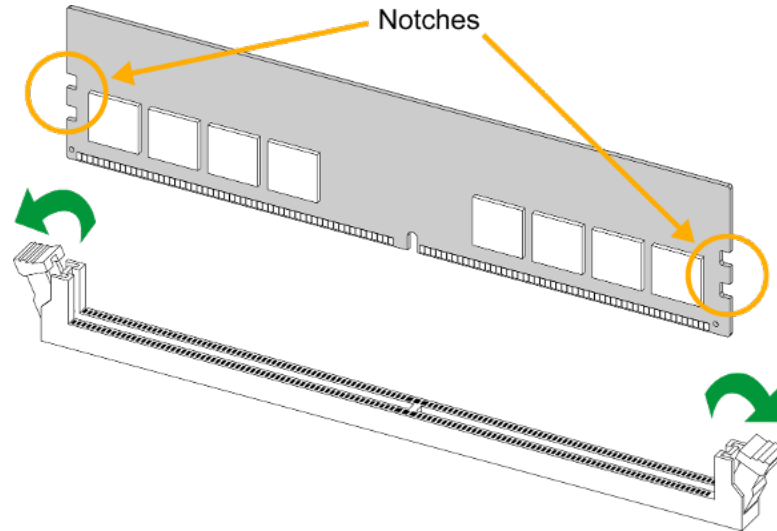


Figure 3-50. Aligning the Notches

- Press both ends of the module straight down into the slot until the module snaps into place.
- Press the release tabs to the lock positions to secure the DIMM into the slot.

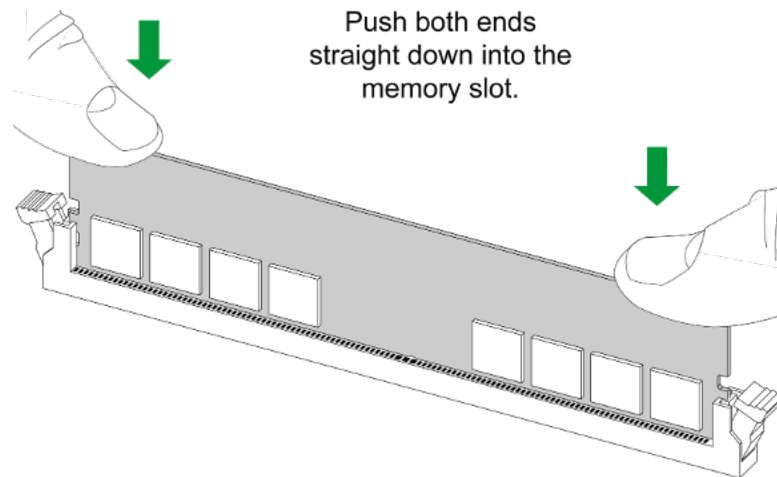


Figure 3-51. Securing the DIMM

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

DIMM Removal

Important: To avoid causing any damage to the memory module or the DIMM socket, do not use excessive force when pressing the release tabs on the ends of the DIMM socket. Handle memory modules with care. To avoid ESD-related damage to your memory modules or components, carefully follow all the instructions given in "[Static-Sensitive Devices](#)" on [page 52](#).

Press both release tabs on the ends of the DIMM socket to unlock it. Once the DIMM is loosened, remove it from the memory slot.

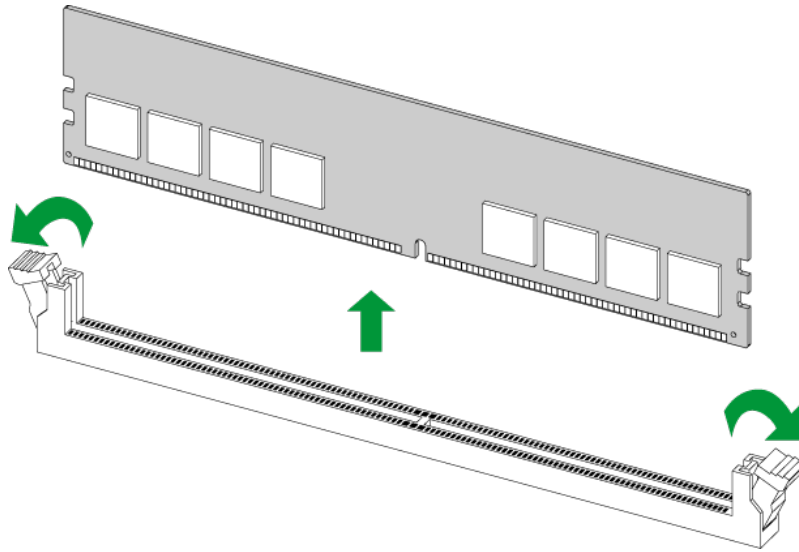


Figure 3-52. Unlocking the DIMM Slot

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on [page 27](#).

3.6 Motherboard Battery Removal and Installation

Battery Removal

To remove the onboard battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Place the system on a workbench.
3. Remove the top cover from the system.
4. Locate the onboard battery as shown below.
5. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out from the holder.
6. Remove the battery.

Proper Battery Disposal

Important: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

Battery Installation

To install an onboard battery, follow steps 1 and 2 above and continue below:

Important: When replacing a battery, be sure to only replace it with the same type.

1. Identify the battery's polarity. The positive (+) side should be facing up.
2. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.

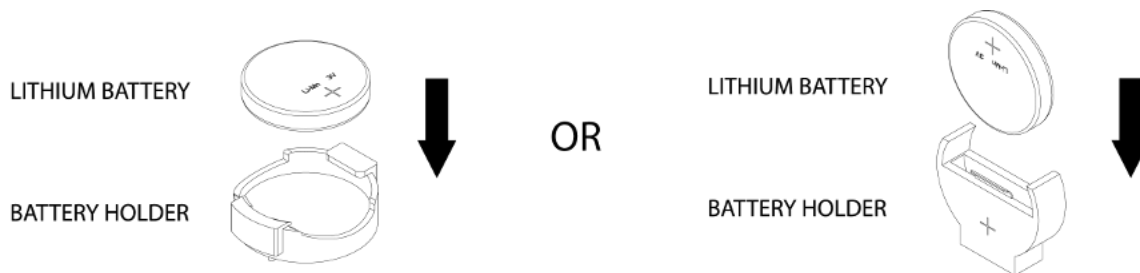


Figure 3-53. Installing a Battery

3.7 Storage Drives

The storage drives are mounted in tool-less drive carriers that simplify their removal from the chassis. These carriers also help promote proper airflow. For compatible storage drives, see the [SYS-222H-TN product page](#).

Installing Drives



Figure 3-54. Logical Drive Numbers

Removing a Hot-Swap Drive Carrier from the Chassis

1. Press the release button on the drive carrier, which will extend the drive carrier handle.
2. Use the drive carrier handle to pull the drive out of the chassis.

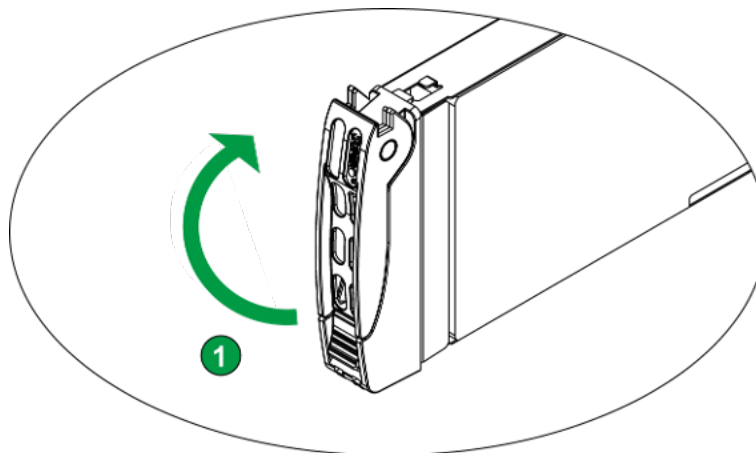


Figure 3-55. Removing a Drive Carrier

Hot-Swap for NVMe Drives

Supermicro servers support NVMe surprise hot-swap. For even better data security, NVMe orderly hot-swap is recommended. NVMe drives can be ejected and replaced remotely using BMC.

Note: If you are using VROC, see [Intel Virtual RAID on CPU \(VROC\)](#) in this manual instead.

Ejecting a Drive

1. **BMC > Server Health > NVMe SSD**
2. Select Device, Group, and Slot, and click **Eject**. After ejecting, the drive Status LED indicator turns green.
3. Remove the drive.

Note that Device and Group are categorized by the CPLD design architecture.

A Slot is the slot number on which the NVMe drives are mounted.

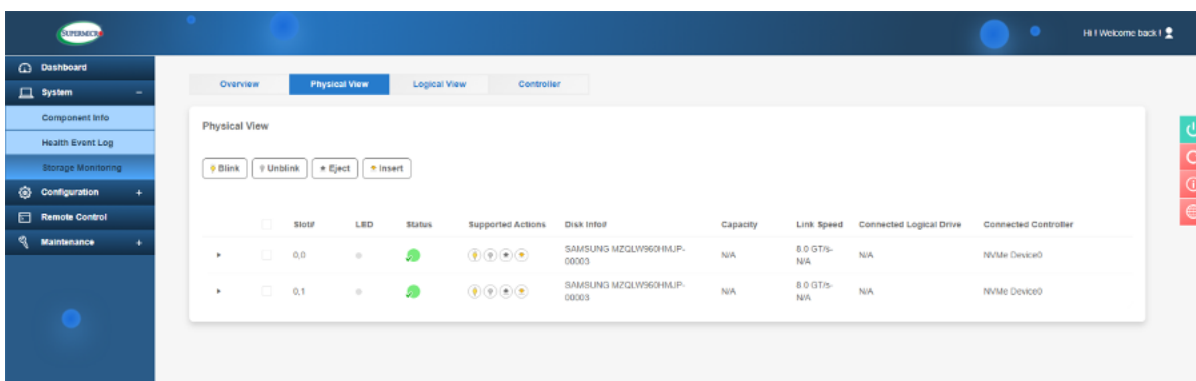


Figure 3-56. BMC Screenshot

Replacing a Drive

1. Insert the replacement drive.
2. **BMC > System > Storage Monitor > Physical View**
3. Select Device, Group, and slot and click **Insert**. The drive Status LED indicator flashes red, then turns off. The Activity LED turns blue.

3.8 Boot Drives

Before following the procedure below to install M.2 solid state drives, first turn off and remove power from the system as described in ["Removing Power"](#) on page 49 then remove the top cover.

Installing M.2 Solid State Drives on Motherboard

The X14DBM-SP motherboard has two hybrid PCIe 5.0 M.2 slots (M.2-C1, M.2-C2). M.2 allows for a variety of card sizes, increased functionality, and spatial efficiency.

The M.2 slot on the motherboard supports PCIe 5.0 x2 devices in the 2280 and 22110 form factors.

Important: M.2 slots are intended to be used for boot devices only. Any write intensive workloads may result in thermal issues and the M.2s overheating.

Installing M.2 SSDs

1. Remove power from the system and then remove the top cover as described in [Removing Power](#) and [Accessing the System](#).
2. Locate the plastic clips that will lock the M.2 SSD in place.
3. Determine whether your M.2 SSD is 80 mm or 110 mm. If the plastic clip is not in the correct hole, move it.
 - a. To remove the plastic clip, twist it 90° degrees and pull up.
 - b. To insert the plastic clip, push it into the correct mounting hole and twist 90° degrees.

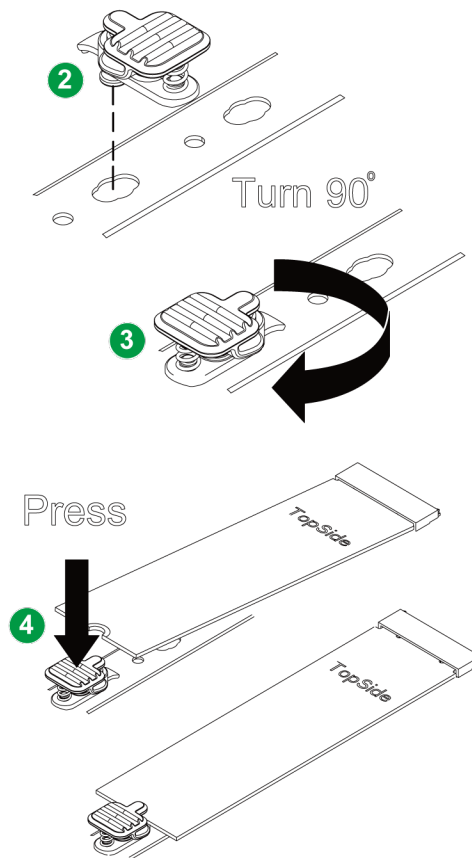


Figure 3-57. Installing a Plastic Locking Clip and M.2 SSD

4. Insert the M.2 sideways into the connector so that it lays flat, then secure it to the motherboard with the plastic clip.
5. Replace the cover and restore the power to the system.

3.9 System Cooling

Refer to the following sections for information about the cooling capabilities of the SYS-222H-TN server.

Fans

Four 8-cm heavy-duty fans provide cooling for the SYS-222H-TN server.

Fans are hot-swappable and can be replaced without powering down the system. The electrical connections are automatically made when a fan is inserted into its slot. Make sure the chassis cover is only off for a short time and makes a good seal when replaced for the cooling air to circulate properly through the system.

Changing a System Fan

1. Determine which fan is failing. If possible, use BMC. If not, extend the system from the chassis rack and remove the chassis cover while the power is on. Examine the fans to determine which one has failed.
2. Squeeze the fan tabs of the failed fan and lift the fan housing up and out of the chassis.
3. To install a fan, push it into the proper location until it clicks.
4. Finish by fully closing the cover and pushing the system back into the rack.

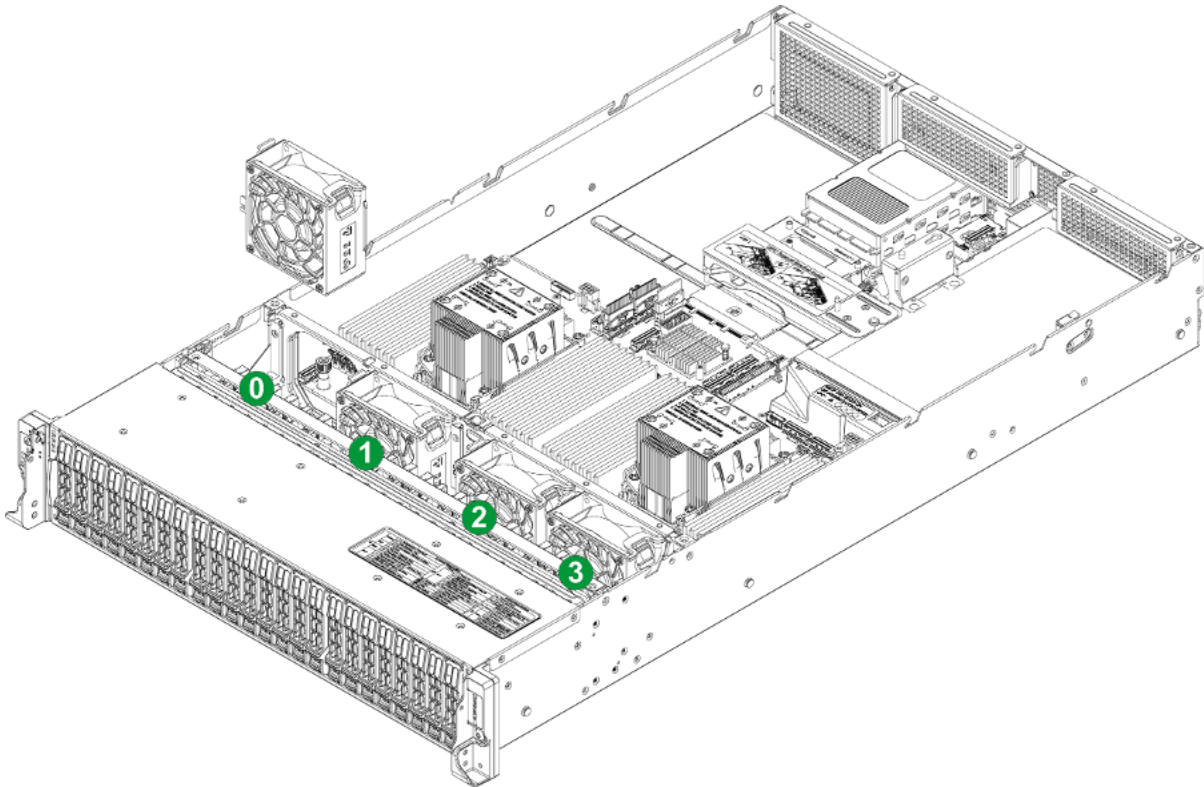


Figure 3-58. Installing a Fan (positions indicated)

Air Shrouds

Air shrouds concentrate airflow to maximize fan efficiency. The SYS-222H-TN server includes one air shroud for each processor.

Air Shroud for Memory (CPU1/2)

Two air shrouds cool the DIMM slots controlled by CPU1 and CPU2 (see figure below).

1. Remove power from the system, remove the system from the rack, and remove the cover as described under "[Maintenance and Component Installation](#)" on page 47.
2. Place each air shroud over 16 DIMM slots at a time for both CPU1 and CPU2-controlled DIMM slots, as illustrated below.
3. Close the cover and push the system back into the rack.

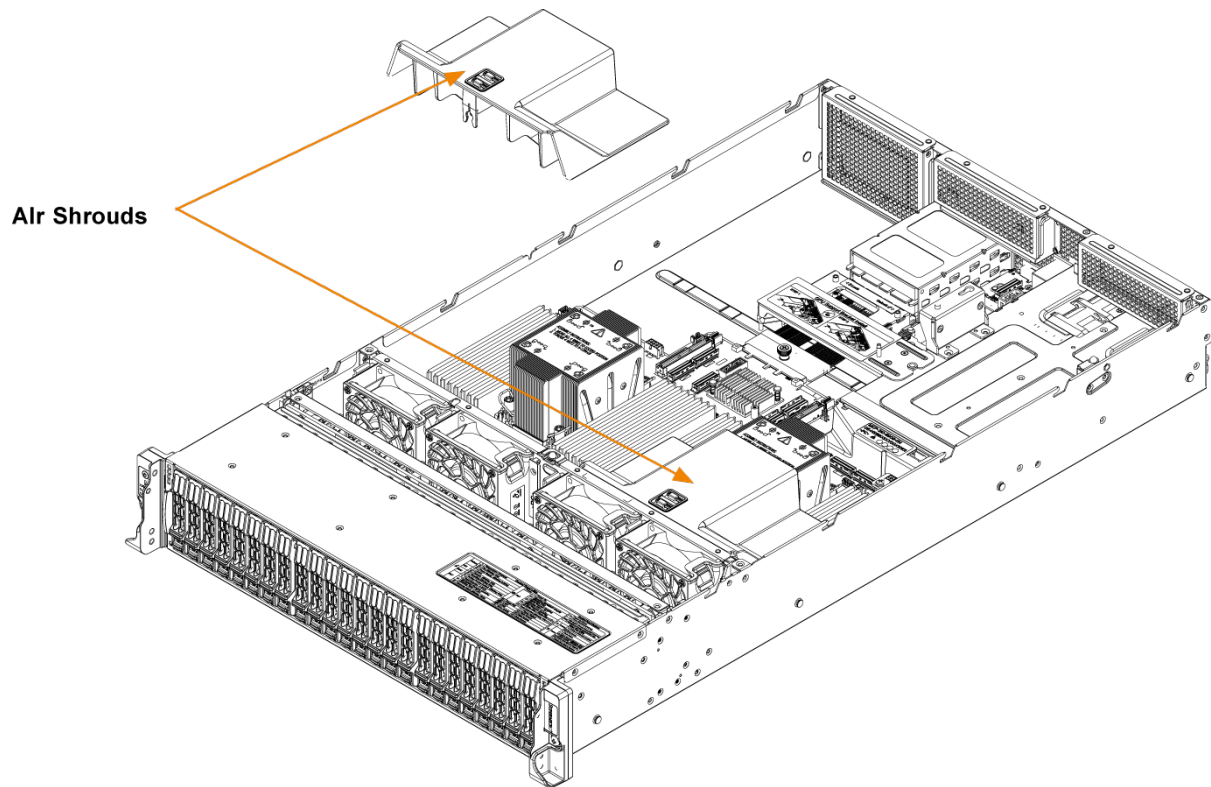


Figure 3-59. Installing Air Shrouds for CPU1/2 DIMMs

3.10 Expansion Cards

The SuperServer SYS-222H-TN can support up to eight expansion cards.

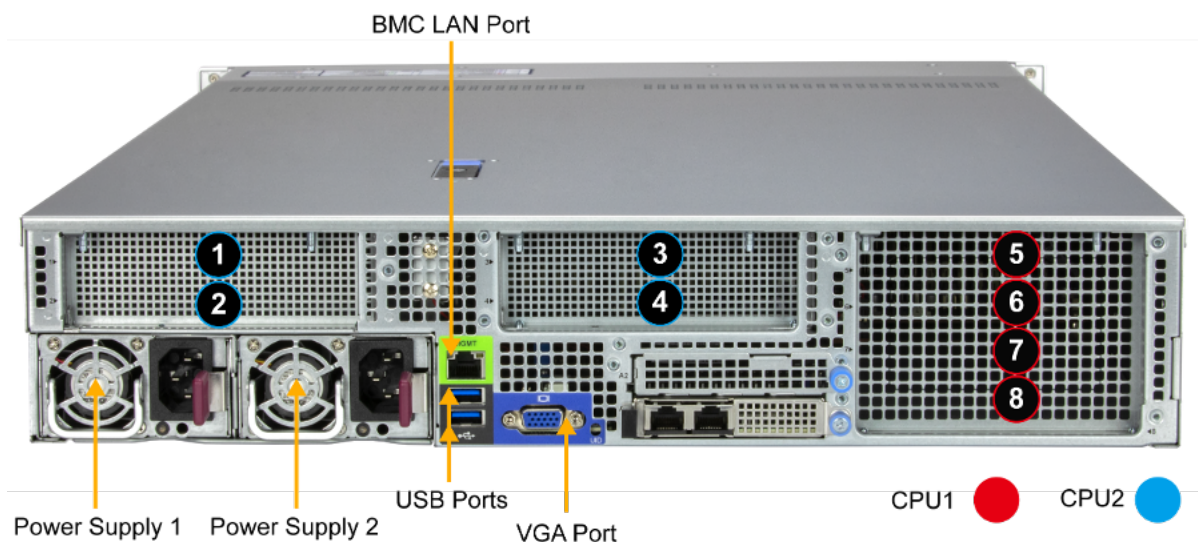


Figure 3-60. Expansion Card Slots

Expansion Card Slot Configurations

Enabling any of the eight expansion card slots in this system requires optional parts that are sold separately. See below for expansion card slot configuration ordering information.

Each expansion card slot is assigned to specific motherboard PCIe x8 MCIO connectors or PCIe x16 slots. The following table shows the possible expansion card slot configuration options and the corresponding motherboard PCIe connector assignment.

Expansion Card Slot Configurations		
Slot Configurations	Slot Width	Motherboard Connection
Up to eight PCIe x8 slots	Slot 1: PCIe x8	Cable connection from JPCIE6A1 (CPU2)
	Slot 2: PCIe x8	Cable connection from JPCIE6B1 (CPU2)
	Slot 3: PCIe x8	Cable connection from JPCIE5(CPU2)
	Slot 4: PCIe x8	Cable connection from JPCIE5(CPU2)
	Slot 5: PCIe x8	Cable connection from JPCIE2A1 (CPU1)
	Slot 6: PCIe x8	Cable connection from JPCIE2B1 (CPU1)
	Slot 7: PCIe x8	Edge connection from JPCIE1 (CPU1)
	Slot 8: PCIe x8	Edge connection from JPCIE1 (CPU1)

Expansion Card Slot Configurations		
Slot Configurations	Slot Width	Motherboard Connection
Up to four PCIe x16 slots	Slot 1: PCIe x16	Cable connection from JPCIE6A1 + JPCIE6B1 (CPU2)
	Slot 2: No connection	No connection
	Slot 3: PCIe x16	Cable connection from JPCIE5 (CPU2)
	Slot 4: No connection	No connection
	Slot 5: PCIe x16	Cable connection from JPCIE2A1 + JPCIE2B1 (CPU1)
	Slot 6: No connection	No connection
	Slot 7: PCIe x16	Edge connection from JPCIE1 (CPU1)
	Slot 8: No connection	No connection

Before following the procedure below to install expansion cards, first turn off and remove power from the system as described in [Removing Power](#) and then remove the top cover.

Installing Expansion Cards

1. Remove any slimline SAS cables connected to the riser card and pull up the riser card brackets.
2. Looking from the node rear, open the clip of each slot on the right.
3. Remove the blank PCI shield from the chassis.
4. Slide the expansion card shield into the open shield slot while plugging the expansion card into the riser card.

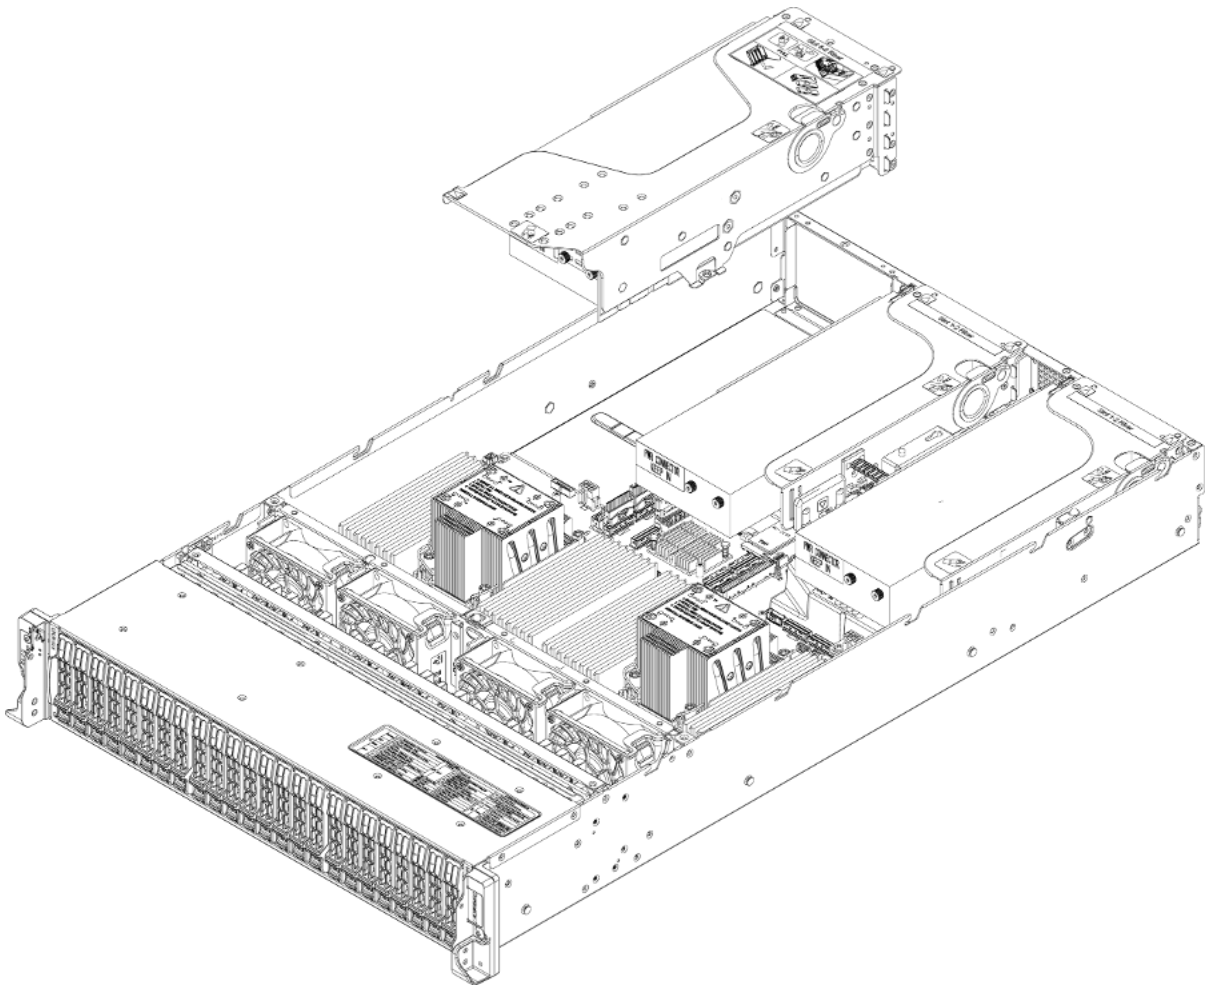


Figure 3-61. Installing Expansion Cards

3.11 AIOM Cards

The SYS-222H-TN server supports up to two AIOM/OCP NIC 3.0 network port cards. The second AIOM slot A2 is optional.

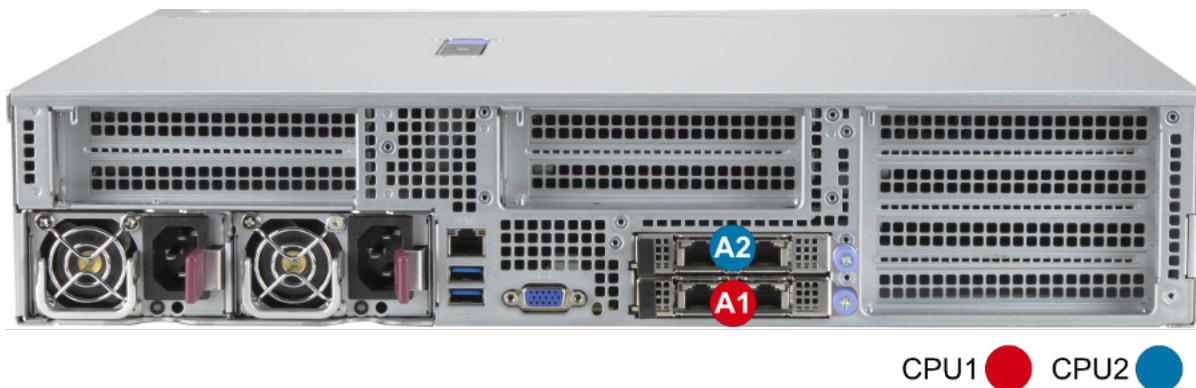


Figure 3-62. AIOM Chassis Slot

AIOM Configuration			
Slot	Mechanical	Electrical	Slot Class
A1	Small Form Factor, OCP 3.0	x16 (CPU1)	Up to 50 W*
A2 (Optional)	Small Form Factor, OCP 3.0	x8 (CPU2)	Up to 35 W*

*AIOM cards exceeding the 15 W slot class may require restricted conditions to meet thermal specifications of the AIOM card. Contact your Supermicro account representative for more information.

Installing AIOMs

1. Remove power as described in [Removing Power](#).
2. Remove the blank cover plate (A1 or A2), unscrewing the thumbscrew.
3. Slide the AIOM card in the opening until it seats in the AIOM board slot.
4. Secure with the thumbscrew.

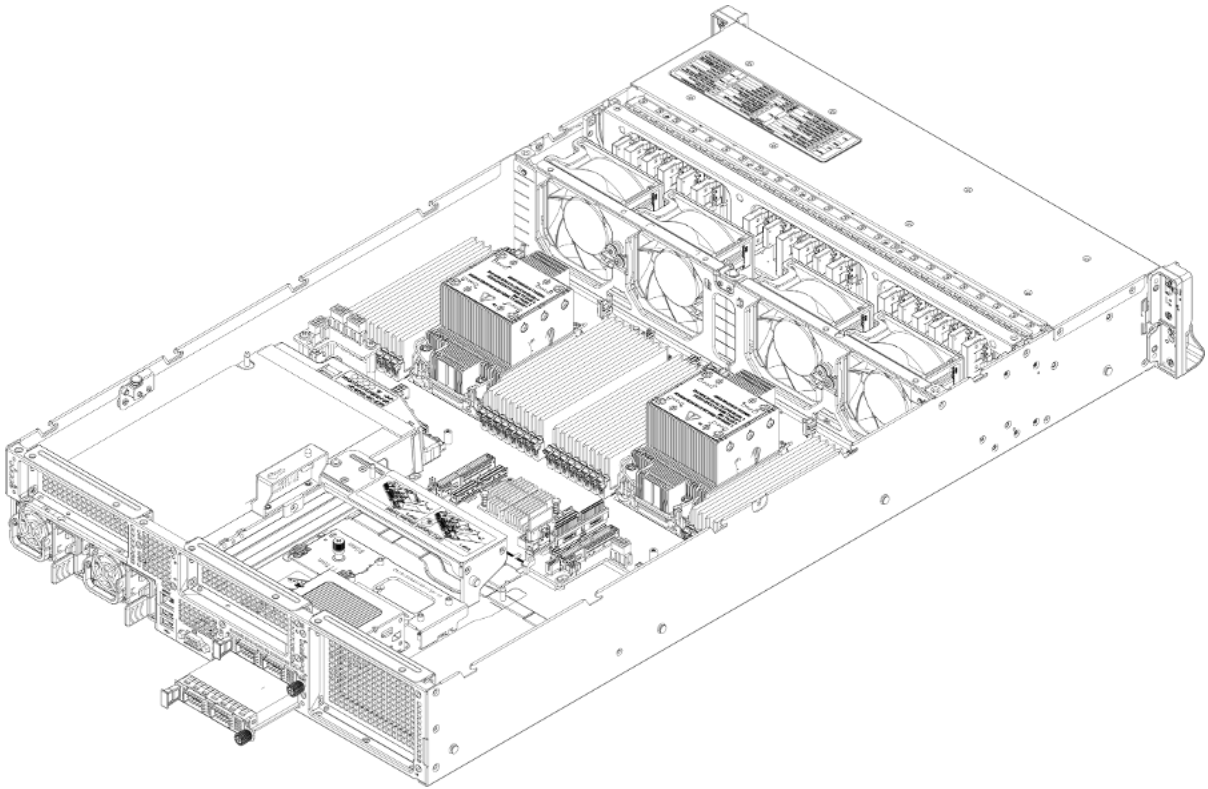


Figure 3-63. Installing AIOMs

3.12 Cable Routing Diagrams

The below diagrams indicate the cable routing for the storage, PCIe, I/O, and power cables. When disconnecting cables to add or replace components, refer to the diagrams so you can reroute them in the same manner. If cables are not connected or routed properly it may lead to device detection or performance issues.

SYS-222H-TN Storage Cables - NVMe

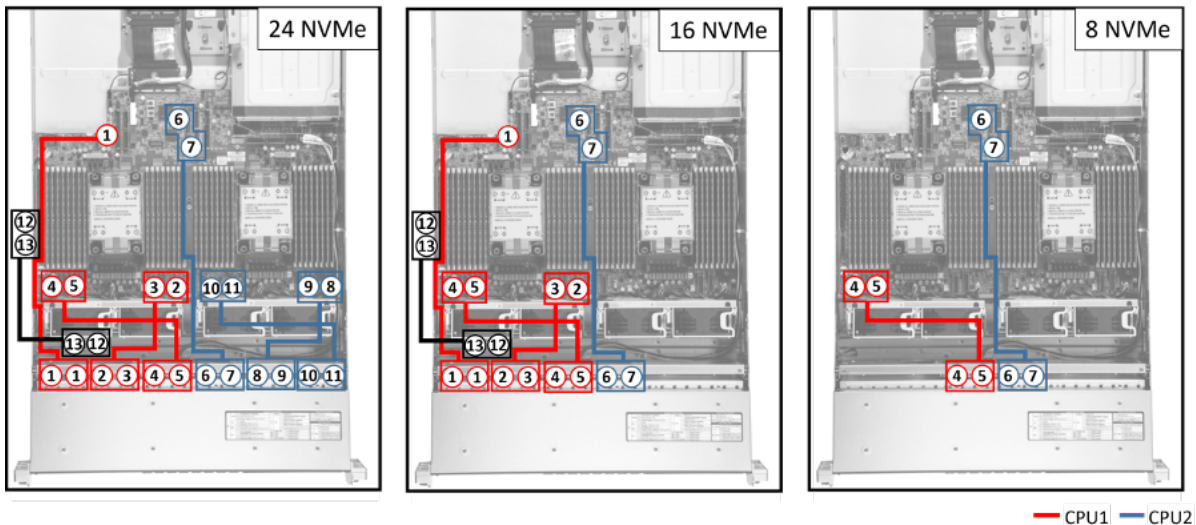


Figure 3-64. Storage Cables - NVMe

SYS-222H-TN Storage Cables - NVMe				
Cable	Cable Part Number	Connection From	Connection To	Reference
1	CBL-GN24-1255CM5Y	Motherboard, JPCIE1	Left Backplane, NVME1 & NVME2	Drives 0-3
2	CBL-MCIO-1225M5L	Motherboard, P1_ NVME0	Left Backplane, NVME3	Drives 4-5
3	CBL-MCIO-1225M5L	Motherboard, P1_ NVME1	Left Backplane, NVME4	Drives 6-7
4	CBL-MCIO-1229M5LFL	Motherboard, P1_ NVME2	Mid Backplane, NVME1	Drives 8-9
5	CBL-MCIO-1234M5L	Motherboard, P1_ NVME3	Mid Backplane, NVME2	Drives 10-11
6	CBL-MCIO-1237M5-M	Motherboard, JPCIE3A1	Mid Backplane, NVME3	Drives 12-13

SYS-222H-TN Storage Cables - NVMe				
Cable	Cable Part Number	Connection From	Connection To	Reference
7	CBL-MCIO-1237M5-M	Motherboard, JPCIE4B1	Mid Backplane, NVME4	Drives 14-15
8	CBL-MCIO-1432M5FLE	Motherboard, P2_NVME0	Right Backplane, NVME1	Drives 16-17
9	CBL-MCIO-1225M5L	Motherboard, P2_NVME1	Right Backplane, NVME2	Drives 18-19
10	CBL-MCIO-1432M5FLE	Motherboard, P2_NVME2	Right Backplane, NVME3	Drives 20-21
11	CBL-MCIO-1234M5L	Motherboard, P2_NVME3	Right Backplane, NVME4	Drives 22-23
12	CBL-CDAT-1062	Motherboard, JNVI2C1	Left Backplane, JIPMB1	NVMe SMBus for Drives 0-7
13	CBL-CDAT-1062	Motherboard, JNVVPP1	Left Backplane, JIPMB2	NVMe VPP for Drives 0-7

**This cable connection provides a NVMe SMBus and/or NVMe VPP bus communication links between the system and the storage backplane. NVMe devices attached to the storage backplane may have detection or hot-swap issues if this cable not connected properly.

SYS-222H-TN Storage Cables - SAS/SATA

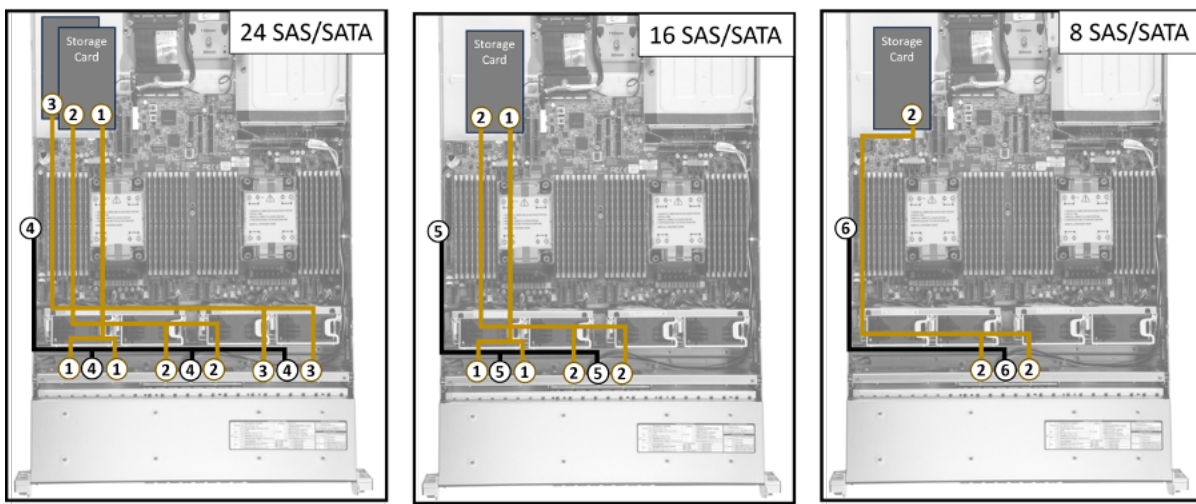


Figure 3-65. Storage Cables - SAS/SATA

SYS-222H-TN Storage Cables - SAS/SATA				
Cable	Cable Part Number	Connection From	Connection To	Reference
1	CBL-SAST-1264F-100	Storage Card, CN0	Left Backplane, CN1 & CN2	Drives 0-7
2	CBL-SAST-1276F-100	Storage Card, CN1 or CN0	Mid Backplane, CN1 & CN2	Drives 8-15
3	CBL-SAST-1296F-100	Storage Card, CN0	Right Backplane, CN1 & CN2	Drives 16-23
4	CBL-CDAT-1062T-62	Motherboard, JNVI2C1	Left, Mid, & Right Backplanes, JIPMB1	I ² C connection to Backplanes
5	CBL-CDAT-1062Y-45	Motherboard, JNVI2C1	Left & Mid Backplanes, JIPMB1	I ² C connection to Backplanes
6	CBL-CDAT-1062	Motherboard, JNVI2C1	Mid Backplane, JIPMB1	I ² C connection to Backplane

PCIe Cables - PCIe x8 Expansion Card Slot Configurations

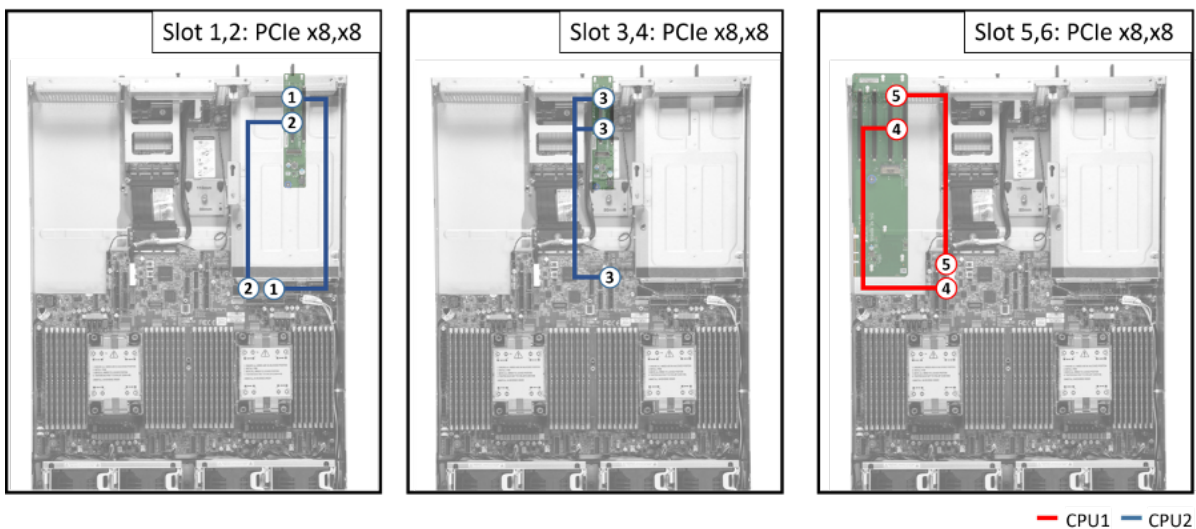


Figure 3-66. Expansion Card Slots (x8, x8)

PCIe Cables - PCIe x8 Expansion Card Slots				
Cable	Cable Part Number	Connection From	Connection To	Reference
1	CBL-MCIO-1235M5R	Motherboard, JPCIE6A1	Riser Card, JPCIE1A1	Expansion Card Slot 1 (x8)

PCIe Cables - PCIe x8 Expansion Card Slots				
Cable	Cable Part Number	Connection From	Connection To	Reference
2	CBL-MCIO-1227M5	Motherboard, JPCIE6B1	Riser Card, JPCIE2A1	Expansion Card Slot 2 (x8)
3	CBL-GNZ4-1222M5YR27	Motherboard, JPCIE5	Riser Card, JPCIE1A1 & JPCIE2A1	Expansion Card Slot 3,4 (x8,x8)
4	CBL-MCIO-1218M5-1	Motherboard, JPCIE2A1	Riser Card, JPCIE1A1	Expansion Card Slot 5 (x8)
5	CBL-MCIO-1227M5	Motherboard, JPCIE2B1	Riser Card, JPCIE2A1	Expansion Card Slot 6 (x8)

PCIe Cables - PCIe x16 Expansion Card Slot Configurations

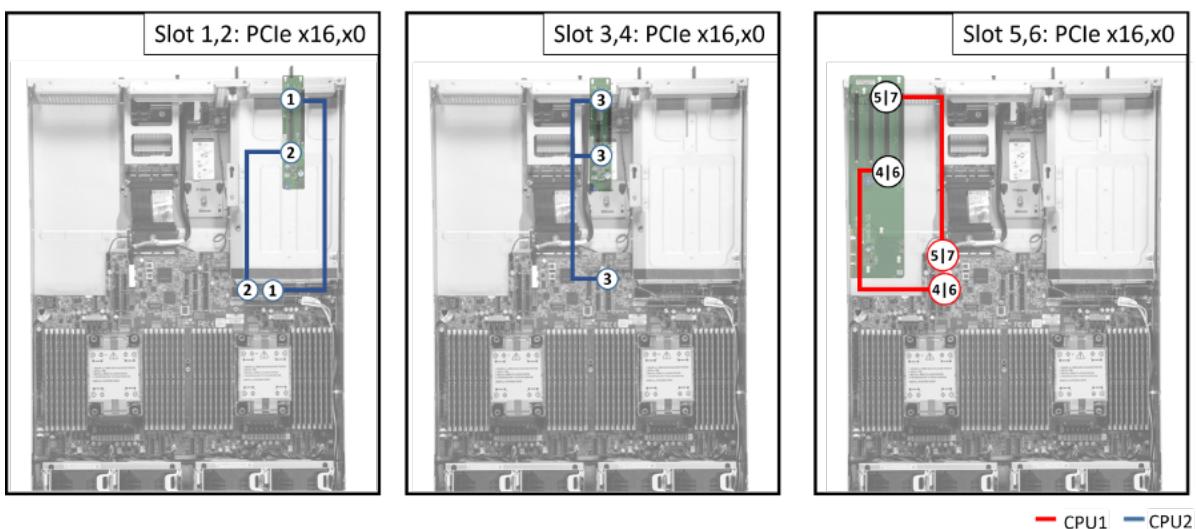


Figure 3-67. Expansion Card Slots (x16, x0)

PCIe Cables - PCIe x16 Expansion Card Slots				
Cable	Cable Part Number	Connection From	Connection To	Reference
1	CBL-MCIO-1235M5R	Motherboard, JPCIE6A1	Riser Card, JPCIE1A1	Expansion Card Slot 1 (x16)
2	CBL-MCIO-1220M5R	Motherboard, JPCIE6B1	Riser Card, JPCIE1B1	

PCIe Cables - PCIe x16 Expansion Card Slots				
Cable	Cable Part Number	Connection From	Connection To	Reference
3	CBL-GNZ4-1217M5YRR27	Motherboard, JPCIE5	Riser Card, JPCIE1A1 & JPCIE1B1	Expansion Card Slot 3 (x16)
4	CBL-MCIO-1226M5R-1	Motherboard, JPCIE2A1	Riser Card (RSC-H-68G5), JPCIE1A1	Expansion Card Slot 5 (x16)
5	CBL-MCIO-1322RM5LF	Motherboard, JPCIE2B1	Riser Card (RSC-H-68G5), JPCIE1B1	
6	CBL-MCIO-1218M5-1	Motherboard, JPCIE2A1	Riser Card (RSC-H2-6888G5L), JPCIE1A1	
7	CBL-MCIO-1222M5LF	Motherboard, JPCIE2B1	Riser Card (RSC-H2-6888G5L), JPCIE1B1	

PCIe Cables - AIOM/OCP 3.0 NIC Slots

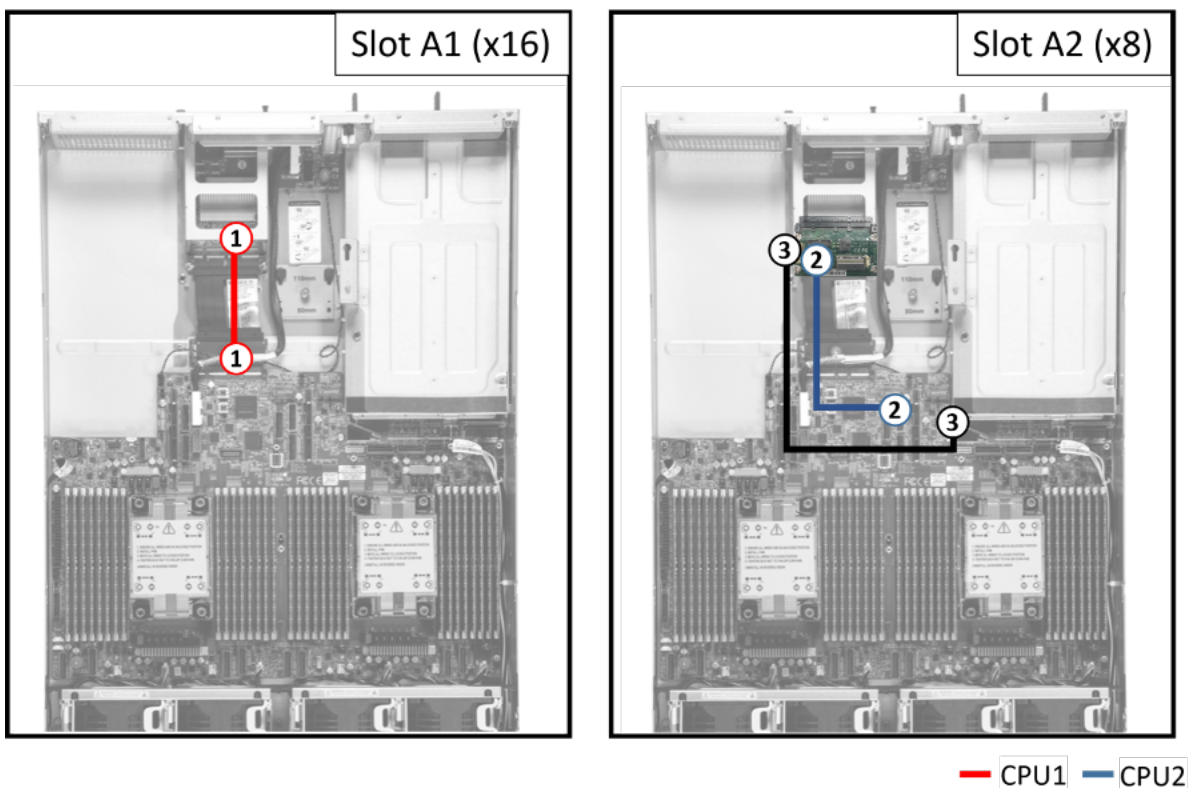


Figure 3-68. AIOM/OCP 3.0 NIC Slots

PCIe Cables - AIOM/OCP 3.0 NIC Slots				
Cable	Cable Part Number	Connection From	Connection To	Reference
1	CBL-GNZ5-1307	Motherboard, JAIOM1	AIOM/OCP 3.0 NIC	AIOM/OCP 3.0 NIC Slot A1 (x16)
2	CBL-MCIO-1221M5	Motherboard, JPCIE4A1	AIOM Board, JPCIE1A1	AIOM/OCP 3.0 NIC Slot A2 (x8)
3	CBL-CDAT-1060-30	Motherboard, JAIOM2SB1	AIOM Board, JAIOM2SB1	AIOM Board Sideband & Power

I/O Board Cable

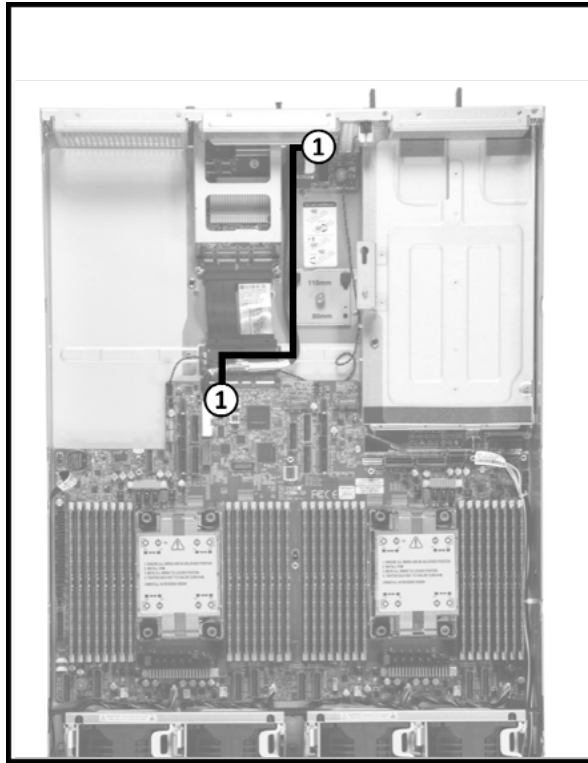


Figure 3-69. I/O Board Cable

I/O Board Cable				
Cable	Cable Part Number	Connection From	Connection To	Reference
1	CBL-LPST-1230REL4R	Motherboard, JIO1	I/O Board, JIO1	I/O Board VGA, USB, BMC LAN

Power Cables

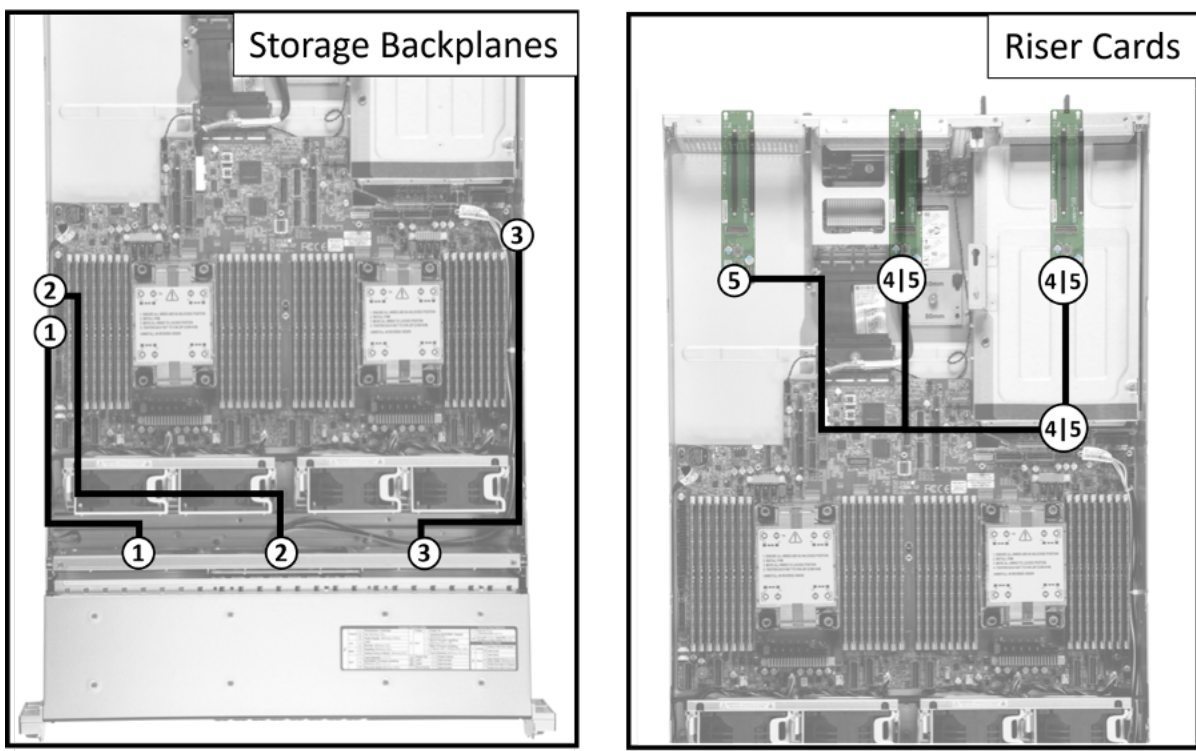


Figure 3-70. Power Cables

Power Cables				
Cable	Cable Part Number	Connection From	Connection To	Reference
1	CBL-PWEX-1142B-40	Motherboard, JPMW9	Left Backplane, JPWR1	Power for Drives 0-7
2	CBL-PWEX-1364-50	Motherboard, JPMW8	Mid Backplane, JPWR1	Power for Drives 8-15
3	CBL-PWEX-1142B-40	Motherboard, JPMW1	Right Backplane, JPWR1	Power for Drives 16-23
4	CBL-PWEX-1136YB-25	Motherboard, JPMW3	Right & Mid Riser Cards, JPWR1	Power for Expansion Card Slots 1-4

Power Cables				
Cable	Cable Part Number	Connection From	Connection To	Reference
5	CBL-PWEX-1136YVB-45	Motherboard, JPMW3	Left, Right, & Mid Riser Cards, JPWR1	Power for Expansion Card Slots 1-6

3.13 Power Supply

The system includes two hot-plug power supply modules. These modules will automatically sense and operate at an input voltage between 100 V to 240 V. Note that different input voltages will result in different maximum power output levels.

In the event of a power module failure, the other power module will continue to power the system on its own. Failed power supply modules can be replaced without powering down the system. Replacement modules can be ordered directly from Supermicro.

An amber light on the power supply is illuminated when the power is switched off. A green light indicates that the power supply is operating.

Replacing the Power Supply

1. Unplug the AC power cord from the failed power supply module.
2. Push and hold the release tab on the back of the power supply.
3. Grasp the handle of the power supply and pull it out of its bay.
4. Push the new power supply module into the power bay until it clicks into the locked position.
5. Plug the AC power cord back into the power supply module.

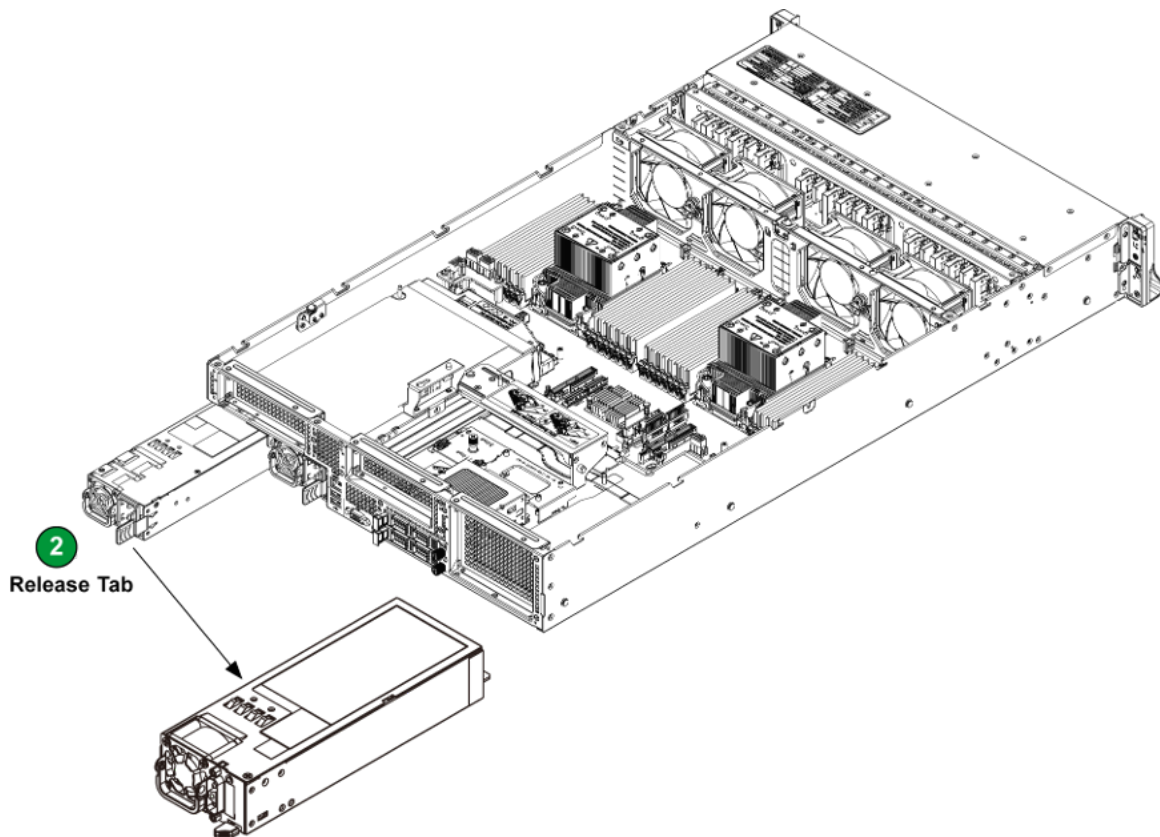


Figure 3-71. Installing a Power Supply Module

Chapter 4:

Motherboard Connections, Jumpers, and LEDs

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in the ["Introduction" on page 15](#). More detail can be found in the X14DBM-SP motherboard manual.

Review the ["Standardized Warning Statements for AC Systems" on page 245](#) before installing or removing components.

4.1 Power Supply and Power Connections	115
6-Pin Riser Card Power Connectors (JPWR1/JPWR2)	115
8-Pin/16-Pin Backplane/GPU Power Connectors (JPMW1–JPMW4 and JPMW5–JPMW7)	115
Main Server Power Connectors (PSU1/PSU2)	115
Power Supply	116
4.2 Headers and Connections	118
6-pin BMC External I ² C Header	118
Chassis Intrusion	118
Fan Headers	118
Liquid Leak Check Header (JLC1)	118
Low-profile (LP) Slim SAS I/O Connector	119
M.2 Slots	119
MCIO NVMe Connectors	119
NC-SI Connection	119
NVMe SMBus Headers	120
NVMe VPP Bus Connector	120
TPM/Port 80 Header	120
VROC RAID Key Header	121
Control Panel	122
4.3 Rear I/O Connectors/Ports	127
Advanced I/O Module (AIOM) for I/O Support	127

AIOM Sideband Connector (JAIOMSB1)	127
BMCLAN/USB/VGA/COM Slot (JIO1)	127
Universal Serial Bus (USB) 3.2 Header	127
VGA Connection Ports	128
4.4 Jumper Settings	129
CMOS Clear	129
UID LED and System_Reset Button Select Jumper	130
4.5 LED Indicators	131
BMC Heartbeat LED	131
BMC LAN LEDs	131
Onboard Power LED	131
Unit ID (UID) LED	132

4.1 Power Supply and Power Connections

For information about the power supply and power connections of the SYS-222H-TN server, refer to the following content.

6-Pin Riser Card Power Connectors (JPWR1/JPWR2)

Two 6-pin 12 V power connectors located at JPWR1 and JPWR2 on the X14DBM-SP motherboard are used for riser cards on the motherboard.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

8-Pin/16-Pin Backplane/GPU Power Connectors (JPMW1–JPMW4 and JPMW5–JPMW7)

Four 8-pin 12 V power supply connectors (JPMW1–JPMW4) and another three 16-pin 12 V power connectors (JPMW5–JPMW7) on the X14DBM-SP motherboard are used to provide power to backplane and GPU devices via cables.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

8-pin PWR Connector for Backplane/GPU Devices (JPMW1-4) Pin Definitions: 8 Total		16-pin PWR Connector for Backplane/GPU Devices (JPMW5-7) Pin Definitions: 16 Total	
Pin#	Definition	Pin#	Definition
1-4	GND	1-6	P12 V (12 V Power)
5-8	P12 V (12 V Power)	7-12	Ground
		S1 and S2	No Connection
		S3 and S4	Ground

Main Server Power Connectors (PSU1/PSU2)

Two power supply connectors, located at PSU1/PSU2, provide main server power to your hyper server.

Notes:

- The tables below represent the power supplies that are used with PSU1/PSU2 in Supermicro Hyper SuperServer SYS-222H-TN.
 - For Hyper Systems:

PWS-2K07A-1R
PWS-1K63A-1R
PWS-2K63A-1R
PWS-1K24A-1R

- All power connectors used on this motherboard meet the ATX SSI EPS 12 V specification and must be connected to your power supply to provide adequate power to your system for all devices and components use.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Power Supply

As with all computer products, a stable power source is necessary for proper and reliable operation. It is even more important for processors that have high CPU clock rates where noisy power transmission is present.

The X14DBM-SP Hyper Server board accommodates two Supermicro proprietary power supply units (PSU1/PSU2), two 6-pin +12 V power connectors (JPWR1/JPWR2), four 8-pin +12 V power connectors (JPMW1–JPMW4), and three 16-pin power connectors (JPMW5–JPMW7). Although most power supplies generally meet the specifications required by the processors, some are inadequate. All these power connections are also required to ensure adequate power supply to the system.



Warning! To avoid damaging the power supply or the motherboard, be sure to use a power supply that accommodates two power supply units. Be sure to also connect the power supplies to four 8-pin +12 V power connectors (JPMW1–JPMW4), three 16-pin +12 V power connectors (PMW5–JPMW7), and two 6-pin power connectors (JPWR1/JPWR2) on the motherboard. Failure in doing so may void the manufacturer warranty on your power supply and motherboard.

It is strongly recommended that you use a high quality power supply that meets ATX power supply specification 2.02 or above. It must also be SSI compliant.

Note: The tables below represent the power supplies that support the main power supply units (PSU1/PSU2) in the Supermicro Hyper and Hyper-E servers. For detailed power supply support for your particular server, refer to your Hyper Server user manual.

- For Hyper Systems:

PWS-2K07A-1R
PWS-1K63A-1R
PWS-2K63A-1R
PWS-1K24A-1R

4.2 Headers and Connections

For information about the headers on the X14DBM-SP motherboard, refer to the following content.

6-pin BMC External I²C Header

A System Management Bus header for the BMC is located at JF3_JIPMB1 on the X14DBM-SP motherboard.. Connect the appropriate cable here to use the IPMB I²C connection on your system.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the X14DBM-SP motherboard. Attach the appropriate cable from the chassis to inform you when the chassis is opened.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Chassis Intrusion	
Pin Definitions: Two Total	
Pin#	Definition
1	Intrusion Input
2	GND

Fan Headers

There are eight 6-pin fan headers (FAN1–FAN8) and one 4-pin fan header (FAN10) on the motherboard. These fan headers are used for cooling fans for your system. Fan speed control for these fans is supported by thermal management via BMC 2.0 interface.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Liquid Leak Check Header (JLC1)

A liquid leak check header is located at JLC1 on the X14DBM-SP motherboard.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Low-profile (LP) Slim SAS I/O Connector

A low-profile SlimSAS I/O connector, located on JIO1, provides dedicated BMC LAN/USB/VGA support on the rear of the motherboard.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

M.2 Slots

Two M.2 M-key slots are located at M.2-C1 and M.2-C2 on the X14DBM-SP motherboard. M.2 was formerly known as Next Generation Form Factor (NGFF) and serves to replace mini PCIe. M.2 allows for a variety of card sizes, increased functionality, and spatial efficiency. The M.2 MKey slots on the motherboard support PCIe 5.0 x2 devices in a 2280/22110 form factor.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

MCIO NVMe Connectors

MCIO NVMe connectors, located at P0_NVME0–P0_NVME3 and P1_NVME0–P1_NVME3, provide eight PCIe 5.0 x8 connections on the motherboard. P0_NVME0–P0_NVME3 connections are supported by CPU1, and P1_NVME0–P1_NVME3 connections, by CPU2. Use these MCIO connectors to support high-speed PCIe storage devices.

Note: When installing an NVMe device on a motherboard, be sure to connect the first NVMe port (P0_NVME0) first for your system to work properly.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

NC-SI Connection

The Network Controller Sideband Interface (NC-SI) connection is located at JNCSI1 on the X14DBM-SP motherboard. This connection is used to connect a Network Interface Card (NIC) to the motherboard to allow the onboard Baseboard Management Controller (BMC) to communicate with a network.

Note: For detailed instructions on how to configure Network Interface Card (NIC) settings, refer to the Network Interface Card Configuration User's Guide posted on the web page under the link: <https://www.supermicro.com/support/manuals>.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

NVMe SMBus Headers

Two NVMe SMBus (I²C) headers are located at JNVI²C1 and JNVI²C2 on the X14DBM-SP motherboard. They are used for PCIe SMBus clock and data connections, and provide hot-plug support through a dedicated SMBus interface. This feature is only available for a complete Supermicro system with a proprietary Supermicro NVMe add-on card and a proper cable installed.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

NVMe SMBus Headers Pin Definitions: Four Total	
Pin#	Definition
1	Data
2	GND
3	Clock
4	VCCIO

NVMe VPP Bus Connector

A NVMe VPP Bus connector is located at JNVVPP1 on the X14DBM-SP motherboard. The NVMe VPP connector provides hot plug support for the NVMe devices, which allows the user to replace NVMe devices without shutting down and powering off the system.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

TPM/Port 80 Header

The JTPM1 header on the X14DBM-SP motherboard is used to connect a Trusted Platform Module (TPM)/Port 80, which is available from Supermicro (optional). A TPM/Port 80 connector is a security device that supports encryption and authentication in storage drives. It allows the motherboard to deny access if the TPM associated with the storage drive is not installed in the system. Information on the TPM is available at the following page:

https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H_X12_H12.pdf


For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Trusted Platform Module Header			
Pin Definitions: 10 Total			
Pin#	Definition	Pin#	Definition
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	Ground
7	SPI_MOSI	8	No Connection
9	+1.8 V Standby	10	SPI_IRQ#

VROC RAID Key Header

A VROC RAID Key header is located at JRK1 on the X14DBM-SP motherboard. Install a VROC RAID key on JRK1 for NVMe RAID support as shown in the illustration below.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

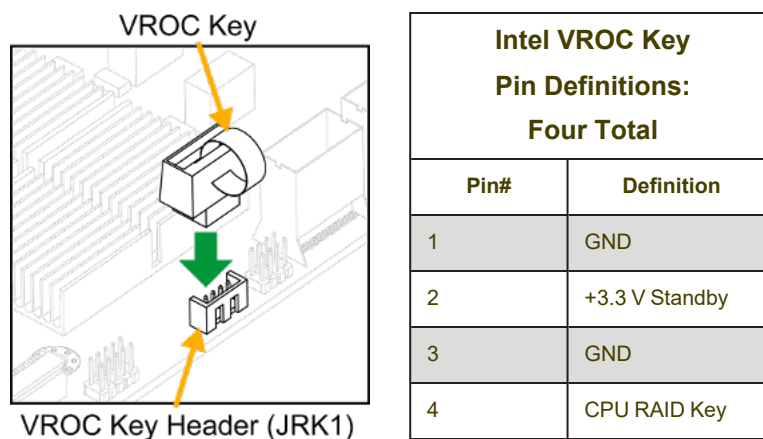

Note: Images displayed are for illustrative purposes only. The components installed in your system may or may not look exactly the same as the graphics shown in the manual.

Note: For detailed instructions on how to configure VROC RAID settings, refer to the VROC RAID Configuration User's Guide posted on the web page under the following link: <https://www.supermicro.com/support/manuals>.

Control Panel

Refer to the following content for information about the front control panel header on the X14DBM-SP motherboard.

Front Control Panel Header with I²C

There are two front control panel headers located on this motherboard.

JFP1 on the X14DBM-SP motherboard contains header pins for various buttons and indicators that are normally located on a control panel at the front of the chassis. These connectors are designed specifically for use with Supermicro chassis. See the figure below for the descriptions of the front control panel buttons and LED indicators.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

JFP1	
1	Power Button
2	Reset/UID Button
3	UID LED_N
4	Fail LED_N (OH/FF/PF)
5	LAN-2 Activity LED
6	LAN-1 Activity LED (Aggregate all LAN)
7	Storage Drive Activity LED
8	Standby LED_N
9	Power/RoT LED_N
10	P3V3_STBY
11	GND
12	I2C Data
13	I2C Clock
14	GND
15	Power Fail LED_P
16	P5V_USB
17	P5V_USB
18	P5V_USB
19	Power Fail LED_N
20	GND

Figure 4-1. JFP1 Header Pins

Power On and BMC/BIOS Status LED Button

The Power On and BMC/BIOS Status LED button is located on pin 1 of the front control panel header located at JFP1 on the X14DBM-SP motherboard. Momentarily contacting pin 1 of JFP1 will power on/off the system or display BMC/BIOS status.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Power Button	
BMC/BIOS Status LED Indicator	
Status	Event
Green: Solid on	System power on
BMC/BIOS blinking green at 4 Hz	BMC/BIOS checking
BIOS blinking green at 4 Hz	BIOS recovery/update in progress
BMC blinking red x2 (two blinks red) at 4 Hz, one pause at 2 Hz (on-on-off-off)	BMC recovery/update in progress
BMC/BIOS blinking green at 1 Hz	Flash not detected or golden image checking failure

UID LED and System_Reset Button Select Jumper

Jumper JRU1 on the X14DBM-SP motherboard is used in conjunction with pin 2 of Front Control Panel header 1 (JFP1) to function as a System_Reset button or a UID LED button. To configure pin 2 of JFP1 for front UID button use in a chassis that supports front UID connection, close pins 1 and 2 of jumper JRU1. To set pin 2 of JFP1 for system reset support, close pins 3 and 4 of jumper JRU1.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

UID Switch/Reset Button Select Jumper (JRU1)	
Jumper Settings	
State	Description
Close pins 1 and 2 of JRU1	Pin 2 of JFP1: used for UID switch support
Close pins 3 and 4 of JRU1	Pin 2 of JFP1: used for System Reset support

UID LED

The unit identifier LED connection is located on pin 3 of JFP1 on the X14DBM-SP motherboard.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Fail LED (Information LED for OH/FF/PF)

The Fail LED (Information LED for OH/Fan Fail/PWR Fail) connection, located on pin 4 of JFP1, provides warnings of overheating, power failure, or fan failure for the system.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Fail LED (Information LED) (OH/Fan Fail/PWR Fail)	
LED States	
Status	Description
Solid red (on)	An overheat condition has occurred.
Blinking red (1 Hz)	Fan failure: check for an inoperative fan.
Blinking red (0.25 Hz)	Power failure: check for a non-operational power supply.
Blinking red (10 Hz) (FP red LED)	CPLD recovery mode error(s).
Solid blue	UID has been activated locally. Use this function to locate a unit in the system that might be in need of service.
Blinking blue (1 Hz)	Local UID has been activated locally on. Use this function to identify a unit that might be in need of service.
BIOS/BMC blinking blue (10 Hz)	BIOS/BMC: recovery and/or update in progress.
Red Info LED blinking (10 Hz) and MB UID LED blue blinking (10 Hz)	CPLD: recovery and/or update in progress.

LAN1/LAN2 (NIC1/NIC2) LED

The Network Interface Controller (NIC) LED connection for LAN Port 1 is located on pin 6 of JFP1 on the X14DBM-SP motherboard, and LAN Port 2 is on pin 5.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

LAN1/LAN2 LED	
LED States	
Color	State
NIC 2: Blinking green	LAN 2: Active
NIC 1: Blinking green	LAN 1: Active

Storage Drive Activity LED

The storage drive activity LED connection is located on pin 7 of JFP1 on the X14DBM-SP motherboard. When this LED is blinking green, it indicates storage drive activity.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Storage Drive Activity LED	
LED State	
Color	State
Blinking Green	Storage Drive Activity

Standby Power LED

The LED indicator for standby power is located on pin 8 of JFP1 on the X14DBM-SP motherboard. If this LED is on, standby power is on.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Root of Trust (RoT) Power LED

The Power LED for the Root of Trust (RoT) connection is located on pin 9 of JFP1 on the X14DBM-SP motherboard. If this LED is on, power for the RoT chip is on.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Standby Power

A Standby Power (I²C) connection is located on pins 10–14 of JFP1 on the X14DBM-SP motherboard to provide power to the system when it is in standby mode.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

+3.3 V Standby Power	
Pin Definitions: Five Total	
Pin#	Definition
10	+3.3 Standby
11	Ground
12	I ² C Data
13	I ² C Clock
14	Ground

Power Fail LED Indicators

Power Failure LED Indicators are located on pins 15 and 19 of JFP1 on the X14DBM-SP motherboard.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

FP Power LED	
Pin Definitions (JFP1)	
Pin#	Definition
15	PWR Failure LED-Positive
19	PWR Failure LED-Negative

FP USB Power

Front panel USB power connections, located on pins 16–18 of JFP1, provide power to front USB devices.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

FP USB PWR	
Pin Definitions: Three Total	
Pin#	Definition
16	+5 V USB PWR
17	
18	

Front Control Panel Header 2

In addition to front control panel header 1 (JFP1), front control panel header 2 (JFP2), also located on the front side of the chassis, provides additional functions, including USB and VGA support to the system.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

4.3 Rear I/O Connectors/Ports

Advanced I/O Module (AIOM) for I/O Support

A Supermicro proprietary Advanced I/O Module (AIOM) PCIe 5.0 x16 connector used for an add-on module is located at JAIOM1 (P1-AIOM PCIe 5.0 x16) on the X14DBM-SP motherboard. This AIOM connector provides input/output connections on the I/O face of your system.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

AIOM Sideband Connector (JAIOMSB1)

A Supermicro proprietary Advanced I/O Module (AIOM) sideband connector supported by CPU1, located at JAIOMSB1 on the X14DBM-SP motherboard, provides PCIe 5.0 x16 (with OCP 3.0 support) for AIOM sideband connections.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

BMCLAN/USB/VGA/COM Slot (JIO1)

The low-profile SlimSAS I/O connector, located at JIO1, connects an I/O mezzanine board to the motherboard to provide dedicated BMC LAN, VGA, and COM port connections for rear access.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27. Refer to the [LED Indicator](#) section for LAN LED information.

Universal Serial Bus (USB) 3.2 Header

A USB header that supports two USB 3.2 Gen 1 ports (USB2/3) is located at JUSB1 on the motherboard. This USB header can be used for USB support via USB cables (not included).

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

JUSB1 (USB 3.2 Gen 1) Header			
Pin Definitions: 20 Total			
Pin#	Definitions	Pin#	Definitions
1	VBUS	11	IntA_P2_D+

JUSB1 (USB 3.2 Gen 1) Header			
Pin Definitions: 20 Total			
Pin#	Definitions	Pin#	Definitions
2	IntA_P1_SSRX-	12	IntA_P2_D-
3	IntA_P1_SSRX+	13	GND
4	GND	14	IntA_P2_SSTX+
5	IntA_P1_SSTX-	15	IntA_P2_SSTX-
6	IntA_P1_SSTX+	16	GND
7	GND	17	IntA_P2_SSRX+
8	IntA_P1_D-	18	IntA_P2_SSRX-
9	IntA_P1_D+	19	VBUS
10	GND	20	No Connection

VGA Connection Ports

There are two VGA connections in your system. One VGA connection is located on the BMCLAN/USB/VGA slot (JIO1) on the I/O side of the X14DBM-SP motherboard. The other VGA header is located on the Front Panel Control Module (JFP2). These VGA connections provide analog interface support between the computer and the video displays.

The onboard VGA port is located on the I/O ports of the motherboard. Use this connection for VGA display.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under ["Motherboard Quick Reference"](#) on page 27.

4.4 Jumper Settings

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the diagram below for an example of jumping pins 1 and 2. Refer to the motherboard layout page for jumper locations.

Note: On two-pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

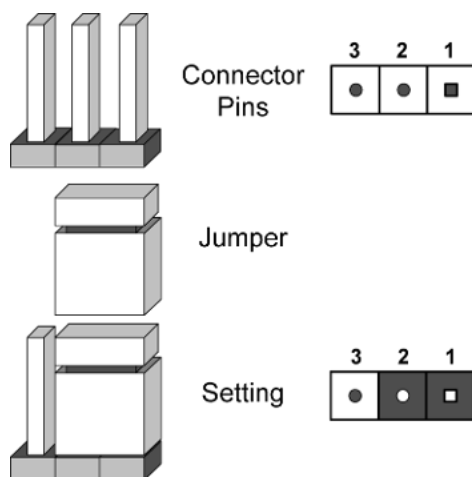


Figure 4-2. Jumping Connector Pins

CMOS Clear

JBT1 on the X14DBM-SP motherboard is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.



1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.

4. Short the CMOS pads, JBT1, with a metal object such as a small screwdriver for at least four seconds.

Note: Clearing CMOS will also clear all passwords.

5. Remove the screwdriver (or shorting device).
6. Replace the cover, reconnect the power cord(s), and power on the system.

UID LED and System_Reset Button Select Jumper

Jumper JRU1 on the X14DBM-SP motherboard is used in conjunction with pin 2 of Front Control Panel header 1 (JFP1) to function as a System_Reset button or a UID LED button. To configure pin 2 of JFP1 for front UID button use in a chassis that supports front UID connection, close pins 1 and 2 of jumper JRU1. To set pin 2 of JFP1 for system reset support, close pins 3 and 4 of jumper JRU1.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

UID Switch/Reset Button Select Jumper (JRU1)	
Jumper Settings	
State	Description
Close pins 1 and 2 of JRU1	Pin 2 of JFP1: used for UID switch support
Close pins 3 and 4 of JRU1	Pin 2 of JFP1: used for System Reset support

4.5 LED Indicators

For information about the LED indicators on the SYS-222H-TN server, refer to the following content.

BMC Heartbeat LED

A BMC Heartbeat LED is located at LEDBMC (LEDM1) on the X14DBM-SP motherboard. When this LED is blinking, the BMC is functioning normally.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.


BMC Heartbeat LED Indicator	
LED Color	Definition
Green: Blinking	BMC Normal

BMC LAN LEDs

The dedicated BMC LAN connection on the X14DBM-SP motherboard features two LEDs. The LED on the right indicates activity, and the LED on the left indicates the speed of the connection.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

BMC LAN LEDs		
	Color/State	Definition
Link (left)	Green: Solid	100 Mbps
	Amber: Solid	1 Gbps
Activity (right)	Amber: Blinking	Active

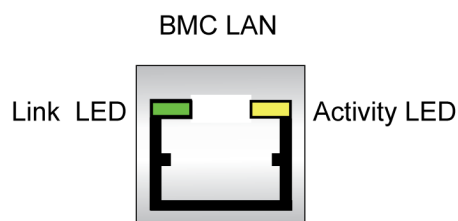

Onboard Power LED

The Onboard Power LED is located at LED1 on the X14DBM-SP motherboard. When this LED is on, the system is on. Be sure to turn off the system and unplug the power cord before removing or installing components.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

Onboard Power LED Indicator	
LED Color	Definition
Off	System Power Off (power cable not connected)
Green	System Power On

Unit ID (UID) LED

The UID LED indicator is located at LED2 on the X14DBM-SP motherboard. This UID indicator provides easy identification of a system that may need to be serviced.

For a detailed diagram of the X14DBM-SP motherboard, see the layout under "[Motherboard Quick Reference](#)" on page 27.

UID LED LED Indicator	
LED Color	Definitions
Blue: On	System Identified

Chapter 5:

Software

After the SYS-222H-TN server has been installed, you can install the Operating System (OS), configure RAID settings, and install the drivers.

5.1 Microsoft Windows OS Installation	134
Installing the OS	134
5.2 Driver Installation	136
5.3 BMC	138
BMC ADMIN User Password	138
Logging into the BMC	138
Logging into the BMC	138

5.1 Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at <https://www.supermicro.com/support/manuals>.

Installing the OS

1. Create a method to access the Microsoft Windows installation ISO file. That can be a USB flash or media drive, or the BMC KVM console.
2. Retrieve the proper drivers. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities," select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing <F11> during the system bootup.

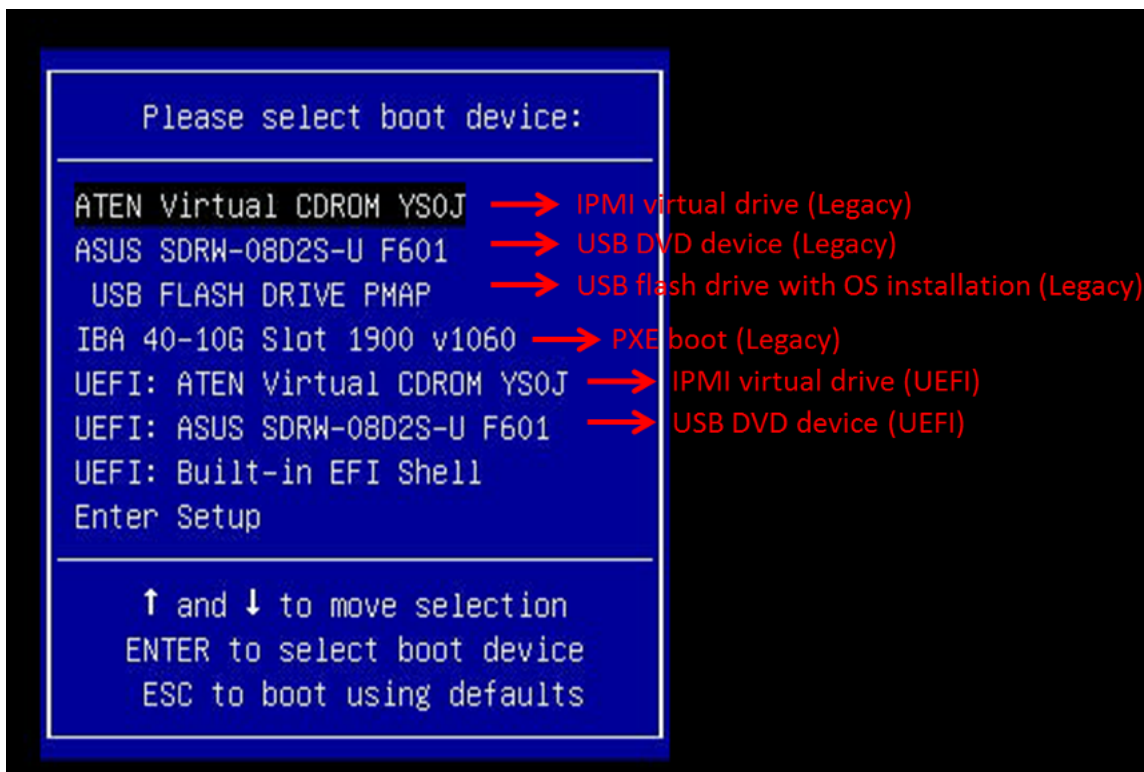


Figure 5-1. Selecting the Boot Device

4. During Windows Setup, continue to the dialog box where you select the drives on which to install Windows. If the disk you want to use is not listed, click on the "Load driver" link at the bottom left corner.

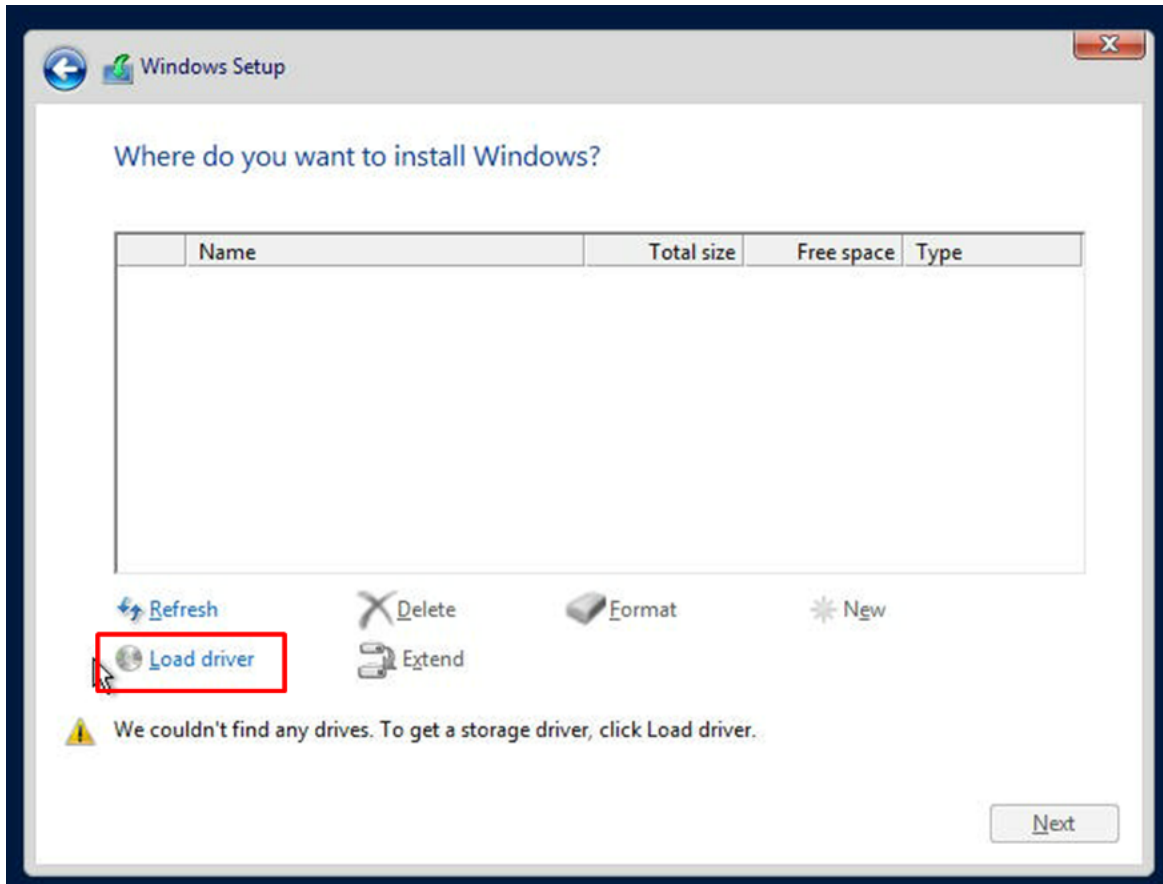


Figure 5-2. Loading the Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

5. Once all devices are specified, continue with the installation.
6. After the Windows OS installation has completed, the system will automatically reboot multiple times for system updates.

5.2 Driver Installation

The Supermicro website contains drivers and utilities for your system at the following page:

<https://www.supermicro.com/wdl>.

Some of these drivers and utilities must be installed, such as the chipset driver. After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. You may also use a utility to extract the ISO file if preferred.

Another option is to go to the Supermicro website at <https://www.supermicro.com>. Find the product page for your motherboard and download the latest drivers and utilities. Insert the flash drive or disk, and the screenshot shown below should appear.

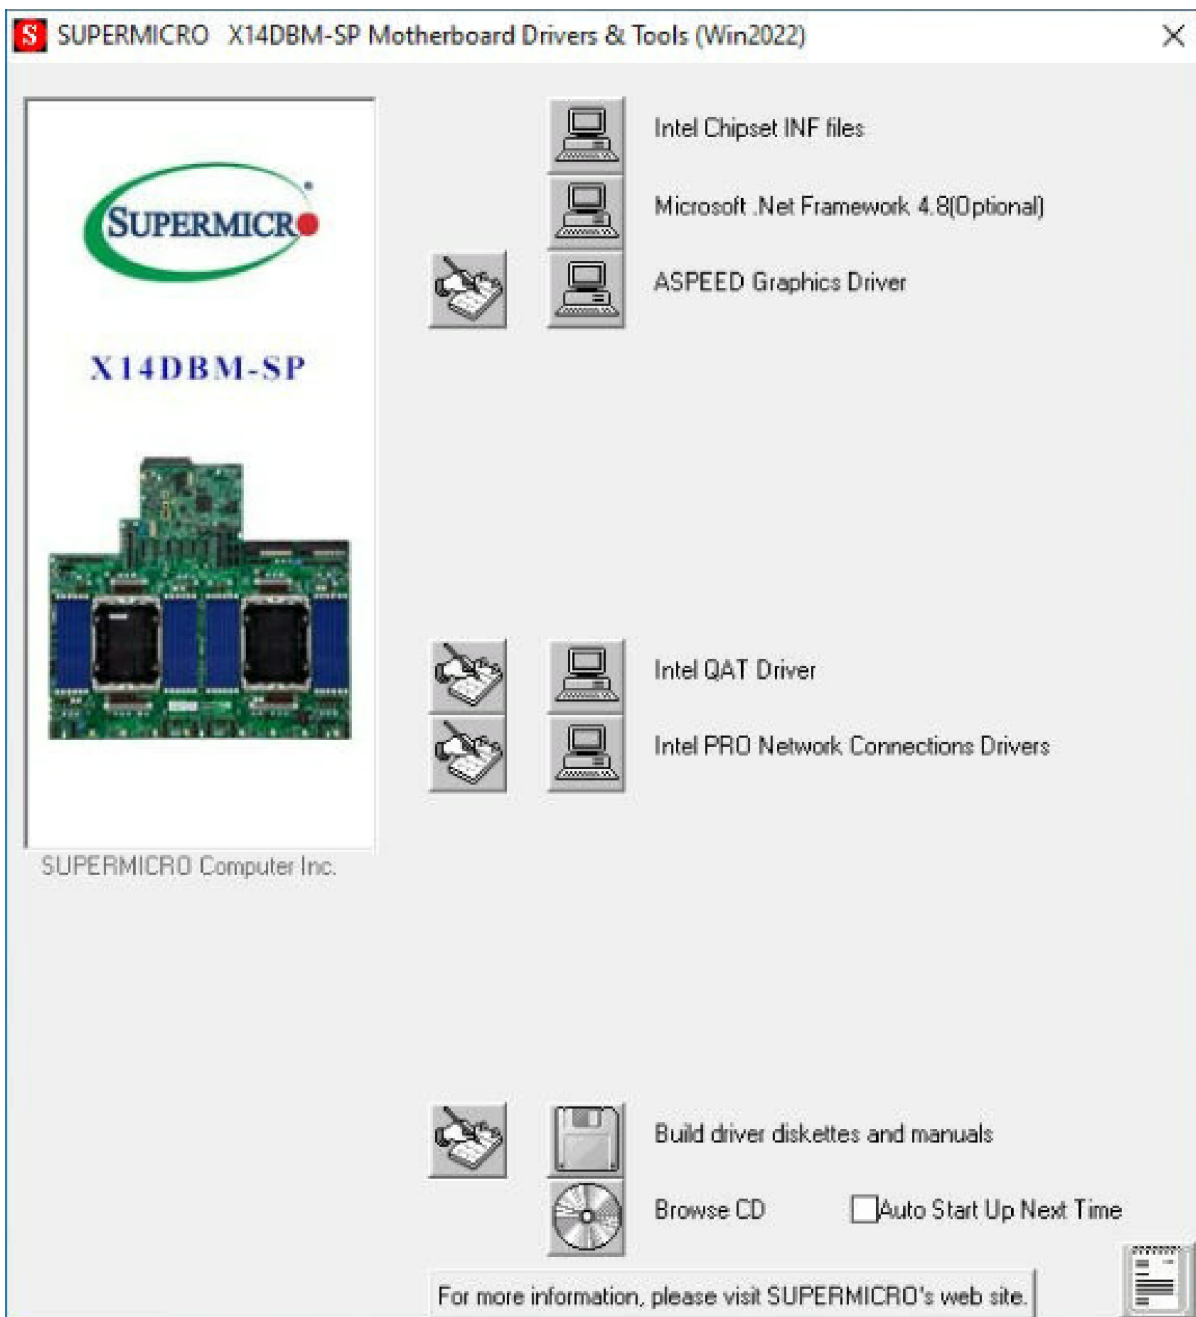


Figure 5-3. Driver Installation

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to bottom) one at a time. After installing each item, you must reboot the system before moving on to the next item on the list. The bottom icon with a CD on it allows you to view the entire contents.

5.3 BMC

The X14DBM-SP motherboard provides remote access, monitoring, and management through the baseboard management controller (BMC) and other management controllers distributed among different system modules. There are several BIOS settings that are related to BMC. For general documentation and information on BMC, visit our website at the following page:

<https://www.supermicro.com/en/solutions/management-software/bmc-resources>

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. The password can be found on a sticker on the motherboard and a sticker on the chassis, for Supermicro chassis. The sticker also displays the BMC MAC address. If necessary, the password can be reset using the Supermicro IPMICFG tool.



Figure 5-4. BMC Password Label

Logging into the BMC

Logging into the BMC

Supermicro ships standard products with a unique password for the BMC ADMIN user. This password can be found on a label on the motherboard.

When logging in to the BMC for the first time, use the unique password provided by Supermicro to log in. You can change the unique password to a user name and password of your choice for subsequent logins.

For more information regarding BMC passwords, visit our website at <https://www.supermicro.com/en/support/BMC Unique Password>.

Chapter 6:

Optional Components

This chapter describes alternate configurations and optional system components for the SYS-222H-TN server.

6.1 Storage Protocols Supported	141
6.2 Configuration Ordering Information	142
SYS-222H-TN Drive Bay Configuration Options - 8 Drive Bays	142
SYS-222H-TN Drive Bay Configuration Options - 16 Drive Bays	143
SYS-222H-TN Drive Bay Configuration Options - 24 Drive Bays	144
SYS-222H-TN PCIe Slot Configuration Options - Slot 1-2	146
SYS-222H-TN PCIe Slot Configuration Options - Slot 3-4	147
SYS-222H-TN PCIe Slot Configuration Options - Slot 5-8	148
SYS-222H-TN AIOM/OCP 3.0 NIC Slot A2 Option	149
6.3 Power Supply Configurations	151
6.4 Cable Management Arm	152
Installing the Cable Management Arm	152
Removing the Cable Management Arm	153
6.5 TPM Security Module	154
6.6 Intel Virtual RAID on CPU (VROC)	155
Requirements and Restrictions	155
Supported SSDs and Operating Systems	155
Additional Information	156
Hardware Key	156
Configuring Intel VMD	156
6.7 GPUs	167
Installing GPUs	167

Optional Parts
Storage Protocols
PCIe Options
Power Options
Cable management Arm
TPM Security
Intel VROC RAID Key

6.1 Storage Protocols Supported

The storage drive bays can be configured to support either NVMe, SAS, or SATA drives by adding optional parts to the system. See Section 6.2 for the supported storage drive bay configurations and the optional parts required.

NVMe – The system can support 8, 16, or 24 NVMe drives.

SAS or SATA – The system can support 8, 16, or 24 SAS or SATA drives with supported add-on storage controller card(s).

6.2 Configuration Ordering Information

The [[[[Undefined variable products.system]]]] server supports multiple configurations, which require the following parts.

SYS-222H-TN Drive Bay Configuration Options - 8 Drive Bays



Figure 6-1. Drive Bay Configuration Options - 8 Drive Bays

Option 1: 8 NVMe		
Drive Bay #	Drive Type	Part Numbers
Drive Bays 0-3	NVMe (from CPU1)	MCP-220-21602-0B (x2) CBL-MCIO-1229M5LFL CBL-MCIO-1234M5L
Drive Bays 4-7	NVMe (from CPU2)	CBL-MCIO-1237M5-M (x2)

Option 2: 8 SAS/SATA		
Drive Bay #	Drive Type	Part Numbers
Drive Bays 0-7	SAS/SATA	MCP-220-21602-0B (x2) CBL-SAST-1276F-100 CBL-CDAT-1062 For Non-RAID: AOC-S3808L-L8IT-O ¹ For Hardware RAID: AOC-S3908L-H8IR-16DD-O ¹

¹The storage AOC in this configuration is installed in PCIe slot 7 or 8, adding PCIe Slot 5-8 configuration option 1, 2, or 3 is required.

SYS-222H-TN Drive Bay Configuration Options - 16 Drive Bays



Figure 6-2. Drive Bay Configuration Options - 16 Drive Bays

Option 3: 16 NVMe		
Drive Bay #	Drive Type	Part Numbers
Drive Bays 0-11	NVMe (from CPU1)	MCP-220-21602-0B MCP-220-00196-0B (x8) BPN-NVME5-HS219N-S8 CBL-MCIO-1229M5LFL CBL-MCIO-1234M5L
Drive Bays 12-15	NVMe (from CPU2)	CBL-MCIO-1237M5-M (x2) CBL-GNZ4-1255M5Y CBL-MCIO-1225M5L CBL-PWEX-1142B-40 CBL-CDAT-1062 (x2)

Option 4: 16 SAS/SATA		
Drive Bay #	Drive Type	Part Numbers
Drive Bays 0-15	SAS/SATA	MCP-220-21602-0B MCP-220-00196-0B (x8) BPN-NVME5-HS219N-S8 CBL-SAST-1276F-100 CBL-SAST-1264F-100 CBL-PWEX-1142B-40 CBL-CDAT-1062Y-45 For Non-RAID: AOC-S3816L-L16IT-O ¹ For Hardware RAID: AOC-S3916L-H16IR-32DD-O ¹

¹The storage AOCs in this configuration is installed in PCIe slot 7 & 8, adding PCIe Slot 5-8 configuration option 1 or 2 is required.

SYS-222H-TN Drive Bay Configuration Options - 24 Drive Bays



Figure 6-3. Drive Bay Configuration Options - 24 Drive Bays

Option 1: 24 NVMe		
Drive Bay #	Drive Type	Part Numbers
Drive Bays 0-11	NVMe (from CPU1)	MCP-220-00196-0B (x16) BPN-NVME5-HS219N-S8 (x2) CBL-MCIO-1229M5LFL CBL-MCIO-1234M5L (x2) CBL-MCIO-1237M5-M (x2)
Drive Bays 12-23	NVMe (from CPU2)	CBL-GNZ4-1255M5Y CBL-MCIO-1225M5L (x2) CBL-MCIO-1432M5FLE (x2) CBL-PWEX-1142B-40 (x2) CBL-CDAT-1062 (x2)

Option 2: 24 SAS/SATA		
Drive Bay #	Drive Type	Part Numbers
Drive Bays 0-23	SAS/SATA	MCP-220-00196-0B (x16) BPN-NVME5-HS219N-S8 (x2) CBL-SAST-1276F-100 CBL-SAST-1264F-100 CBL-SAST-1296F-100 CBL-PWEX-1142B-40 CBL-CDAT-1062T-62 For Non-RAID: AOC-S3816L-L16IT-O ¹ AOC-S3808L-L8IT-O ¹ For Hardware RAID: AOC-S3916L-H16IR-32DD-O ¹ AOC-S3908L-H8IR-16DD-O ¹

¹The storage AOCs in this configuration is installed in PCIe slot 7 & 8, adding PCIe Slot 5-8 configuration option 1 or 2 is required.

SYS-222H-TN PCIe Slot Configuration Options - Slot 1-2



Figure 6-4. PCIe Slot Configuration Options - Slot 1-2

Default: No PCIe Slots		
Slot #	Slot Configuration	Part Numbers
Slot 1	Not Available	MCP-120-21101-0N (Included with system)
Slot 2	Not Available	

Option 1: x8, x8		
Slot #	Slot Config	Part Numbers
Slot 1	PCIe 5.0 x8 (CPU2)	MCP-240-21108-0N RSC-H-68G5 ¹
Slot 2	PCIe 5.0 x8 (CPU2)	CBL-MCIO-1235M5R CBL-MCIO-1227M5

Option 2: x16, x0		
Slot #	Slot Config	Part Numbers
Slot 1	PCIe 5.0 x16 (CPU2)	MCP-240-21108-0N RSC-H-68G5 ¹
Slot 2	Not Available	CBL-MCIO-1235M5R CBL-MCIO-1220M5R

¹Riser card requires power through cable connection, the power cable is supplied with the server.

SYS-222H-TN PCIe Slot Configuration Options - Slot 3-4

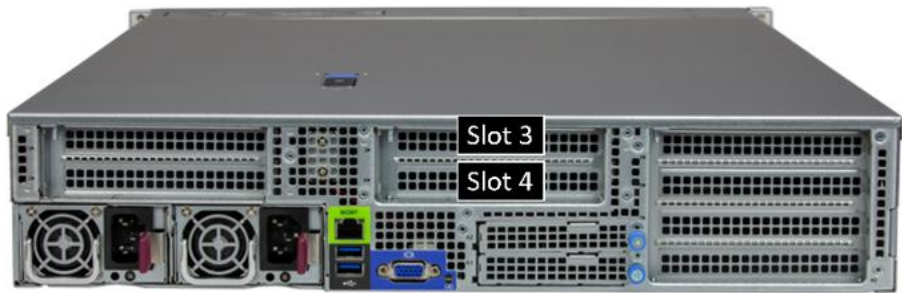


Figure 6-5. PCIe Slot Configuration Options - Slot 3-4

Default: No PCIe Slots		
Slot #	Slot Configuration	Part Numbers
Slot 3	Not Available	MCP-120-21101-0N (Included with system)
Slot 4	Not Available	

Option 1: x8, x8		
Slot #	Slot Configuration	Part Numbers
Slot 3	PCIe 5.0 x8 (CPU2)	MCP-240-21108-0N MCP-120-82927-0N RSC-H-68G5 ¹
Slot 4	PCIe 5.0 x8 (CPU2)	CBL-GNZ4- 1222M5YR27

Option 2: x16, x0		
Slot #	Slot Configuration	Part Numbers
Slot 3	PCIe 5.0 x16 (CPU2)	MCP-240-21108-0N MCP-120-82927-0N RSC-H-68G5 ¹
Slot 4	Not Available	CBL-GNZ4- 1217M5YRR27

SYS-222H-TN PCIe Slot Configuration Options - Slot 5-8



Figure 6-6. PCIe Slot Configuration Options - Slot 5-8

Default: No PCIe Slots		
Slot #	Slot Configuration	Part Numbers
Slot 5	Not Available	MCP-120-21902-0N (Included with system)
Slot 6	Not Available	
Slot 7	Not Available	
Slot 8	Not Available	

Option 1: x8, x8, x8, x8		
Slot #	Slot Configuration	Part Numbers
Slot 5	PCIe 5.0 x8 (CPU1)	MCP-240-21908-0N
Slot 6	PCIe 5.0 x8 (CPU1)	RSC-H2-6888G5L
Slot 7	PCIe 5.0 x8 (CPU1)	CBL-MCIO-1218M5-1
Slot 8	PCIe 5.0 x8 (CPU1)	CBL-MCIO-1227M5

Option 2: x16, x0, x8, x8		
Slot #	Slot Configuration	Part Numbers
Slot 5	PCIe 5.0 x16 (CPU1)	MCP-240-21908-0N
Slot 6	Not Available	RSC-H2-6888G5L
Slot 7	PCIe 5.0 x8 (CPU1)	CBL-MCIO-1218M5-1
Slot 8	PCIe 5.0 x8 (CPU1)	CBL-MCIO-1222M5LF

Option 3: x16, x0, x16, x0		
Slot #	Slot Configuration	Part Numbers
Slot 5	PCIe 5.0 x16 (CPU1)	MCP-240-21908-0N
Slot 6	Not Available	RSC-H-68G5 ¹
		CBL-MCIO-1226M5R-1 CBL-MCIO-1322RM5LF
Slot 7	PCIe 5.0 x16 (CPU1)	RSC-H-6G5L ²
Slot 8	Not Available	

¹Riser card requires power through cable connection, the power cable is supplied with the server.

²Slot 7 is not available in 24 & 16 NVMe drive bay configurations so those configurations do not require RSC-H-6G5L.

SYS-222H-TN AIOM/OCP 3.0 NIC Slot A2 Option



Figure 6-7. AIOM/OCP 3.0 NIC Slot A2

AIOM/OCP 3.0 NIC Slot A2		
Slot #	Slot Configuration	Part Numbers
Slot A2	PCIe 5.0 x8 (CPU2)	MCP-120-82926-0N AOM-AIOM-2X8-G5-P CBL-MCIO-1221M5 CBL-CDAT-1060-30

6.3 Power Supply Configurations

Power Supply Module Options		
Watts	Part Number	80Plus Level
1200	PWS-1K24A-1R	Titanium
1600	PWS-1K63A-1R	Titanium
2000	PWS-2K07A-1R	Titanium
2600	PWS-2K63A-1R	Titanium

6.4 Cable Management Arm

The SYS-222H-TN server supports a cable management arm (CMA), which keeps the rear cables organized and clear of the rail mechanisms when the system is extended out the front of the rack for maintenance.

The CMA attaches to the rack mounting rails using four connectors. They are labeled as connectors 1, 2, 3, and 4.

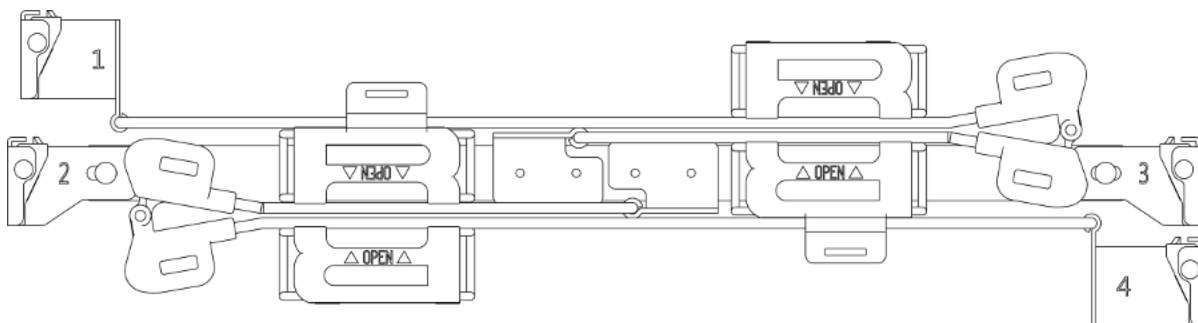


Figure 6-8. Cable Management Arm

Cable Arm Details		
Optional Part	Part Number	Description
Cable Arm	MCP-290-00168-0N	7.5" deep cable arm
Rail Set	MCP-290-11901-0N	41.2" rails (optimized for 1200-mm deep racks)

Installing the Cable Management Arm

1. Slide CMA connector #1 forward onto the two posts on the rear of the right inner rail (right side when viewed from the front). It snaps into place.
2. Slide CMA connector #2 forward onto the two posts on the rear of the right middle rail. It snaps into place.

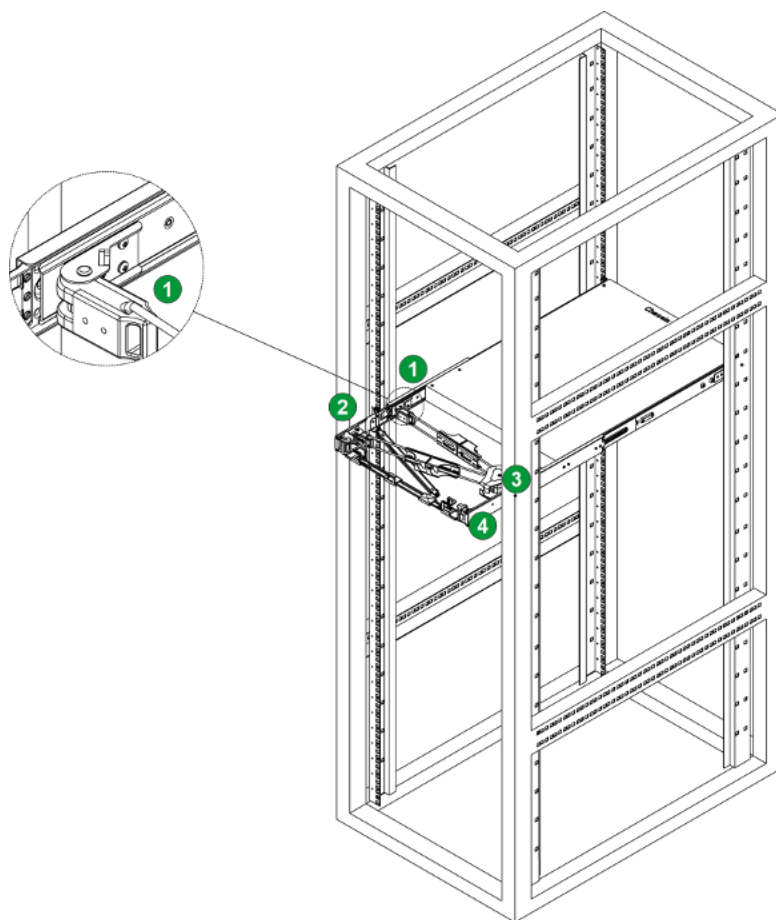


Figure 6-9. Installing the Connectors

3. Slide CMA connector #3 forward onto the two posts on the rear of the left middle rail. It snaps into place.
4. For CMA connector #4, align the metal tabs with the slots on the rear of the left outer rail and push it forward. It snaps into place.
5. Route the cables through the holding brackets, leaving enough slack.

Removing the Cable Management Arm

1. Remove cables from the CMA.
2. For CMA connector #4, pull the metal release tab toward the center of the rack and slide the connector toward the rear to release it.
3. For CMA connectors #3, #2, and #1, depress the front edge of the yellow plastic rocker lock and slide the connector toward the rear to release it.

6.5 TPM Security Module

SPI capable TPM 2.0 with Infineon 9672 controller, vertical form factor.

The JTPM1 header is used to connect a Trusted Platform Module (TPM). A TPM is a security device that supports encryption and authentication in hard drives. It enables the X14DBM-SP motherboard to deny access if the TPM associated with the hard drive is not installed in the [[[Undefined variable products.system]]] system.

Refer to https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H_X12_H12.pdf for details and installation procedures.

- AOM-TPM-9672V (TCG 2.0) / AOM-TPM-9672V-FIPS

6.6 Intel Virtual RAID on CPU (VROC)

Intel® Virtual RAID on CPU (Intel VROC) is an enterprise RAID solution for NVMe SSDs directly attached to Intel Xeon Scalable processors. Intel Volume Management Device (VMD) is an integrated controller inside the CPU PCIe root complex.

- A single processor supports up to 12 NVMe SSDs and up to 6 RAID arrays.
- A dual processor system supports up to 24 NVMe SSDs and 12 RAID arrays.

Stripe sizes are 4K, 8K, 16K, 32K, 64K, 128K.

Requirements and Restrictions

- *Intel VROC is only available when the system is configured for UEFI boot mode.*
- To enable the **mdadm** command and support for RSTe, install the patch from
 - Linux: <https://downloadcenter.intel.com/download/28158/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Linux->
 - Windows: <https://downloadcenter.intel.com/download/28108/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Windows->
- To enable Intel VROC, a hardware key must be inserted on the motherboard or a software key must be installed, and the appropriate processor's Virtual Management Devices must be enabled in the BIOS setup.
- Intel VROC is not compatible with secure boot. This feature must be disabled.
- When creating bootable OS RAID1 devices, you must have both devices on the same CPU, and a VMD on that CPU.
- Spanning drives when creating RAID devices is not recommended due to performance issues, even though it is supported.

Supported SSDs and Operating Systems

To see the latest support information:

<https://www.intel.com/content/www/us/en/support/articles/000030310/memory-storage/ssd-software.html> [and-](#)

Additional Information

Additional information is available on the product page for the Supermicro add-on card and the linked manuals.

<https://www.supermicro.com/products/accessories/addon/AOC-VROCxxxMOD.cfm>

Hardware Key

The Intel VROC hardware key is a license key that detects the Intel VROC SKU and activates the function accordingly. The key must be plugged into the Supermicro motherboard (connector JRK1). The key options are:

Intel® VROC Keys			
VROC Package	Description	Part Number	Intel MM Number
Standard	RAID 0, 1, 10 Supports 3rd party SSDs	AOC-VROCSTNMOD	951605
Premium	RAID 0, 1, 5, 10 Supports 3rd party SSDs	AOC-VROCPREMOD	951606

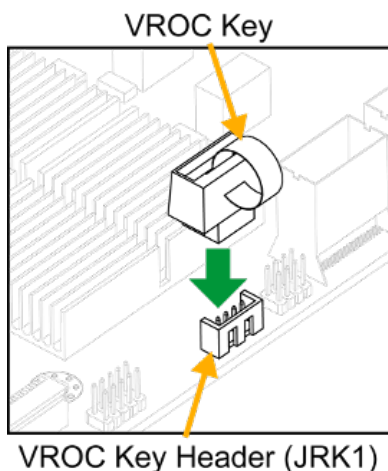


Figure 6-10. Intel VROC RAID Key and Motherboard Connector JRK1

Configuring Intel VMD

VMD must be enabled on PCIe ports which have NVMe drives attached to them in order for those drives to be added to a VROC RAID configuration. The default BIOS setting for the NVMe Mode Switch is Auto which automatically enables VMD on all installed NVMe drives.

NVMe Mode Switch:

- Auto: Enables VMD for all NVMe ports if VROC Key is installed.
- VMD: Enables VMD for all NVMe ports despite the lack of the VROC Key.
- Manual: Allows the user to select specific NVMe ports on which to enable VMD.

The NVMe Mode Switch can be viewed or selected at BIOS > Advanced > Chipset Configuration > IIO Configuration > NVMe Mode Switch

Configuring VMD Manually

The steps for manually configuring VMD on specific NVMe ports in UEFI BIOS are shown below. Example screenshots may differ from your server.

1. Reboot the server and press [DEL] key to access the BIOS options.
2. Switch to Advanced > Chipset Configuration > IIO Configuration.
3. Select NVMe Mode Switch, then select Manual.

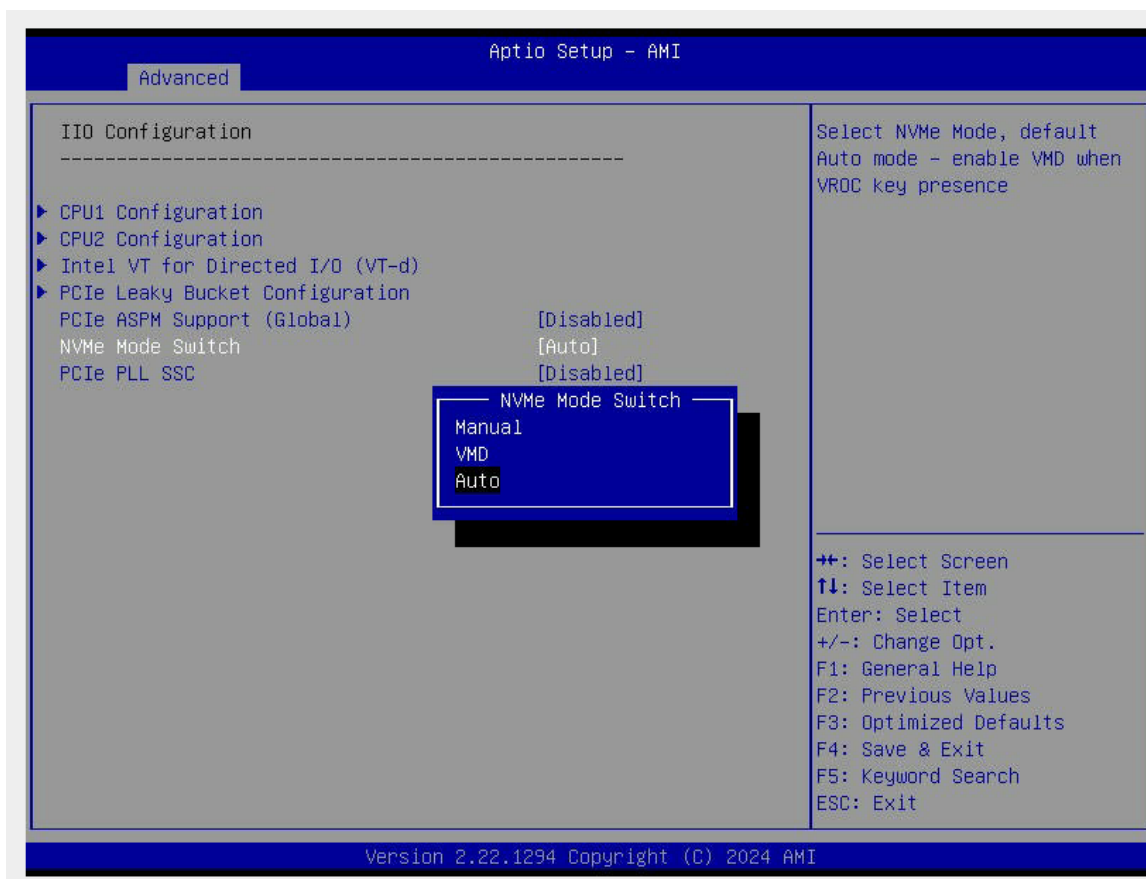


Figure 6-11. BIOS, Selecting VMD Mode

4. This table identifies the NVMe Port Resources in the X14 Hyper-SP servers. Enable VMD on the NVMe drive's corresponding PCI Express port identifier according to the VMD BIOS Settings table.

Intel VMD BIOS Settings for X14 Hyper-SP Systems

System Model	CPU1	NVMe Slots
SYS-122H-TN Config 1: 12 NVMe (0-11) Config 2: 8 NVMe (0-7) Config 5: 8 SAS + 4 NVMe (8-11) Config 6: 4 SAS + 8 NVMe (0-7)	PE1: PCI Express 1 Port F (x2) PCI Express 1 Port G (x2)	M.2 A, B
	PE5: PCI Express 5 Port A PCI Express 5 Port C PCI Express 5 Port E PCI Express 5 Port G	NVMe 0, 1, 2, 3
	CPU2	NVMe Slots
	PE2: PCI Express 2 Port A PCI Express 2 Port C PCI Express 2 Port E PCI Express 2 Port G	NVMe 4, 5, 6, 7
	PE4: PCI Express 4 Port E PCI Express 4 Port G	NVMe 8, 9
	PE5: PCI Express 5 Port E PCI Express 5 Port G	NVMe 10, 11

System Model	CPU1	NVMe Slots
SYS-122H-TN Config 3: 4 NVMe (0-3)	PE1: PCI Express 1 Port F (x2) PCI Express 1 Port G (x2)	M.2 A, B
	CPU2	NVMe Slots
	PE4: PCI Express 4 Port E PCI Express 4 Port G	NVMe 0, 1
PE5: PCI Express 5 Port E PCI Express 5 Port G	NVMe 2, 3	

System Model	CPU1	NVMe Slots
SYS-222H-TN Config 1: 24 NVMe (0-23) Config 2: 16 NVMe (0-15) Config 4: 8 SAS +16 NVMe (8-23) Config 5: 16 SAS + 8 NVMe (16-23) Config 6: 8 SAS + 8 NVMe (8-15)	PE1: PCI Express 1 Port F (x2) PCI Express 1 Port G (x2)	M.2 A, B
	PE3: PCI Express 3 Port A PCI Express 3 Port C PCI Express 3 Port E PCI Express 3 Port G	NVMe 0, 1, 2, 3
	PE4: PCI Express 4 Port A PCI Express 4 Port C PCI Express 4 Port E PCI Express 4 Port G	NVMe 4, 5, 6, 7
	PE5: PCI Express 5 Port A PCI Express 5 Port C PCI Express 5 Port E PCI Express 5 Port G	NVMe 8, 9, 10, 11
	CPU2	NVMe Slots
	PE1: PCI Express 1 Port E PCI Express 1 Port G	NVMe 12, 13
	PE3: PCI Express 3 Port E PCI Express 3 Port G	NVMe 14, 15
	PE4: PCI Express 4 Port A PCI Express 4 Port C PCI Express 4 Port E PCI Express 4 Port G	NVMe 16, 17, 18, 19
	PE5: PCI Express 5 Port A PCI Express 5 Port C PCI Express 5 Port E PCI Express 5 Port G	NVMe 20, 21, 22, 23

System Model	CPU1	NVMe Slots
SYS-222H-TN Config 3: 8 NVME (0-7)	PE1: PCI Express 1 Port F (x2) PCI Express 1 Port G (x2)	M.2 A, B
	PE5: PCI Express 5 Port A PCI Express 5 Port C PCI Express 5 Port E PCI Express 5 Port G	NVMe 0, 1, 2, 3
	CPU2	NVMe Slots
	PE1: PCI Express 1 Port E PCI Express 1 Port G	NVMe 4, 5
	PE3: PCI Express 3 Port E PCI Express 3 Port G	NVMe 6, 7

Important: VMD must only be enabled on NVMe port resources. If VMD is enabled on other PCIe ports, the functionality of those ports will be impacted. See the table above.

5. Select "CPU1 Configuration" or "CPU2 Configuration" to enable VMD for devices under the respective CPU. The Ports will be listed under each PCI Express Root Port (PEx) shown in the CPU1 Configuration or CPU2 Configuration menus.

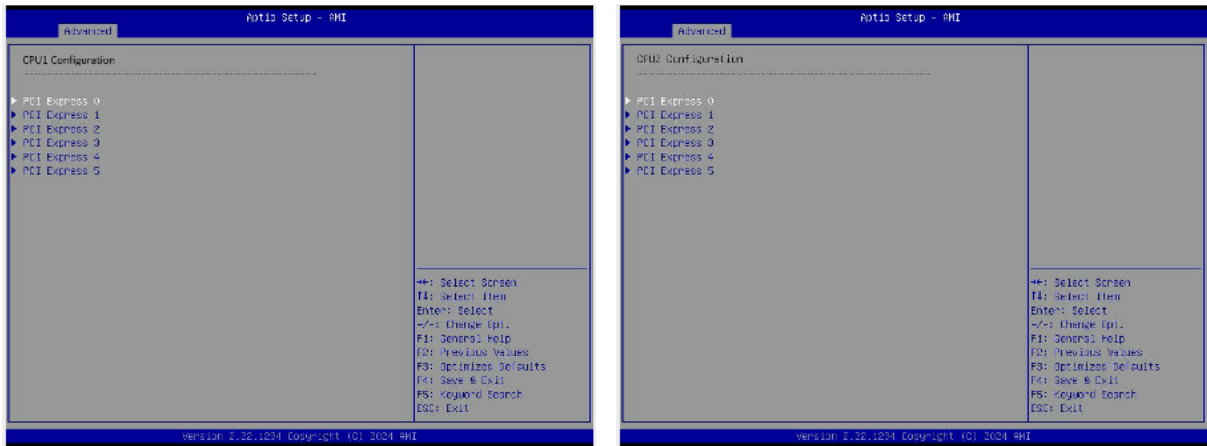


Figure 6-12. CPU1 Configuration or CPU2 Configuration

6. Select a PCI Express Root port to display the available ports to configure.

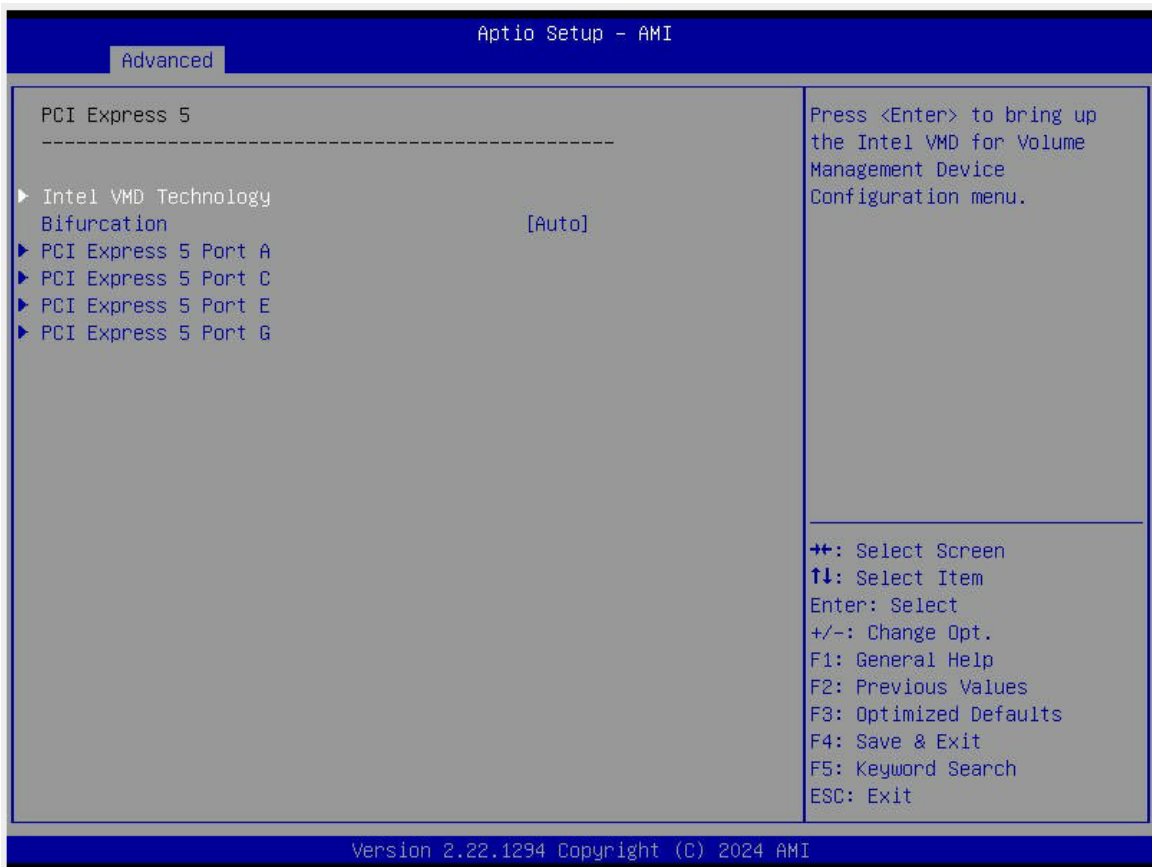


Figure 6-13. NVMe Ports listed under CPU1, PCI Express 5 (Example)

7. Select the root port and enable VMD technology at the root port level. VMD must be enabled at the Root Port level and at the individual port level for the VMD to function on a given port.

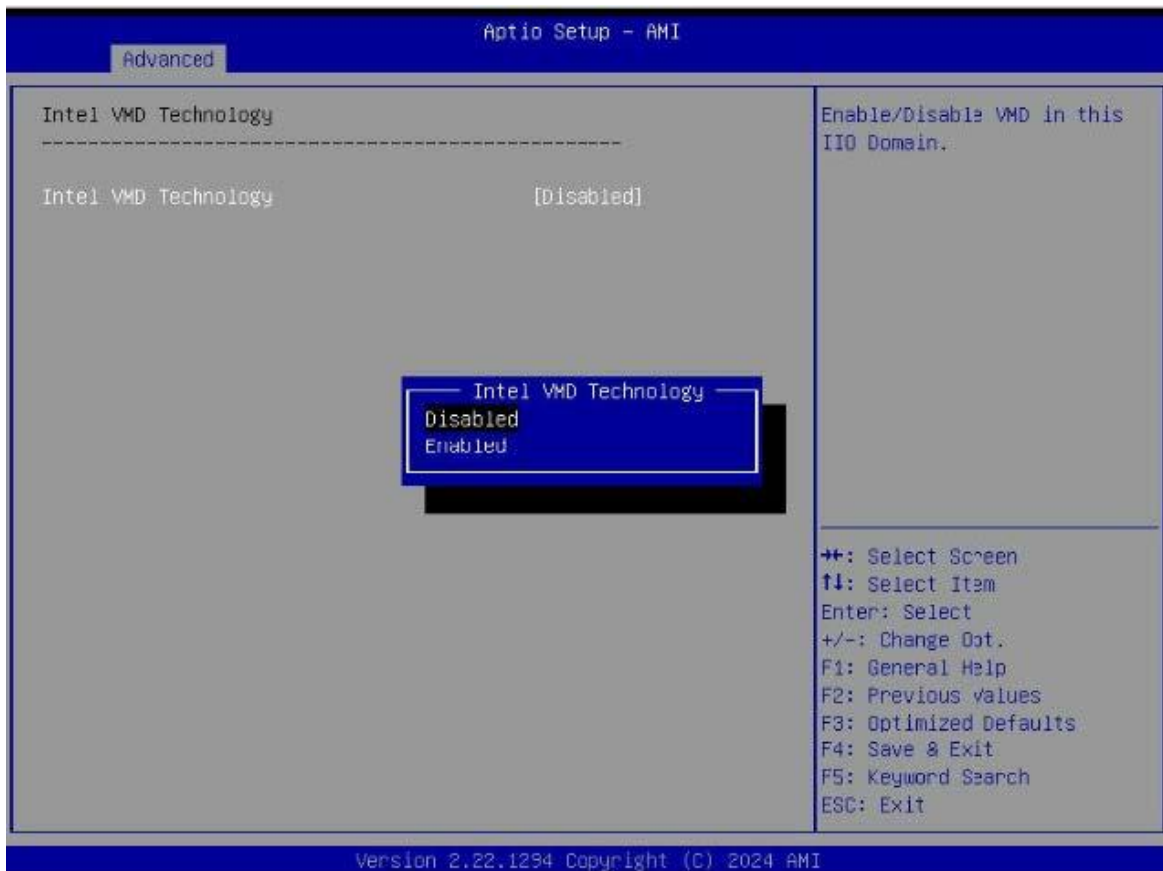


Figure 6-14. Enabling VMD at the Root Port Level (Example)

8. Select the port to configure, and then select the Enabled option under "Intel VMD Technology" to enable VMD support for the individual NVMe port.

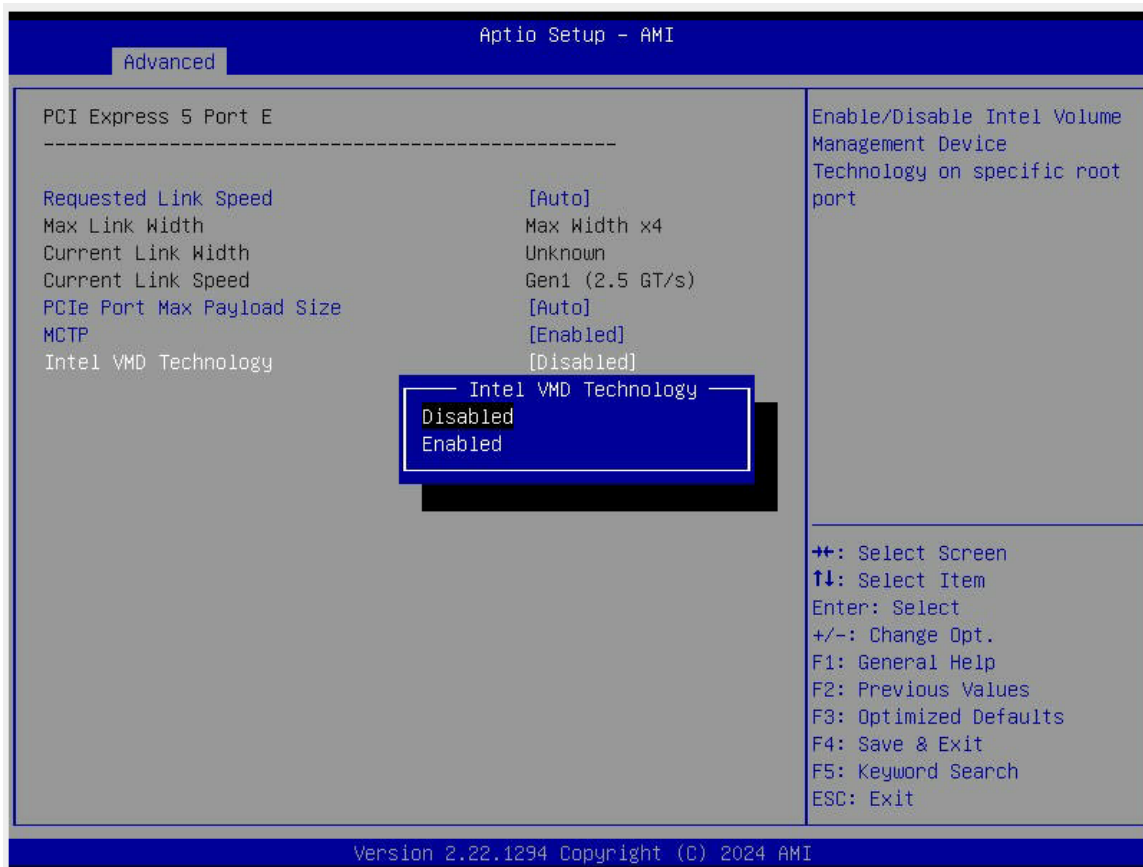


Figure 6-15. BIOS, Enabling CPU1 PCI Express 5 Port E (Example)

9. Continue with other PCI Express ports until all desired NVMe Ports have VMD enabled as well as the corresponding PCIe root ports.
10. Press [F4] to save the configuration and reboot the system.

Notes:

- If there is an existing RAID configuration, delete the RAID volume associated with the VMD controller before disabling the controller. Failure to do so may lead to unexpected behavior.
- The effects of physically changing or swapping a CPU on the VMD controller have not been thoroughly tested or documented.

Creating NVMe RAID Configurations

1. Open Advanced > Intel(R) Virtual RAID on CPU > All Intel VMD Controllers > Create RAID Volume.

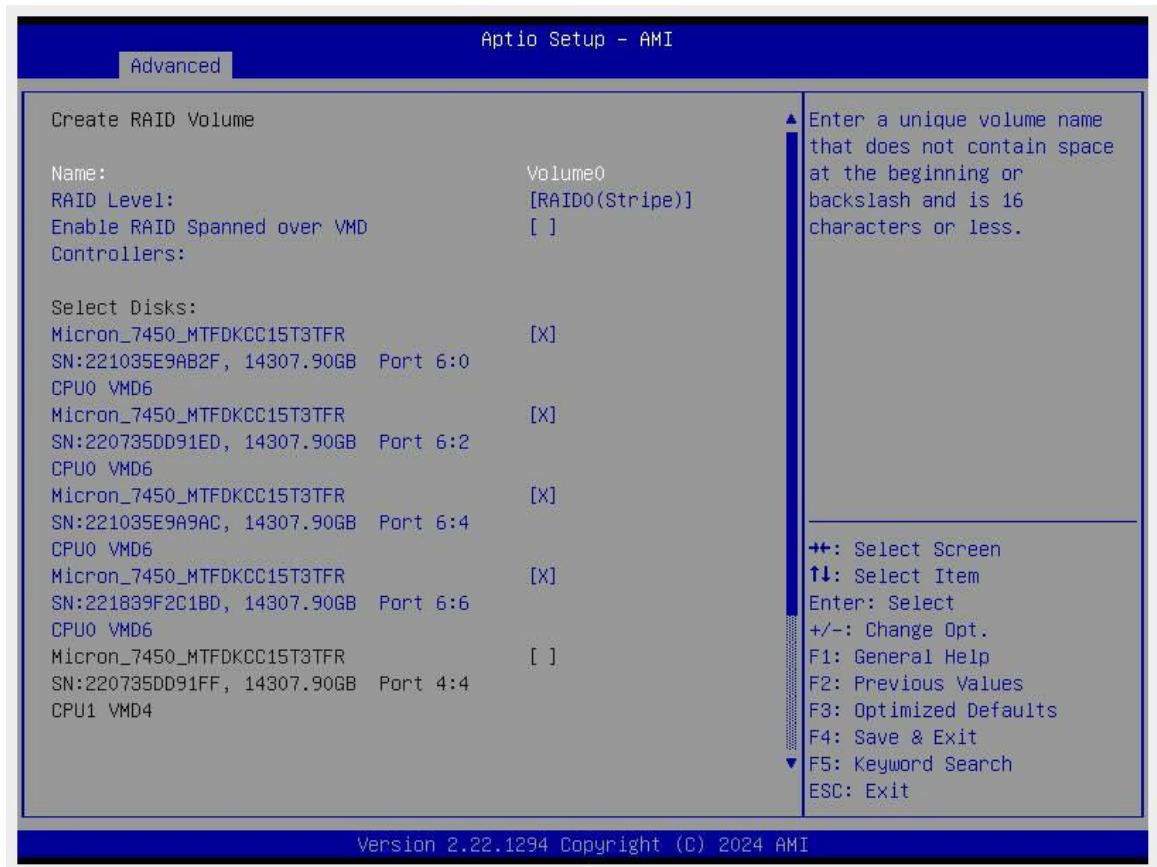


Figure 6-16. Created Volume without enabling RAID spanned over VMD controller

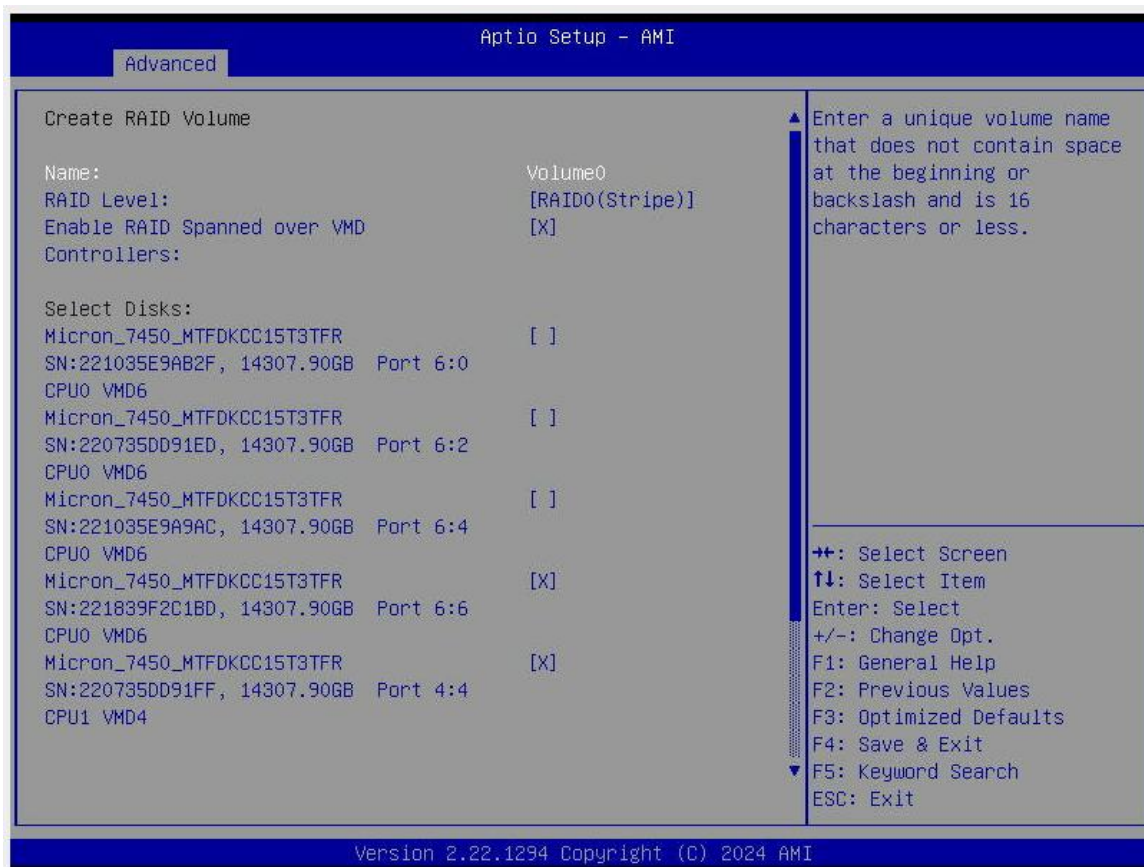


Figure 6-17. Created Volume with enabling RAID spanned over VMD controller

2. Set Name.
3. Set RAID Level.
4. If cross-controller RAID is required, select Enable RAID spanned over VMD Controller.
5. Select specific disks for RAID with an [X].
 - RAID0: Select at least two [2–24] disks
 - RAID1: Select only two disks
 - RAID5: Select at least three [3–24] disks
 - RAID10: Select only four disks
6. Select Strip Size (Default 64 KB).
7. Select Create Volume.
8. If another RAID is needed, start again at step 1.

Status Indications

An LED indicator on the drive carrier shows the RAID status of the drive.

Drive Carrier Status LED Indicator	
Status	State (red)
Normal function	Off
Locating	4 Hz blinking
Fault	Solid on
Rebuilding	1 Hz blinking
IBPI SFF 8489 Defined Status LED States	

Hot-Swap Drives

Intel VMD enables hot-plug and hot-unplug for NVMe SSDs, whether from Intel or other manufacturers. Under vSphere ESXi, several steps are necessary to avoid potential stability issues. See the information at link [1] below.

Hot-unplug

1. Prevent devices from being re-detected during rescan:

```
esxcli storage core claiming autoclaim --enabled=false
```

2. Unmount the VMFS volumes on the device. Check link [2] for details.
3. Detach the device. Check link [3] for details.
4. Physically remove the device.

Hot-plug

- Physically install the device.

ESXi will automatically discover NVMe SSDs, but a manual scan may be required in some cases.

Related Information Links

1. <https://kb.vmware.com/s/article/2151404>
2. <https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-1B56EF97-F60E-4F21-82A7-8F2A7294604D.html>
3. <https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-F2E75F67-740B-4406-9F0C-A2D99A698F2A.html>

6.7 GPUs

Supermicro 2U Hyper systems support graphic processing units (GPUs) when installed with some additional optional parts. GPUs have cooling requirements that can be assisted by specialized dual-level air shrouds to direct the flow from the system fans. Refer to the Supermicro product page to see the list of compatible GPUs.



Figure 6-18. Expansion Card Chassis Slots

- Single width GPUs can be installed the same as PCIe expansion cards.
- Double width GPUs can be used in slots 1, 3, 5, and 7. When a slot is used the corresponding even numbered slot is not available.

Notes:

- Installing different types of GPUs is not recommended.
- Due to thermal limitations, not all slots can be filled for some GPU models.
- Some GPUs require alternate air shrouds, CPU heatsinks, and restrictions on the physical size of storage drives.
- Standard air shrouds are MCP-310-82938-0N (CPU1) and MCP-310-82039-0N (CPU2).
- 1U air shrouds are MCP-310-82940-0N and MCP-310-82941-0N.

Installing GPUs

1. Power down the system, unplug AC cords, and remove the top chassis cover.
2. Following the instructions in Expansion Card section in Chapter 3, install the GPU in the recommended PCIe slot according to the GPU support table below.

Note: Install the GPU support bracket for 9.5" or longer GPUs installed in Slots 5 and 7. A single bracket can support a card in either or both.

Supported GPU Configurations (SYS-222H-TN)							
GPU Types	QTY	Slots	GPU Max Power	CPU Power	System Ambient	Air Shrouds	Storage
Double Wide (passive)	4	1, 3, 5, 7	350 W	165 W	25C	Standard	Up to 8 Drives (0-7)
Double Wide (passive)	up to 3	1, 3, 5 (only)	350 W	300 W	30C	1U GPU Air shroud/1U Heatsinks	
Double Wide (active)	up to 4	1, 3, 5, 7	350 W	350 W	25C	Standard	
Single Wide	8	1, 2, 3, 4, 5, 6, 7, 8	165 W	350 W	25C	Standard	
Single Wide	up to 6	1, 2, 3, 4, 5, 6 (only)	165 W	300 W	30C	1U GPU Air shroud/1U Heatsinks	
Single Wide	2	7, 8	165 W	350 W	25C	Standard	

Note: See Supermicro GPU support webpage for CPU Power and System Ambient Limits for specific GPU models.

Note: Only one 8-disk backplane is supported with GPUs.

3. Install the power cables provided with GPU cards according to the table below. See the motherboard layout in [Chapter 1](#) to identify the connectors. Some GPU models may not require power cables.

Power Cables for GPUs with 8-pin Power Connectors			
GPU	Motherboard Connector	GPU Connector Type	
		PCIe 6-pin/8-pin PWR	CPU 8-pin PWR

Power Cables for GPUs with 8-pin Power Connectors			
GPU	Motherboard Connector	GPU Connector Type	
		GPU in Slot 1	JPMW1
GPU in Slot 3	JPMW2	CBL-PWEX-1171-2654	CBL-PWEX-1172-2654
GPU in Slot 5	JPMW4	CBL-PWEX-1171-2654	CBL-PWEX-1172-2654
GPU in Slot 7	JPMW3	CBL-PWEX-1146-0612 + CBL-PWEX-1140-18	CBL-PWEX-1147-12 + CBL-PWEX-1140-18

Power Cables for GPUs with 16-pin Power Connectors		
GPU	Motherboard Connector	16-pin 12VHPWR Connector (up to 600 W)
GPU in Slot 1	JPMW1+JPMW2	CBL-PWEX-0962Y-1241
GPU in Slot 3	JPMW5	CBL-PWEX-1316-26
GPU in Slot 5	JPMW6	CBL-PWEX-1316-14
GPU in Slot 7	JPMW7	CBL-PWEX-1316-14

4. Determine if your GPUs require replacing the default 2U air shrouds (see previous table). To replace:
 - a. Remove the default air shrouds and discard.
 - b. Replace both 2U CPU heatsinks with 1U heatsinks (see procedure).

- c. For the 1U GPU air shrouds, use the table below to determine if the air blocks should remain in the blocking position, or be stored in non-blocking position.

GPU Air Block Configurations					
GPU Configuration	QTY	Slots	Fan 8 Air Block	Fan 6 Air Block	Fan 4 Air Block
Double Wide	3	1, 3, 5	Stored	Stored	Stored
Double Wide	2	3, 5	Stored	Stored	Blocked
Double Wide	1	5	Stored	Blocked	Blocked
Single Wide	5 or 6	1, (2), 3, 4, 5, 6	Stored	Stored	Stored
Single Wide	3 or 4	3, (4), 5, 6	Stored	Stored	Blocked
Single Wide	1 or 2	5, (6)	Stored	Blocked	Blocked

- Air blocks are only available on 1U GPU air shrouds.
 - Stored means the air block is hidden and not impeding airflow.
- d. Install the the 1U air shroud MCP-310-82940-0N (Fan 8 and Fan 6 air blocks) over CPU1.
- e. Install the the 1U air shroud MCP-310-82941-0N (Fan 4 air blocks) over CPU2.
- f. Close and power up the system.

Storing the Air Blocks for 1U GPU Air Shrouds

Remove the air shroud top cover. If an air block must be stored, lift it out of the blocking position and snap it into the stored position as shown below.

Air Shroud MCP-310-82940-0N (top removed)

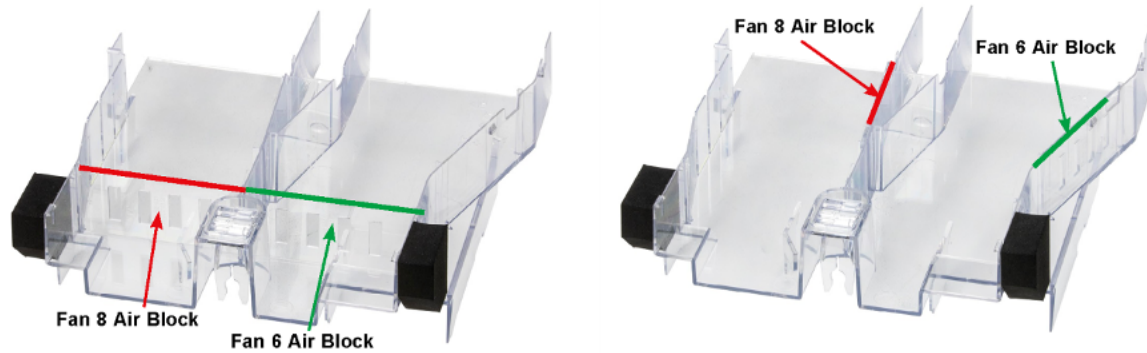


Figure 6-19. Fan 8 and 6 Air Blocks-Blocking Position, Fan 8 and 6 Air Blocks-Stored Position

Air Shroud MCP-310-82941-0N (top removed)

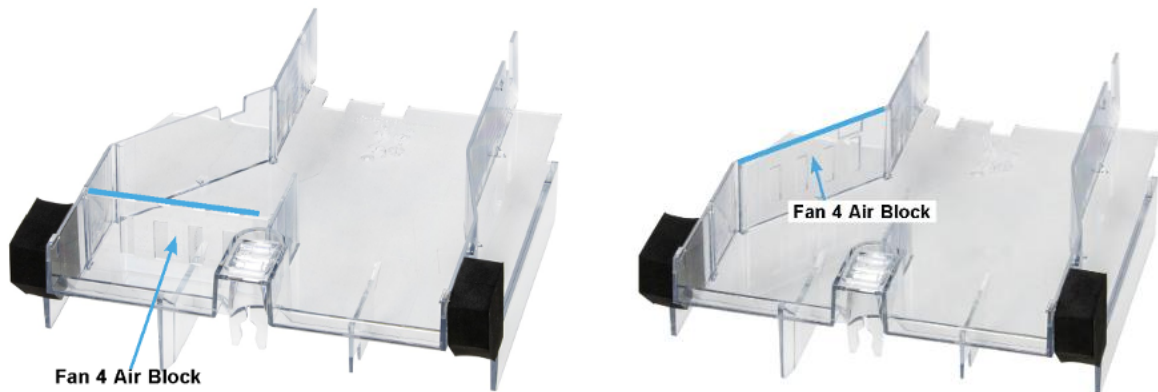


Figure 6-20. Fan 4 Air Block-Blocking Position, Fan 4 Air Block-Stored Position



Figure 6-21. Fan 8 Air Blocks Stored; Fan 6 and Fan 4 Air Block in Blocking Position

Chapter 7:

Troubleshooting and Support

The following content contains information on common issues and how to resolve them.

7.1 Online Resources	174
Direct Links for the SYS-222H-TN System	174
Direct Links for General Support and Information	174
7.2 Baseboard Management Controller (BMC)	175
7.3 Troubleshooting Procedures	176
Before Power On	176
No Power	176
No Video	176
System Boot Failure	176
Memory Errors	177
Losing the System's Setup Configuration	177
If the System Becomes Unstable	177
7.4 CMOS Clear	179
7.5 Motherboard Battery	180
7.6 Where to Get Replacement Components	181
7.7 Technical Support Procedures	182
Returning Merchandise for Service	182
7.8 Feedback	184

7.1 Online Resources

Direct Links for the SYS-222H-TN System

[SYS-222H-TN](#) specifications page

[X14DBM-SP](#) motherboard page for links to the Quick Reference Guide, User Manual, validated storage drives, etc.

Direct Links for General Support and Information

- General Memory Configuration Guide for X14 and B14 motherboards that use Intel® Xeon® 6700-series processors:
https://www.supermicro.com/support/resources/memory/X14_B14_memory_config_guide_SP.pdf
- Frequently Asked Questions: <https://www.supermicro.com/FAQ/index.php>
- TPM User Guide: https://www.supermicro.com/manuals/other/AOM-TPM-9670V_9670H_X12_H12.pdf
- BMC User Guide: https://www.supermicro.com/manuals/other/BMC_IPMI_X14_H14.pdf
- Product Resources page for validated memory details:
<https://www.supermicro.com/support/resources/mem.cfm>
- Product Matrices page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, and more:
<https://www.supermicro.com/en/support/product-matrices>
- Security Center for recent security notices:
https://www.supermicro.com/en/support/security_center
- Supermicro Phone and Addresses: <https://www.supermicro.com/en/about/contact>

7.2 Baseboard Management Controller (BMC)

The SYS-222H-TN server supports the Baseboard Management Controller (BMC). BMC is used to provide remote access, monitoring, and management. There are several BIOS settings that are related to BMC.

For general documentation and information on BMC, visit our website at the following page:

<https://www.supermicro.com/en/solutions/management-software/bmc-resources>

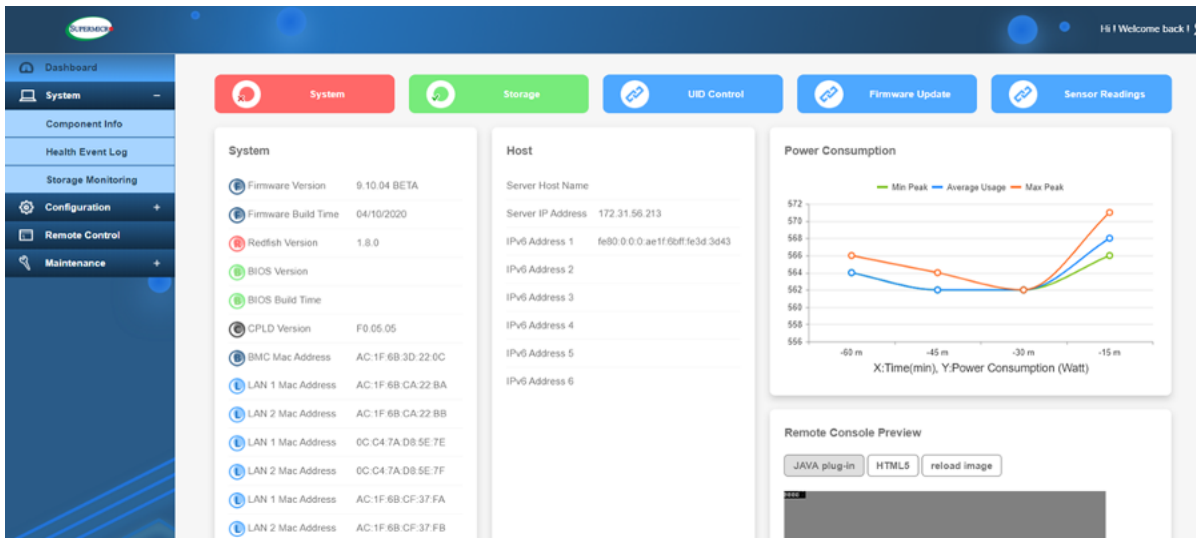


Figure 7-1. BMC Dashboard

7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the ["Technical Support Procedures" on page 182](#) section in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swap hardware components. If the below steps do not fix the setup configuration problem, contact your vendor for repairs.

Before Power On

1. Make sure that there are no short circuits between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install the processor (making sure it is fully seated) and connect the front panel connectors to the motherboard.

No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

No Video

1. If the power is on, but you do not have video, remove all add-on cards and cables.
2. Remove all memory modules and turn on the system (if the alarm is on, check the specs of memory modules, reset the memory, or try a different one).

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, do the following:

1. Remove all components from the motherboard, especially the DIMMs. Power on the system and check if the power-on LED and the BMC Heartbeat LED are on, and system fans are spinning.

2. Turn on the system with only one DIMM installed. If the system boots, check for bad DIMMs or slots by following the Memory Errors Troubleshooting procedure in this chapter.

Memory Errors

When suspecting faulty memory is causing the system issue, check the following:

1. Make sure that the memory modules are compatible with the system and are properly installed. See "[Maintenance and Component Installation](#)" on [page 47](#) for installation instructions. (For memory compatibility, refer to the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.)
2. Check if different speeds of DIMMs have been installed. It is strongly recommended that you use the same RAM type and speed for all DIMMs in the system.
3. Make sure that you are using the correct type of DIMMs recommended by the manufacturer.
4. Check for bad DIMMs or slots by swapping a single module among all memory slots and check the results.

Losing the System's Setup Configuration

1. Make sure that you are using a high-quality power supply. A poor-quality power supply may cause the system to lose the CMOS setup information. Refer to "[Introduction](#)" on [page 15](#) for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

If the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

1. Processor/BIOS support: Make sure that your processor is supported and that you have the latest BIOS installed in your system.
2. Memory support: Make sure that the memory modules are supported. Refer to the product page on our website at <https://www.supermicro.com>. Test the modules using memtest86 or a similar utility.

Note: Click on the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.

3. Storage Drive support: Make sure that all storage drives work properly. Replace the failed storage drives with good ones.
4. System cooling: Check the system cooling to make sure that all heatsink fans and processor/system fans, etc., work properly. Check the hardware monitoring settings in the BMC to make sure that the processor and system temperatures are within the normal range. Also, check the front panel Overheat LED and make sure that it is not on.
5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to our website for more information on the minimum power requirements.
6. Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as a CD/Media drive.
2. Cable connection: Check to make sure that all cables are connected and working properly.
3. Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with the processor and a memory module installed) to identify the trouble areas. Refer to the steps listed above in this section for proper troubleshooting procedures.
4. Identify bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

7.4 CMOS Clear

JBT1 on the X14DBM-SP motherboard is used to clear CMOS, which will also clear any passwords. For information on clearing CMOS, refer to ["CMOS Clear" on page 129](#) earlier in this manual.

7.5 Motherboard Battery

For information on removing, disposing of, and replacing the motherboard battery of your system, refer to ["Motherboard Battery Removal and Installation" on page 89](#).

7.6 Where to Get Replacement Components

If you need replacement parts for your SYS-222H-TN server, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found on the Supermicro website:

<https://www.supermicro.com>

Under the "Buy" menu, click the "Where to Buy" link.

7.7 Technical Support Procedures

Before contacting Technical Support, take the following steps. Also, note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Refer to "Troubleshooting Procedures" on page 176 or see the FAQs on our website (<https://www.supermicro.com/FAQ/index.php>) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website (https://www.supermicro.com/support/resources/bios_ipmi.php).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
 - Motherboard model and PCB revision number
 - BIOS release date/version (This can be seen on the initial display when your system first boots up.)
 - System configuration
4. An example of a Technical Support form is on our website at <https://webpr3.supermicro.com/SupportPortal>.
5. Distributors: For immediate assistance, have your account number ready when placing a call to our Technical Support department. For Supermicro contact information, refer to "Contacting Supermicro" on page 14.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the server to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations can be requested online at the following page:

<https://www.supermicro.com/RmaForm>

Whenever possible, repack the server in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the server securely, using packaging material to surround the server so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

7.8 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. Email us at Techwriterteam@supermicro.com to provide feedback on our manuals.

Chapter 8:

UEFI BIOS

The following content contains information on BIOS configuration with the SYS-222H-TN server.

8.1 Introduction	186
8.2 Main Setup	188
8.3 Advanced Setup Configurations	190
8.4 Event Logs	231
8.5 BMC	233
8.6 Security	237
8.7 Boot	241
8.8 Save & Exit	243

8.1 Introduction

This chapter describes the AMIBIOS™ Setup utility for the motherboard. The BIOS is stored on a chip and can be easily upgraded using the UEFI script (flash.nsh), the BMC WebUI, or the SuperServer Automation Assistant (SAA) utility.

Note: Due to periodic changes to the BIOS, some settings may have been added or deleted and might not yet be recorded in this manual. Refer to the Manual Download area of our website for any changes to BIOS that may not be reflected in this manual.

Updating BIOS

It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at the following page:

https://www.supermicro.com/support/resources/bios_ipmi.php

Check our BIOS warning message and the information on how to update your BIOS on our website. Select your motherboard model and download the BIOS file to your computer. Also, check the current BIOS revision to make sure that it is newer than your BIOS before downloading.

Important: Do not shut down or reset the system while updating the BIOS to prevent possible system boot failure! Read the motherboard README file carefully before you perform the BIOS update.

To update the BIOS under the UEFI Shell, unzip the BIOS file onto a bootable USB device and then boot into the built-in UEFI Shell. For motherboards with BMC support, type "flash.nsh <BIOS filename><BMC Username><BMC Password>" to start the BIOS update. The flash.nsh script will invoke the SAA (EFI) tool automatically to perform the BIOS update, beginning with uploading the BIOS image to BMC. After uploading the BIOS image, the system will reboot to continue the process. The BMC will take over and continue the BIOS update in the background. The process will take 3–5 minutes. Refer to the README file for more information.

Starting the Setup Utility

To enter the BIOS Setup utility, press the <Delete> key while the system is booting-up. In most cases, the <Delete> key is used to invoke the BIOS Setup screen. There are a few cases when other hot keys are used, such as <F1>, <F2>, etc. Each main BIOS menu option is described in this manual.

The Main BIOS screen has two main frames. The left frame displays all the options that can be configured. "Grayed-out" options cannot be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When a BIOS submenu or item is selected in the left frame, it is highlighted in white. Often a text message will accompany it. (Note that BIOS has default text messages built in. We retain the option to include, omit, or change any of these text messages.) Settings printed in **Bold** are the default values.

A "▶" indicates a submenu. Highlighting such an item and pressing the <Enter> key open the list of settings within that submenu.

The BIOS Setup utility uses a key-based navigation system called hot keys. Most of these hot keys (<F1>, <F2>, <F3>, <F4>, <F5>, <F6>, <Enter>, <ESC>, the arrow keys, etc.) can be used at any time during the setup navigation process.

8.2 Main Setup

The Main setup screen appears when the AMI BIOS Setup utility is first entered. To return to the Main setup screen, select the Main tab at the top of the screen. The Main BIOS setup screen is shown below.

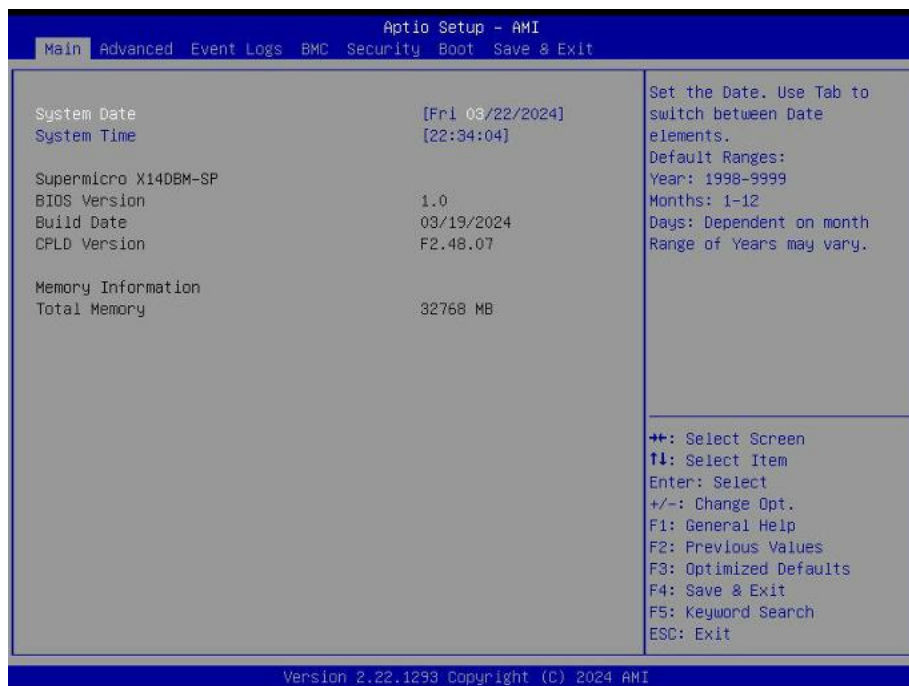


Figure 8-1. Main Setup Screen

System Date/System Time

Use the two features to change the system date and time. Highlight **System Date** or **System Time** using the arrow keys. Enter new values using the keyboard. Press the <Tab> key or the arrow keys to move between fields. The date must be entered in MM/DD/YYYY format. The time is entered in HH:MM:SS format.

Note: The time is in the 24-hour format. For example, 5:30 P.M. appears as 17:30:00.

Supermicro X14DBM-SP

BIOS Version

This feature displays the version of the BIOS ROM used in the system.

Build Date

This feature displays the date when the version of the BIOS ROM used in the system was built.

CPLD Version

This feature displays the version of the Complex-Programmable Logical Device (CPLD) used in the system.

Memory Information

Total Memory

This feature displays the total size of memory available in the system.

8.3 Advanced Setup Configurations

Use the arrow keys to select the Advanced submenu and press <Enter> to access the submenu items.

Important: Use caution when changing the Advanced settings. An incorrect value, an improper DRAM frequency, or a wrong BIOS timing setting may cause the system to malfunction. When this occurs, revert the settings to the default manufacturing settings.

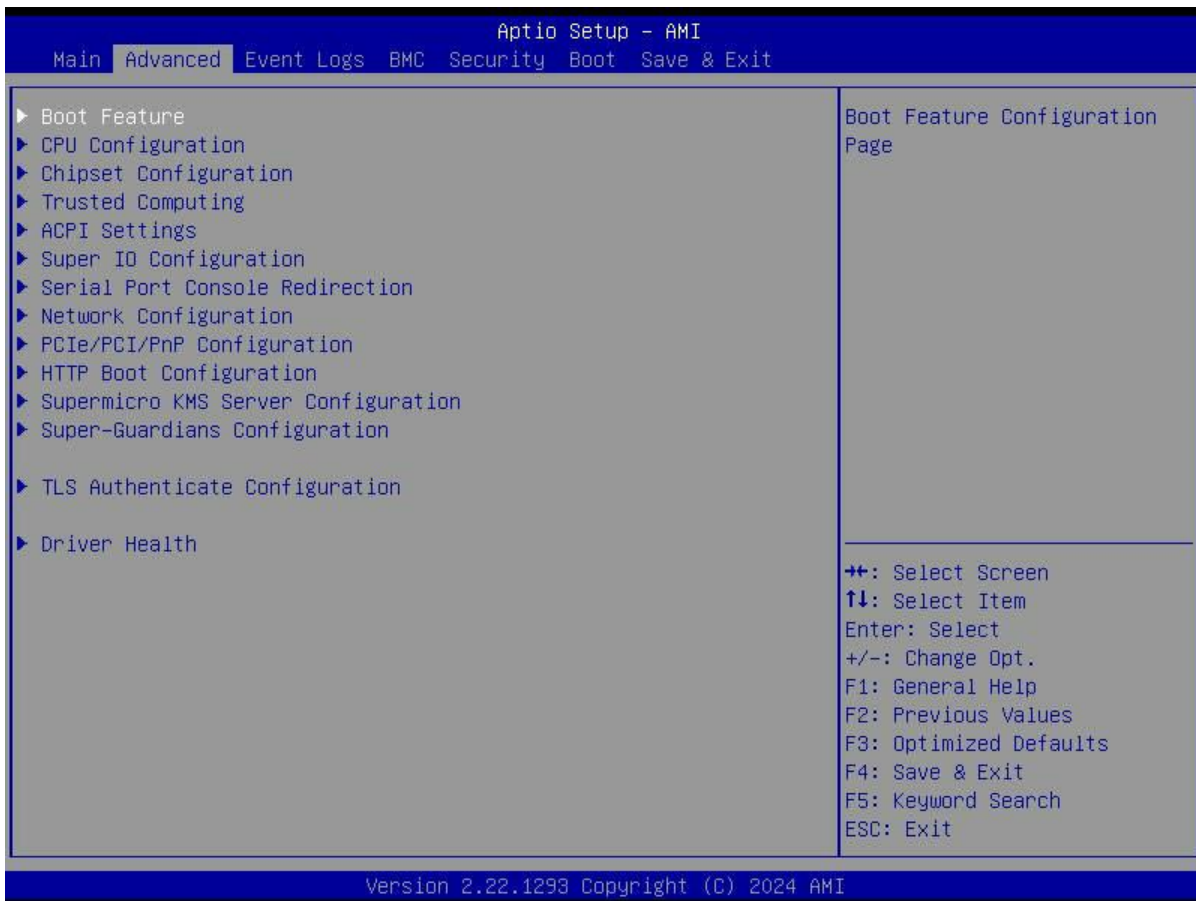


Figure 8-2. Advanced Screen

Boot Feature Menu

► Boot Feature

Quiet Boot

Use this feature to select the screen between displaying the Power-on Self Test (POST) messages or the OEM logo upon bootup. Select Disabled to display the POST messages. Select Enabled to display the OEM logo instead of the normal POST messages. The options

are Disabled and **Enabled**.

Note: BIOS POST messages are always displayed regardless of the setting of this feature.

Bootup NumLock State

Use this feature to set the Power-on state for the <Numlock> key. The options are **On** and Off.

Wait For "F1" If Error

Select Enabled to force the system to wait until the <F1> key is pressed if an error occurs. The options are **Disabled** and Enabled.

Re-try Boot

If this feature is set to Enabled, the system BIOS will automatically reboot the system from an Extensible Firmware Interface (EFI) boot device after an initial boot failure. The options are **Disabled** and Enabled.

Power Configuration

Watch Dog Function

Select Enabled to allow the Watch Dog timer to reboot the system when it is inactive for more than five minutes. The options are **Disabled** and Enabled.

Watch Dog Action (Available when "Watch Dog Function" is set to Enabled)

Use this feature to configure the Watch Dog Time_out setting. The options are **Reset** and NMI.

Restore on AC Power Loss

Use this feature to set the power state after a power outage. Select Stay Off for the system power to remain off after a power loss. Select Power On for the system power to be turned on after a power loss. Select Last State to allow the system to resume its last power state before a power loss. The options are Stay Off, Power On, and **Last State**.

Power Button Function

This feature controls how the system shuts down when the power button is pressed. Select 4 Seconds Override to power off the system after pressing and holding the power button for four seconds or longer. Select Instant Off to instantly power off the system as soon as you press the power button. The options are **Instant Off** and 4 Seconds Override.

CPU Configuration Menu

► CPU Configuration

Important: Setting the wrong values for the features included in the following sections may cause the system to malfunction.

The following processor information is displayed:

- Processor BSP Revision
- Processor Socket
- Processor ID
- Processor Frequency
- Processor Max Ratio
- Processor Min Ratio
- Microcode Revision
- L1 Cache RAM (Per Core)
- L2 Cache RAM (Per Core)
- L3 Cache RAM (Per Package)
- Processor 0 Version

Hyper-Threading [ALL]

Select Enabled to use Intel Hyper-Threading Technology to enhance CPU performance. The options are Disabled and **Enabled**. This feature is CPU-dependent.

Hardware Prefetcher

If this feature is set to Enabled, the hardware prefetcher will prefetch data from the main system memory to Level 2 cache to help expedite the data transaction to enhance memory performance. The options are **Enabled** and Disabled.

Note: This feature is NOT available when "Workload Profile" is set to HPC, I/O, or Virtualization.

Adjacent Cache Prefetch

Select Enabled for the CPU to prefetch both cache lines for 128 bytes as comprised. Select Disabled for the CPU to prefetch both cache lines for 64 bytes. The options are **Enabled** and Disabled.

Note: This feature is NOT available when "Workload Profile" is set to HPC, I/O, or Virtualization.

DCU Streamer Prefetcher

If this feature is set to Enabled, the Data Cache Unit (DCU) streamer prefetcher will prefetch data streams from the cache memory to the DCU to speed up data accessing and processing to enhance CPU performance. The options are Enabled, Disabled, and **Auto**.

Note: This feature is NOT available when "Workload Profile" is set to HPC, I/O, or Virtualization.

DCU IP Prefetcher

This feature allows the system to use the sequential load history, which is based on the instruction pointer of previous loads, to determine whether the system will prefetch additional lines. The options are **Enabled** and Disabled.

Note: This feature is NOT available when "Workload Profile" is set to HPC, I/O, or Virtualization.

LLC Prefetch

If this feature is set to Enabled, LLC (hardware cache) prefetching on all threads will be supported. The options are **Disabled** and Enabled. This feature is CPU-dependent.

Note: This feature is available when "Workload Profile" is set to Disabled.

Homeless Prefetch

Select Enabled for Homeless Prefetch support on all threads, which is an Effective Prefetch Strategy (EPS) used to enhance memory performance by reducing communication overhead, network latency, and the wait time needed for barrier synchronization in memory prefetching commonly associated with the home-based software Distributed Shared Memory (DSM) system. The options are Disabled, Enabled, and **Auto**. Please note that the option of Auto is program-specific. This feature is CPU-dependent.

AMP Prefetch

Select Enabled to use a machine learning algorithm to predict the best L2 prefetcher configuration for the currently running workload. This feature can improve the performance of various general-purpose workloads. The options are Disabled and **Enabled**. This feature is CPU-dependent.

APIC Physical Mode

Use this feature to enable the APIC physical destination mode. The options are **Disabled** and Enabled. (APIC is the abbreviation for Extended Advanced Programmable Interrupt Controller.)

TXT Support

Select Enabled to enable Intel Trusted Execution Technology (TXT) support to enhance system integrity and data security. The options are **Disabled** and Enabled. This feature is CPU-dependent.

Note: If this feature is set to Enabled, be sure to disable Device Function On-Hide (EV DFX) support when it is present in the BIOS for the system to work properly.

Intel Virtualization Technology

Select Enabled to enable the Intel Vanderpool Technology for Virtualization platform support, which allows multiple operating systems to run simultaneously on the same computer to maximize system resources for performance enhancement. The options are Disabled and **Enabled**. Changes take effect after you save settings and reboot the system.

Notes:

- This feature is NOT available when "TXT Support" is set to Enabled.
- This feature is NOT available when "Workload Profile" is set to Virtualization.

Enable SMX

Select Enabled to support Safer Mode Extensions (SMX), which provides a programming interface for system software to establish a controlled environment to support the trusted platform configured by the end user and to verify a virtual machine monitor before it is allowed to run. The options are **Disabled** and Enabled.

Note: This feature is available when "TXT Support" is set to Disabled.

PPIN Control

Select Unlock/Enabled to use the Protected Processor Inventory Number (PPIN) in the system. The PPIN is a unique number set for tracking a given Intel Xeon server processor. The options are Lock/Disabled and **Unlock/Enabled**.

AES-NI

Select Enabled to use the Intel Advanced Encryption Standard (AES) New Instructions (NI) to ensure data security. The options are Disabled and **Enabled**.

Advanced Power Management Configuration Menu

► Advanced Power Management Configuration

Power Performance Tuning

This feature allows either operating system (OS) or BIOS to control the EPB. The options are **OS Controls EPB**, BIOS Controls EPB, and PCEI Controls EPB. (PECI is the abbreviation for Platform Environment Control Interface. EPB is the abbreviation for Intel Performance and Energy Bias Hint.)

ENERGY_PERF_BIAS_CFG Mode (ENERGY PERFORMANCE BIAS CONFIGURATION Mode) (Available when "Power Performance Tuning" is set to BIOS Controls EPB)

Use this feature to configure the proper operation setting for your machine by achieving the desired system performance level and energy saving (efficiency) level at the same time. Select Performance to enhance system performance; however, this may consume more power as energy is needed to fuel the processors for operation. The options are Performance, **Balanced Performance**, Balanced Power, and Power.

CPU P State Control Menu

► CPU P State Control

Note: This submenu is available when "Power Performance Tuning" is set to BIOS Controls EPB.

AVX P1 (Available when "SpeedStep (P-States)" is set to Enabled)

Use this feature to set the appropriate TDP level for the system. The Intel Advanced Vector Extensions (Intel AVX) P1 feature allows you to set the base P1 ratio for Streaming SIMD Extensions (SSE) and AVX workloads. Each P1 ratio has the corresponding AVX Impressed Current Cathodic Protection (ICCP) pre-grant license level, which refers to the selection between different AVX ICCP transition levels. The options are **Nominal**, Level 1, and Level 2. This feature is CPU-dependent.

The following information is CPU-dependent and will be displayed when "SpeedStep (P-States)" is set to Enabled:

- SST-PP Level
- Capable
- Core Count
- P1 Ratio

- Package TDP (W)
- DTS_Max

SpeedStep (P-States)

Enhanced Intel SpeedStep Technology (EIST) allows the system to automatically adjust processor voltage and core frequency in an effort to reduce power consumption and heat dissipation. Refer to Intel's website for detailed information. The options are Disabled and **Enable**.

EIST PSD Function (Available when "SpeedStep (P-States)" is set to Enabled)

This feature reduces the latency that occurs when one P-state changes to another, thus allowing the transitions to occur more frequently. This will allow for more demand-based P-state switching to occur based on the real-time energy needs of applications so that the power-to-performance balance can be optimized for energy efficiency. The options are **HW_ALL** and **SW_ALL**.

Turbo Mode (Available when "SpeedStep (P-States)" is set to Enabled)

Select Enable to allow the CPU to operate at the manufacturer-defined turbo speed by increasing CPU clock frequency. This feature is available when it is supported by the processors used in the system. The options are Disabled and **Enabled**.

Hardware PM State Control Menu

► Hardware PM State Control

Notes:

- This submenu is available when "Power Performance Tuning" is set to BIOS Controls EPB.
- This submenu is NOT available when "Workload Profile" is set to HPC or Virtualization.

Hardware P-States

If this feature is set to Disabled, system hardware will choose a P-state setting for the system based on an OS request. If this feature is set to Native Mode, system hardware will choose a P-state setting based on the OS guidance. If this feature is set to Native Mode with No Legacy Support, system hardware will choose a P-state setting independently without the OS guidance. The options are Disabled, **Native Mode**, Out of Band Mode, and Native Mode with No Legacy Support.

CPU C State Control Menu

► CPU C State Control

Note: This submenu is available when “Power Performance Tuning” is set to BIOS Controls EPB.

Monitor MWAIT

Select Enabled to support MONITOR and MWAIT, which are two instructions in Streaming SIMD Extension 3 (SSE3) to improve synchronization between multiple threads for CPU performance enhancement. The options are Disabled and **Enabled**.

C1 to C1e Promotion

If this feature is set to Enabled, CPU will run at its minimum frequency for lower power consumption in the C1 state. The options are Disabled and **Enabled**. This feature is CPU-dependent.

Note: This feature is available when "Workload Profile" is set to Disabled.

ACPI C1 Enumeration

Use this feature to select the ACPI C1 state or the ACPI C1e state. The options are C1 and **C1e**. This feature is CPU-dependent. (ACPI is the abbreviation for Advanced Configuration and Power Interface.)

Note: This feature is available when "Workload Profile" is set to Disabled.

ACPI C6x Enumeration

Use this feature to configure C6 state or C6 P-state as ACPI C2 or ACPI C3 state. The options are Disabled, C6 as ACPI C2, C6 as ACPI C3, C6-P as ACPI C2, C6-P as ACPI C3, and **Auto**.

Note: This feature is available when "Workload Profile" is set to Disabled.

Package C State Control Menu

► Package C State Control

Note: This submenu is available when “Power Performance Tuning” is set to BIOS Controls EPB.

Package C State

Use this feature to optimize and reduce CPU package power consumption in the idle mode. Please note that the changes you've made in this setting will affect all CPU cores or the circuits of the entire system. The options are C0/C1 state, C2 state, C6 (non Retention) state, No Limit, and **Auto**.

LTR IIO Input

Use this feature to set the MSR 1FCh Bit[35]. The options are Take IIO LTR input and **Ignore IIO LTR input**.

CPU1 Core Disable Bitmap Menu

▶ **CPU1 Core Disable Bitmap**

Available Bitmap[0]:

This feature displays the available Bitmap[0]. This feature is CPU-dependent.

Available Bitmap[1]:

This feature displays the available Bitmap[1]. This feature is CPU-dependent.

CPU Core Count:

This feature displays the number of CPU cores that can be enabled.

CPU1 Cores Enable

Use this feature to set the number of CPU cores to be enabled. Enter 0 to enable all CPU cores. Note that it is required to enable at least one core per CPU. The default setting is **0**.

Chipset Configuration Menu

▶ **Chipset Configuration**

Important: Setting the wrong values in this section may cause the system to malfunction.

Uncore Configuration Menu

▶ **Uncore Configuration**

The following information is displayed.

- Number of CPU
- Current UPI Link Speed
- Current UPI Link Frequency

- Global MMIO Low Base / Limit
- Global MMIO High Base / Limit
- PCIe Configuration Base / Size

Degrade Precedence

Use this feature to select the degrading precedence option for Ultra Path Interconnect (UPI) connections. Select Topology Precedent to degrade UPI features if system options are in conflict. Select Feature Precedent to degrade UPI topology if system options are in conflict. The options are **Topology Precedence** and Feature Precedence.

Link L0p Enable

Select Enabled for the system BIOS to enable Link L0p support, which allows the CPU to reduce the UPI links from full width to half width in the event when the CPU's workload is low in an attempt to save power. This feature is available for the system that uses Intel processors with UPI technology support. The options are **Disabled**, Enabled, and Auto.

Note: You can change the performance settings for non-standard applications by using this parameter. It is recommended that the default settings be used for standard applications.

Link L1 Enable

Select Enabled for the BIOS to activate Link L1 support, which will power down the UPI links to save power when the system is idle. This feature is available for the system that uses Intel processors with UPI technology support. The options are **Disabled**, Enabled, and Auto.

Note: Link L1 is an excellent feature for an idle system. L1 is used during Package C-States when its latency is hidden by other components during a wakeup.

KTI Prefetch

Keizer Technology Interconnect (KTI) is also known as the Intel Ultra Path Interconnect (UPI) technology. Select Enabled for the KTI prefetcher to preload the L1 cache with data deemed relevant, which allows the memory read to start earlier on a DDR bus in an effort to reduce latency. Select Auto for the KTI prefetcher to automatically preload the L1 cache with relevant data whenever is needed. The options are Disabled, Enabled, and **Auto**.

IO Directory Cache (IODC)

This feature allows the IODC to generate snoops instead of generating memory lockups for remote IIO (InvlToM) and/or WCiLF (Cores). Select Auto for the IODC to generate snoops (instead of memory lockups) for WCiLF (Cores). The options are Disabled, **Auto**, Enable for Remote InvltoM Hybrid Push, Enable for Remote InvltoM AllocFlow, Enable for Remote InvltoM Hybrid AllocNonAlloc, and Enable for Remote InvltoM and Remote WCiLF.

SNC

Sub NUMA Clustering (SNC) is a feature that breaks up the Last Level Cache (LLC) into clusters based on address range. Each cluster is connected to a subset of the memory controller. Enable this feature to improve average latency and reduce memory access congestion for higher performance. The options are Disabled, Enabled, **Auto**. This feature is CPU-dependent.

XPT Prefetch

XPT Prefetch is a feature that speculatively makes a copy to the memory controller of a read request being sent to the LLC. If the read request maps to the local memory address and the recent memory reads are likely to miss the LLC, a speculative read is sent to the local memory controller. The options are Disabled, Enabled, and **Auto**.

Stale AtoS

The in-memory directory has three states: I, A, and S states. The I (-invalid) state indicates that the data is clean and does not exist in the cache of any other sockets. The A (-snoop All) state indicates that the data may exist in another socket in an exclusive or modified state. The S state (-Shared) indicates that the data is clean and may be shared in the caches across one or more sockets. When the system is performing "read" on the memory and if the directory line is in A state, we must snoop all other sockets because another socket may have the line in a modified state. If this is the case, a "snoop" will return the modified data. However, it may be the case that a line "reads" in an A state, and all the snoops come back with a "miss." This can happen if another socket reads the line earlier and then has silently dropped it from its cache without modifying it. If "Stale AtoS" is enabled, a line will transition to the S state when the line in the A state returns only snoop misses. That way, subsequent reads to the line will encounter it in the S state and will not have to snoop, saving the latency and snoop bandwidth. Stale "AtoS" may be beneficial in a workload where there are many cross-socket reads. The options are Disabled, Enabled, and **Auto**.

LLC Dead Line Alloc

Select Enabled to optimally fill the dead lines in the LLC. The options are Disabled, **Enabled**, and Auto.

Memory Configuration Menu

► **Memory Configuration**

This submenu is used to configure the Integrated Memory Controller (IMC) settings.

Enforce DDR Memory Frequency POR

Select Enforce POR to enforce Plan of Record (POR) restrictions for DDR memory frequency and voltage programming. The options are **Enforce POR**, Enforce Stretch Goals, and Disabled.

Host Memory Frequency

Use this feature to set the maximum memory frequency for onboard memory modules. The options are **Auto**, 4800, 5200, 5600, 6000, and 6400. Please note that the available options are CPU-dependent.

Global Scrambling

Select Enabled to enable data scrambling to enhance system performance and data integrity. The options are Disabled and **Enabled**.

Memory Topology Menu

► Memory Topology

This submenu displays the information of onboard memory modules as detected by the BIOS, for example:

P1-DIMMA1: 5600MT/s Hynix SRx8 16GB RDIMM

Memory Map Menu

► Memory Map

Intel(R) Flat Memory Mode Support

Enable this feature to allow hardware-managed data movement between DDR5 and CXL memory, making total memory capacity visible to your system. The options are **Disabled** and Enabled.

DDR CXL Heterogeneous Interleave Support

Select Enabled to support heterogeneous interleaving for physical DDR5 and CXL memory. The options are **Disabled** and Enabled.

Memory RAS Configuration Menu

► Memory RAS Configuration

Use this submenu to configure the memory mirroring, Reliability Availability Serviceability (RAS) settings.

Mirror Mode

Use this feature to configure the mirror mode settings for all 1LM/2LM memory modules in the system, which will create a duplicate copy of data stored in the memory to increase memory security, but it will reduce the memory capacity into half. The options are **Disabled** and Full Mirror Mode.

Note: This feature is available when "UEFI ARM Mirror" is set to Disabled.

UEFI ARM Mirror

If this feature is set to Enabled, mirror mode configuration settings for UEFI-based Address Range memory will be enabled upon system boot. This will create a duplicate copy of data stored in the memory to increase memory security, but it will reduce the memory capacity into half. The options are **Disabled** and Enabled. The Address Range Mirroring (ARM) feature supports partial memory mirroring. This feature is CPU-dependent.

Note: This feature is available when "Mirror Mode" is set to Disabled.

Mirror TAD0

Use this feature to enable the mirror mode on the entire memory for Target Address Decoder 0 (TAD0). The options are **Disabled** and Enabled. This feature is CPU-dependent.

Note: This feature is available when "Mirror Mode" is set to Disabled.

ARM Mirror Percentage (Available when "UEFI ARM Mirror" is set to Enabled)

Use this feature to set the percentage of memory space to be used for UEFI ARM mirroring for memory security enhancement. The default setting is **2500**.

Correctable Error Threshold

Use this feature to specify the threshold value for correctable memory-error logging, which sets a limit on the maximum number of events that can be logged in the memory error log at a given time. The default setting is **512**.

Note: This feature is available when "Memory PFA Support" is set to Disabled.

Leaky Bucket Low Bit

Use this feature to set the Low Bit value for the Leaky Bucket algorithm, which is used to check the data transmissions between CPU sockets and the memory controller. The default setting is **12**.

Leaky Bucket High Bit

Use this feature to set the High Bit value for the Leaky Bucket algorithm, which is used to check the data transmissions between CPU sockets and the memory controller. The default setting is **13**.

ADDDC Sparing (Available when populating 1Rx4, 2Rx4, and 4Rx4 DIMMs and when "Memory PFA Support" is set to Disabled)

Select Enabled for Adaptive Double Device Data Correction (ADDDC) support, which will not only provide memory error checking and correction but will also prevent the system from issuing a performance penalty before a device fails. Note that virtual lockstep mode will only start to work for ADDDC after a faulty DRAM module is spared. The options are Disabled and **Enabled**.

DDR PPR Type

Post Package Repair (PPR) is a new feature available for the DDR4/DDR5 technology. PPR provides additional spare capacity within a DDR4/DDR5 DRAM module that is used to replace faulty cell areas detected during system boot. PPR offers two types of memory repairs. Soft Post Package Repair (sPPR) provides a quick, temporary fix on a raw element in a bank group of a DDR4/DDR5 DRAM device, while hard Post Package Repair (hPPR) will take a longer time to provide a permanent repair on a raw element. The options are PPR Disabled, **Hard PPR**, and Soft PPR.

Note: This feature is available when "Memory PFA Support" is set to Disabled.

Enhanced PPR

Use this feature to set advanced memory test. Select Enabled to always execute for every boot. The options are **Disabled**, Enabled, and Persistent.

Memory PFA Support (Available when the DCMS key is activated)

Select Enabled to enable memory Predictive Failure Analysis (PFA) support. PFA can be used to avoid uncorrectable faults on the same memory page. The options are **Disabled** and Enabled.

Security Configuration Menu**► Security Configuration**

Memory Encryption (TME) [Outputs]

The following information is displayed.

- MSE activation state
- MK-TME activation state
- CI activation state
- Cryptographic Algorithm configured

Memory Encryption (TME) [Inputs]

Memory Encryption (TME)

Select Enabled for Intel Total Memory Encryption (TME) support to enhance memory data security. The options are **Disabled** and Enabled.

Total Memory Encryption Multi-Tenant (TME-MT)

Use this feature to support tenant-provided (SW-provided) keys. The options are **Disabled** and Enabled.

Memory Integrity

Use this feature to enable TME-MT memory integrity protection for memory transactions. The options are **Disabled** and Enabled.

The following information is displayed.

- KEY stock amount
- TME-MT key ID bits

TME Encryption Algorithm

Use this feature to set the TME encryption algorithm. The options are AES-XTS-128 and **AES-XTS-256**.

Trust Domain Extensions (TDX) [Outputs]

The following information is displayed.

- TDX activation state

Trust Domain Extensions (TDX) [Inputs]

Trust Domain Extensions (TDX) (Available when your motherboard supports Intel TDX)

Use this feature to enable Intel Trust Domain Extensions (TDX) technology support to enhance control of data security. The options are **Disabled** and **Enabled**.

Note: To support TDX features, DIMM population must be symmetric across integrated Memory Controllers (IMCs) and at least eight DIMMs per socket. For each memory controller, populating the first slots (Px-DIMMX1 or DIMMX1 depending on the motherboard design) in all channels is required. Refer to memory population below for your motherboard.

TDX Memory Population for Intel Xeon 6700-Series Processors with E-Cores																	
IMC#	IMC4				IMC3				CPU	IMC1				IMC2			
Channel	DIMMH		DIMMG		DIMMF		DIMME			DIMMA		DIMMB		DIMMC		DIMMD	
	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2		Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1
8	DDR5		DDR5		DDR5		DDR5			DDR5		DDR5		DDR5		DDR5	
16	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5

TDX Memory Population for Intel Xeon 6700/6500-Series Processors with P-Cores																	
IMC#	IMC4				IMC3				CPU	IMC1				IMC2			
Channel	DIMMH		DIMMG		DIMMF		DIMME			DIMMA		DIMMB		DIMMC		DIMMD	
	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2		Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1
8	DDR5		DDR5		DDR5		DDR5			DDR5		DDR5		DDR5		DDR5	
12	DDR5		DDR5	DDR5	DDR5		DDR5	DDR5	DDR5	DDR5		DDR5	DDR5	DDR5		DDR5	
16	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5

TDX Secure Arbitration Mode Loader (SEAM Loader) (Available when your motherboard supports Intel TDX and when "Trust Domain Extensions (TDX)" is set to Enabled)

The SEAM Loader (SEAMLDR) is used to load and update Intel TDX modules into the SEAM memory range by verifying the digital signature. The options are **Disabled** and **Enabled**.

► TDX Physical PCIe Configuration (Available when "Trust Domain Extension (TDX)" is set to Enabled)

The following information is displayed.

- Available port bitmap [HEX]
- Disable port bitmap [HEX]

TME-MT/TDX Key Split (Available when "Trust Domain Extensions (TDX)" is set to Enabled)

Use this feature to set the number of bits for TDX. The other bits will be used by TME-MT. The default setting is **1**.

The following information is displayed when "Trust Domain Extensions (TDX)" is set to Enabled.

- TME-MT Keys:
- TDX Keys:

Processor Reserved Memory [Capabilities]

The following information is displayed.

- PRMRR Min Size per domain
- PRMRR Max Size per domain

Processor Reserved Memory [Outputs]

The following information is displayed.

- PRMRR Size per domain
- PRM Size per socket
- PRM Size per system

Software Guard Extensions (SGX) [Outputs]

The following information is displayed when your motherboard supports SGX.

- SGX activation state
- SGX error code [HEX]

Software Guard Extensions (SGX) [Inputs]

The following features are available when your motherboard supports SGX.

Note: To support SGX features, DIMM population must be symmetric across Integrated Memory Controllers (IMCs) and at least eight DIMMs per socket. For each memory controller, populating the first slots (Px-DIMMX1 or DIMMX1 depending on the motherboard design) in all channels is required. Refer to memory population below for your motherboard.

SGX Memory Population for Intel Xeon 6700-Series Processors with E-Cores																	
IMC#	IMC4				IMC3				CPU	IMC1				IMC2			
Channel	DIMMH		DIMMG		DIMMF		DIMME			DIMMA		DIMMB		DIMMC		DIMMD	
	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2		Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1
8	DDR5		DDR5		DDR5		DDR5			DDR5		DDR5		DDR5		DDR5	
16	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	

SGX Memory Population for Intel Xeon 6700/6500-Series Processors with P-Cores																	
IMC#	IMC4				IMC3				CPU	IMC1				IMC2			
Channel	DIMMH		DIMMG		DIMMF		DIMME			DIMMA		DIMMB		DIMMC		DIMMD	
	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2		Slot2	Slot1	Slot2	Slot1	Slot2	Slot1	Slot2	Slot1
8	DDR5		DDR5		DDR5		DDR5			DDR5		DDR5		DDR5		DDR5	
12	DDR5		DDR5	DDR5	DDR5		DDR5	DDR5	DDR5	DDR5		DDR5	DDR5	DDR5		DDR5	
16	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	DDR5	

SGX Factory Reset

Use this feature to perform an SGX factory reset to delete all registration data and force an Initial Platform Establishment flow. Reboot the system for the changes to take effect. The options are **Disabled** and Enabled.

SW Guard Extensions (SGX)

Use this feature to enable Intel Software Guard Extensions (SGX) support. Intel SGX is a set of extensions that increases the security of application code and data by using enclaves in memory to protect sensitive information. The options are **Disabled** and Enabled.

SGX Package Info In-Band Access

Setting this feature to Enabled is required before the BIOS provides software with the key blobs, which are generated for each CPU package. The options are **Disabled** and Enabled.

SGX PRMRR Size Requested (Available when "SW Guard Extensions (SGX)" is set to Enabled)

Use this feature to set the Processor Reserved Memory Range Register (PRMRR) size. The options are **Auto**, 128M, 256M, 512M, 1G, 2G, 4G, 8G, 16G, 32G, 64G, 128G, 256G, and 512G. Please note that the available options are based on your motherboard features, memory size, and memory map.

SGX QoS (Available when "SW Guard Extensions (SGX)" is set to Enabled)

Use this feature to enable Intel SGX Quality of Service (QoS) support. QoS can enhance network performance by prioritizing network traffic. The options are Disabled and **Enabled**.

Select Owner EPOCH Input Type (Available when "SW Guard Extensions (SGX)" is set to Enabled)

Owner EPOCH is used as a parameter to add personal entropy into the key derivation process. A correct Owner EPOCH is required to have access to personal data previously sealed by other platform users. There are two Owner EPOCH modes. One is New Random Owner EPOCH, and the other is manually entered by the user. Each EPOCH is 64-bit. The options are **SGX Owner EPOCH deactivated**, Change to New Random Owner EPOCHs, and Manual User Defined Owner EPOCHs.

Note: Changing the Owner EPOCH value will lose the data in enclaves.

Software Guard Extensions Epoch 0

Use this feature to enter the EPOCH value. The default setting is **0**.

Note: This feature is available when "SW Guard Extensions (SGX)" is set to Enabled. This feature is NOT available when "Select Owner EPOCH Input Type" is set to SGX Owner EPOCH deactivated.

Software Guard Extensions Epoch 1

Use this feature to enter the EPOCH value. The default setting is **0**.

Note: This feature is available when "SW Guard Extensions (SGX)" is set to Enabled. This feature is NOT available when "Select Owner EPOCH Input Type" is set to SGX Owner EPOCH deactivated.

SGXLEPUBKEYHASHx Write Enable (Available when "SW Guard Extensions (SGX)" is set to Enabled)

Use this feature to enable writes to SGXLEPUBKEYHASH[3..0] from OS/SW. The options are Disabled and **Enabled**. Only those CPUs that support Intel SGX Flexible Launch Control (FLC) feature have SGXLEPUBKEYHASH, which contains the hash of the public key for the SGX

Launch Enclave (LE) to be signed with.

SGXLEPUBKEYHASH0 (Available when both "SW Guard Extensions (SGX)" and "SGXLEPUBKEYHASHx Write Enable" are set to Enabled)

Use this feature to enter the bytes 0–7 of SGX Launch Enclave Public Key Hash.

The default setting is **0**.

SGXLEPUBKEYHASH1 (Available when both "SW Guard Extensions (SGX)" and "SGXLEPUBKEYHASHx Write Enable" are set to Enabled)

Use this feature to enter the bytes 8–15 of SGX Launch Enclave Public Key Hash.

The default setting is **0**.

SGXLEPUBKEYHASH2 (Available when both "SW Guard Extensions (SGX)" and "SGXLEPUBKEYHASHx Write Enable" are set to Enabled)

Use this feature to enter the bytes 16–23 of SGX Launch Enclave Public Key Hash.

The default setting is **0**.

SGXLEPUBKEYHASH3 (Available when both "SW Guard Extensions (SGX)" and "SGXLEPUBKEYHASHx Write Enable" are set to Enabled)

Use this feature to enter the bytes 24–31 of SGX Launch Enclave Public Key Hash.

The default setting is **0**.

SGX Auto MP Registration (Available when "SW Guard Extensions (SGX)" is set to Enabled)

Use this feature to enable/disable SGX Auto Multi-Package Registration Agent (MPA) running automatically at boot time. The options are **Disabled** and Enabled.

I/O Configuration Menu

► I/O Configuration

PCIe ASPM Support (Global)

Use this feature to disable the Active State Power Management (ASPM) support for all PCIe root ports. The options are **Disabled** and Auto.

CPU1 Configuration Menu

► CPU1 Configuration

► PCI Express 0 / PCI Express 1 / PCI Express 2 / PCI Express 3 / PCI Express 4 / PCI Express 5

Note: The number of PCIe slots and the slot naming can differ depending on the PCIe devices connected to your motherboard.

Intel VMD Technology

When this feature is set to Enabled, VMD support will be automatically enabled when a VROC key is detected by the BIOS. The options are **Disabled** and Enabled.

Notes:

- This feature is available when "NVMe Mode Switch" is set to Manual.
- After you've enabled VMD in the BIOS on a PCIe slot, this PCIe slot will be dedicated for VMD use only, and it will no longer support any PCIe device. To re-activate this slot for PCIe use, disable VMD in the BIOS.

Bifurcation

This feature is CPU-dependent. Use this feature to configure the PCIe Bifurcation setting for the PCIe port you specified. The options are **Auto**, x4x4x4x4, x4x4x8, x8x4x4, x8x8, and x16.

► PCI Express 5 Port A/Port C/Port E/Port G

Note: The number of PCIe slots and the slot naming can differ depending on the PCIe devices connected to your motherboard.

Requested Link Speed

Use this feature to configure the link speed for the PCIe port you specified. The options are **Auto**, Gen 1 (2.5 GT/s), Gen 2 (5 GT/s), Gen 3 (8 GT/s), Gen 4 (16 GT/s), and Gen 5 (32 GT/s).

The following information is displayed.

- Max Link Width
- Current Link Width

- Current Link Speed

Data Link Feature Exchange

Use this feature to enable data link feature negotiation in the Data Link Feature Capabilities (DLFCAP) register. The options are Disabled and **Enabled**.

PCIe Port Max Payload Size

Use this feature to configure the maximum payload size supported in Direct Media Interface (DMI) device capabilities register for the device installed in the PCIe port. The options are 128B, 256B, 512B, and **Auto**.

MCTP

Enable this feature, Management Component Transport Protocol (MCTP), to support communications between devices in a platform management subsystem. MCTP's underlying device buses include SMBus/I²C, serial links, PCIe, and USB. The options are Disabled and **Enabled**.

Equalization Bypass To Highest Rate

Set this feature to Enabled to reduce the link training time for PCIe 5.0 device by skipping equalization of intermediate data rates. The options are Disabled and **Enabled**.

Intel VMD Technology

When this feature is set to Enabled, VMD support will be automatically enabled when a VROC key is detected by the BIOS. The options are **Disabled** and Enabled.

Intel VT for Directed I/O (VT-d) Menu

► Intel VT for Directed I/O (VT-d)

Pre-boot DMA Protection

Select Enabled to establish DMA protection during pre-boot processing by setting DMA_CTRL_PLATFORM_OPT_IN_FLAG in the DMAR ACPI table. The options are **Enabled** and Disabled. (DMA is the abbreviation for Direct Memory Access. DMAR is the abbreviation for DMA Remapping Reporting.)

PCIe ACSCTL

Select Enabled to program ACS control to Chipset PCIe Root Port bridges. Select Disabled to program ACS control to all PCIe Root Port bridges. The options are Enabled and **Disabled**.

PCIe Leaky Bucket Configuration Menu

► **PCIe Leaky Bucket Configuration**

Expected BER

This is the expected Bit Error Rate for all speeds. The default setting is **9687500000**.

Time Window (Gen1/2)

This is the error burst protection time window for Gen1 and Gen2 speeds. A burst of errors within the window is counted as one. The default setting is **65535**.

Time Window (Gen3/4/5)

This is the error burst protection time window for Gen3, Gen4, and Gen5 speeds. A burst of errors within the window is counted as one. The default setting is **2**.

Error Threshold (Gen1/2)

This is the error threshold for Gen1 and Gen2 speeds. An event is triggered when the error count exceeds the threshold. The default setting is **0**.

Error Threshold (Gen3/4/5)

This is the error threshold for Gen3, Gen4, and Gen5 speeds. An event is triggered when the error count exceeds the threshold. The default setting is **31**.

Gen3/4/5 Re-Equalization

Select Enable to re-reun equalization only when operating at Gen3, Gen4, and Gen5 speeds. The options are **Enabled** and Disabled.

Gen2 Link Degradation

Use this feature to enable PCIe Gen2 link degradation. Applies only when operating at PCIe Gen2 speeds. The options are Disabled and **Enabled**.

Gen3 Link Degradation

Use this feature to enable PCIe Gen3 link degradation. Applies only when operating at PCIe Gen3 speeds. The options are Disabled and **Enabled**.

Gen4 Link Degradation

Use this feature to enable PCIe Gen4 link degradation. Applies only when operating at PCIe Gen4 speeds. The options are Disabled and **Enabled**.

Gen5 Link Degradation

Use this feature to enable PCIe Gen5 link degradation. The options are Disabled and **Enabled**.

Note: The default setting is Enabled when your motherboard supports PCIe Gen5 link. Otherwise, the default setting is Disabled.

Trusted Computing Menu

▶ Trusted Computing

When the TPM 2.0 (either onboard or external) is detected by your system, the following information is displayed.

- TPM 2.0 Device Found
- Firmware Version:
- Vendor:

Note: This submenu is available when the TPM 2.0 (either onboard or external) is detected by the BIOS.

Security Device Support

Select Enabled to enable BIOS support for onboard security devices, which are not displayed in the OS. If this feature is set to Enabled, TCG EFI protocol and INT1A interface will not be available. The options are Disabled and **Enabled**.

When "Security Device Support" is set to Enabled and the TPM 2.0 (either onboard or external) is detected by the BIOS, the following information is displayed.

- Active PCR banks
- Available PCR banks

Note: The following features are available when the TPM 2.0 (either onboard or external) is detected by the BIOS.

ACPI Settings Menu

▶ ACPI Settings

NUMA

Use this feature to enable Non-Uniform Memory Access (NUMA) support to minimize memory access latencies. The options are Disabled and **Enabled**. This feature is CPU-dependent.

Virtual NUMA

Enable this feature to optimize the memory-access performance for VMware virtual machines. The options are **Disabled** and **Enabled**.

Number of Virtual NUMA Nodes (Available when "Virtual NUMA" is set to Enabled)

This feature displays the number of virtual NUMA nodes. A NUMA architecture divides hardware resources (including processors, memory, and I/O buses) into groups, called NUMA nodes. This feature indicates the available number of virtual NUMA nodes that can be assigned to the virtual machine. By default, this setting is automatically adjusted to match the physical NUMA topology.

WHEA Support

Select **Enabled** to support the Windows Hardware Error Architecture (WHEA) platform and provide a common infrastructure for the system to handle hardware errors within the Windows OS environment to reduce system crashes and to enhance system recovery and health monitoring. The options are **Disabled** and **Enabled**.

Super IO Configuration Menu

► Super IO Configuration

The following information is displayed.

- Super IO Chip

Note: This submenu is available when your system supports this feature.

Serial Port 1 Configuration Menu

► Serial Port 1 Configuration

Serial Port 1

Select **Enabled** to enable serial port 1. The options are **Disabled** and **Enabled**.

Device Settings (Available when "Serial Port 1" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 1.

Change Settings (Available when "Serial Port 1" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 1. Select **Auto** for the BIOS to automatically assign the base I/O and IRQ address to serial

port 1. The options are **Auto**, (IO=3F8h; IRQ=4;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Serial Port 2 Configuration Menu

► Serial Port 2 Configuration

Note: It can be "Serial Port 2 Configuration" or "SOL Configuration" based on your system support.

Serial Port 2/SOL ("Serial Port 2" or "SOL" based on your system support)

Select Enabled to enable serial port 2 (or SOL). The options are Disabled and **Enabled**.

Device Settings (Available when "Serial Port 2/SOL" above is set to Enabled)

This feature displays the base I/O port address and the Interrupt Request address of serial port 2 (or SOL).

Change Settings (Available when "Serial Port 2/SOL" above is set to Enabled)

Use this feature to specify the base I/O port address and the Interrupt Request address of serial port 2 (or SOL). Select Auto for the BIOS to automatically assign the base I/O and IRQ address to serial port 2 (or SOL). The options are **Auto**, (IO=2F8h; IRQ=3;), (IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;), (IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;), and (IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;).

Serial Port 2 Attribute (Available for Serial Port 2 only)

Select SOL to use serial port 2 as a Serial Over LAN (SOL) port for console redirection. The options are **SOL** and COM.

Serial Port Console Redirection Menu

► Serial Port Console Redirection

COM1 (Available when your system supports the serial port of COM1)

Console Redirection

Select Enabled to enable COM port 1 for Console Redirection, which allows a client machine to be connected to a host machine at a remote site for networking. The options are **Disabled** and Enabled.

Note: This feature will be set to Enabled if there is no BMC support.

► Console Redirection Settings

Note: This submenu is available when "Console Redirection" for COM1 or SOL/COM2 is set to Enabled.

Terminal Type

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII Character set. Select VT100+ to add color and function key support. Select ANSI to use the Extended ASCII Character Set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, **VT100+**, VT-UTF8, and ANSI.

Bits Per Second

Use this feature to set the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 38400, 57600, and **115200** (bits per second).

Data Bits

Use this feature to set the data transmission size for Console Redirection. The options are 7 and **8** (bits).

Parity

A parity bit can be sent along with regular data bits to detect data transmission errors. Select Even if the parity bit is set to 0, and the number of 1's in data bits is even. Select Odd if the parity bit is set to 0, and the number of 1's in data bits is odd. Select None if you do not want to send a parity bit with your data bits in transmission. Select Mark to add a mark as a parity bit to be sent along with the data bits. Select Space to add a Space as a parity bit to be sent with your data bits. The options are **None**, Even, Odd, Mark, and Space.

Stop Bits

A stop bit indicates the end of a serial data packet. Select 1 (stop bit) for standard serial data communication. Select 2 (stop bits) if slower devices are used. The options are **1** and 2.

Flow Control

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None** and Hardware RTS/CTS.

VT-UTF8 Combo Key Support

Select Enabled to enable VT-UTF8 Combination Key support for ANSI/VT100 terminals. The options are Disabled and **Enabled**.

Recorder Mode

Select Enabled to capture the data displayed on a terminal and send it as text messages to a remote server. The options are **Disabled** and Enabled.

Resolution 100x31

Select Enabled for extended-terminal resolution support. The options are Disabled and **Enabled**.

Putty KeyPad

Use this feature to select function key and keypad settings on Putty, which is a terminal emulator designed for the Windows OS. The options are **VT100**, LINUX, XTERMR6, SCO, ESCN, and VT400.

SOL/COM2

Note: This feature is available when your system supports serial port of SOL and/or COM2. The "SOL/COM2" here indicates a shared serial port, and SOL is used as the default.

Console Redirection

Select Enabled to use the SOL/COM2 port for Console Redirection. The options are Disabled and **Enabled**.

► Console Redirection Settings

Note: This submenu is available when "Console Redirection" for COM1 or SOL/COM2 is set to Enabled.

Terminal Type

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII Character set. Select VT100+ to add color and function key support. Select ANSI to use the Extended ASCII Character Set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, **VT100+**, VT-UTF8, and ANSI.

Bits Per Second

Use this feature to set the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 38400, 57600, and **115200** (bits per second).

Data Bits

Use this feature to set the data transmission size for Console Redirection. The options are 7 and **8** (bits).

Parity

A parity bit can be sent along with regular data bits to detect data transmission errors. Select Even if the parity bit is set to 0 and the number of 1s in data bits is even. Select Odd if the parity bit is set to 0 and the number of 1s in data bits is odd. Select None if you do not want to send a parity bit with your data bits in transmission. Select Mark to add a mark as a parity bit to be sent along with the data bits. Select Space to add a space as a parity bit to be sent with your data bits. The options are **None**, Even, Odd, Mark, and Space.

Stop Bits

A stop bit indicates the end of a serial data packet. Select 1 (stop bit) for standard serial data communication. Select 2 (stop bits) if slower devices are used. The options are **1** and 2.

Flow Control

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None** and Hardware RTS/CTS.

VT-UTF8 Combo Key Support

Select Enabled to enable VT-UTF8 Combination Key support for ANSI/VT100 terminals. The options are Disabled and **Enabled**.

Recorder Mode

Select Enabled to capture the data displayed on a terminal and send it as text messages to a remote server. The options are **Disabled** and Enabled.

Resolution 100x31

Select Enabled for extended-terminal resolution support. The options are Disabled and **Enabled**.

Putty KeyPad

Use this feature to select function key and keypad settings on Putty, which is a terminal emulator designed for the Windows OS. The options are **VT100**, LINUX, XTERMR6, SCO, ESCN, and VT400.

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)

The feature allows you to configure Console Redirection settings to support Out-of-Band Serial Port management.

Console Redirection EMS

Select Enabled to use the SOL port for Console Redirection. The options are **Disabled** and Enabled.

► Console Redirection Settings

Note: This submenu is available when "Console Redirection EMS" is set to Enabled.

Out-of-Band Mgmt Port

The feature selects a serial port in a client server to be used by the Microsoft Windows Emergency Management Services (EMS) to communicate with a remote host server. The options are **COM1** and SOL/COM2. Please note that the option of SOL/COM2 indicates a shared serial port. SOL is available with BMC support.

Terminal Type EMS

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII character set. Select VT100+ to add color and function key support. Select ANSI to use the extended ASCII character set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, VT100+, **VT-UTF8**, and ANSI.

Bits Per Second EMS

This feature sets the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 57600, and **115200** (bits per second).

Flow Control EMS

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options

are **None**, Hardware RTS/CTS, and Software Xon/Xoff.

The following information is displayed.

- **Data Bits EMS**
- **Parity EMS**
- **Stop Bits EMS**

Network Stack Configuration Menu

► Network Stack Configuration

Network Stack

Select Enabled to enable Preboot Execution Environment (PXE) or Unified Extensible Firmware Interface (UEFI) for network stack support. The options are Disabled and **Enabled**.

IPv4 PXE Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv4 PXE boot support. If this feature is disabled, it will not create the IPv4 PXE boot option. The options are Disabled and **Enabled**.

IPv4 HTTP Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv4 HTTP boot support. If this feature is disabled, it will not create the IPv4 HTTP boot option. The options are **Disabled** and Enabled.

IPv6 PXE Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv6 PXE boot support. If this feature is disabled, it will not create the IPv6 PXE boot option. The options are Disabled and **Enabled**.

IPv6 HTTP Support (Available when "Network Stack" is set to Enabled)

Select Enabled to enable IPv6 HTTP boot support. If this feature is disabled, it will not create the IPv6 HTTP boot option. The options are **Disabled** and Enabled.

PXE Boot Wait Time (Available when "Network Stack" is set to Enabled)

Use this feature to set the wait time (in seconds) upon which the system BIOS will wait for you to press the <ESC> key to abort PXE boot instead of proceeding with PXE boot by connecting to a network server immediately. Press the <+> or <-> key on your keyboard to change the value. The default setting is **0**.

Media Detect Count (Available when "Network Stack" is set to Enabled)

Use this feature to set the wait time (in seconds) for the BIOS ROM to detect the presence of a LAN media either via the Internet connection or via a LAN port. Press the <+> or <-> key on your keyboard to change the value. The default setting is **1**.

MAC:(MAC address)-IPv4 Network Configuration Menu

▶ MAC:(MAC address)-IPv4 Network Configuration

Configured

Enable this feature to configure network addresses for DHCP, local IP address, local netmask, local gateway, and local DNS server. The options are **Disabled** and **Enabled**.

Enable DHCP (Available when "Configured" is set to Enabled)

Select **Enabled** to support Dynamic Host Configuration Protocol (DHCP), which allows the BIOS to search for a DHCP server attached to the network and request the next available IP address for this computer. The options are **Disabled** and **Enabled**.

Local IP Address (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to enter an IP address for the local machine.

Local NetMask (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the netmask for the local machine.

Local Gateway (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the gateway address for the local machine.

Local DNS Servers (Available when "Configured" is set to Enabled and "Enable DHCP" is set to Disabled)

Use this feature to set the Domain Name System (DNS) server address for the local machine.

Save Changes and Exit

Press <Enter> to save changes and exit.

MAC:(MAC address)-IPv6 Network Configuration Menu

▶ MAC:(MAC address)-IPv6 Network Configuration

▶ Enter Configuration Menu

The following information is displayed.

- Interface Name
- Interface Type
- MAC address

- Host address
- Route Table
- Gateway addresses
- DNS addresses

Interface ID

Use this feature to change/enter the 64-bit alternative interface ID for the device. The string format is colon separated. The default setting is the MAC address above.

DAD Transmit Count

Use this feature to set the number of consecutive neighbor solicitation messages that have been sent while performing duplicate address detection on a tentative address. The default setting is **1**.

Policy

Use this feature to select how the policy is to be configured. The options are **automatic** and **manual**.

► Advanced Configuration

Note: This submenu is available when "Policy" is set to manual.

New IPv6 address: Use this feature to enter the IPv6 address for the local machine.

New Gateway addresses: Use this feature to set the gateway address for the local machine.

New DNS addresses: Use this feature to set the DNS server address for the local machine.

Commit Changes and Exit: Press <Enter> to save changes and exit.

Discard Changes and Exit: Press <Enter> to discard changes and exit.

Save Changes and Exit

Press <Enter> to save changes and exit.

PCIe/PCI/PnP Configuration Menu

► PCIe/PCI/PnP Configuration

The following information is displayed.

- PCI Bus Driver Version

PCI Devices Common Settings:

Re-Size BAR Support

Use this feature to enable the Resizable BAR support. Resizable BAR is a PCIe interface technology that allows the CPU to access the entire frame buffer. With this technology, your system will be able to handle multiple CPU to GPU transfers simultaneously rather than queuing, which can improve the frame rate performance. The options are **Disabled** and **Enabled**.

SR-IOV Support

Select **Enabled** for Single-Root IO Virtualization support. The options are **Disabled** and **Enabled**.

ARI Support

Select **Enabled** for Alternative Routing-ID Interpretation (ARI) support. The options are **Disabled** and **Enabled**.

MMIO High Base

Use this feature to select the base memory size according to memory-address mapping for the I/O hub. The options are 248T, 120T, 88T, 60T, 30T, 56T, 40T, 32T, 24T, 16T, 4T, 2T, 1T, 512G, 3584T, and **Auto**. The options of 248T, 120T, 88T, 60T, 30T, and 3584T are CPU-dependent.

MMIO High Granularity Size

Use this feature to select the high memory size according to memory-address mapping for the I/O hub. The options are 1G, 4G, 16G, 32G, 64G, 256G, and **1024G**. This feature is motherboard-dependent.

Bus Master Enable

If this feature is set to **Enabled**, the PCI Bus Driver will enable the Bus Master Attribute for DMA transactions. If this feature is set to **Disabled**, the PCI Bus Driver will disable the Bus Master Attribute for Pre-Boot DMA protection. The options are **Disabled** and **Enabled**.

NVMe Firmware Source

Use this feature to select the NVMe firmware to support system boot. The options are Vendor Defined Firmware and **AMI Native Support**. The option of Vendor Defined Firmware is pre-installed on the drive and may resolve errata or enable innovative functions for the drive. The default option, AMI Native Support, is offered by the BIOS with a generic method.

VGA Priority

Use this feature to select the graphics device to be used as the primary video display for system boot. The options are **Onboard** and **Offboard**.

Onboard Video Option ROM

Select EFI to boot the computer using the Extensible Firmware Interface (EFI) device installed on the onboard video port. The options are Disabled and **EFI**.

AOC-ATG-i2S LAN1 OPROM / Onboard SAS Option ROM / Onboard LAN1 Option ROM / Onboard NVMe1 Option ROM – Onboard NVMe24 Option ROM

Select EFI to allow you to boot the computer using the EFI device installed on the PCIe slot specified. The options are Disabled and **EFI**.

Note: The number of slots and slot naming vary based on your motherboard features.

HTTP Boot Configuration Menu

► HTTP Boot Configuration

HTTP Boot Policy

Use this feature to set the HTTP boot policy. The options are Apply to all LANs, **Apply to each LAN**, and Boot Priority #1 instantly.

HTTPS Boot Checks Hostname

Important: Disabling "HTTPS Boot Checks Hostname" is a violation of RFC 6125 and may expose you to Man-in-the-Middle Attacks. Supermicro is not responsible for any and all security risks incurred by you disabling this feature.

Enable this feature for HTTPS boot to check the hostname of the TLS certificates to see if it matches the host name provided by the remote server. The options are **Enabled** and Disabled (WARNING: Security Risk!!).

Priority of HTTP Boot

Instance of Priority 1: (Available when your motherboard supports this feature)

This feature sets the rank target port. The default setting is **1**.

Select IPv4 or IPv6

This feature specifies which connection the target LAN port should boot from. The options are **IPv4** and IPv6.

Boot Description

Use this feature to enter a boot description, which cannot be longer than 75 characters. Please be sure to enter a boot description; otherwise, the boot option for the URI cannot be created.

Boot URI

Enter a Boot Uniform Research Identifier (URI) with 128 characters or shorter. This Boot URI determines how IPv4 Boot Option and IPv6 Boot Option will be created.

Instance of Priority 2: (Available when your motherboard supports this feature)

This feature sets the rank target port. The default setting is **0**.

Select IPv4 or IPv6 (Unavailable when "Instance of Priority 2:" above is set to 0)

This feature specifies which connection the target LAN port should boot from. The options are **IPv4** and IPv6.

Boot Description (Unavailable when "Instance of Priority 2:" above is set to 0)

Use this feature to enter a boot description, which cannot be longer than 75 characters. Please be sure to enter a boot description; otherwise, the boot option for the URI cannot be created.

Boot URI (Unavailable when "Instance of Priority 2:" above is set to 0)

Enter a Boot URI with 128 characters or shorter. This Boot URI determines how IPv4 Boot Option and IPv6 Boot Option will be created.

Supermicro KMS Server Configuration Menu

► Supermicro KMS Server Configuration

Note: Be sure to configure all the features in the submenu of Supermicro KMS Server Configuration and the feature of "KMS Security Policy" in the submenu of Super-Guardians Configuration so that your system can communicate with the KMS server.

Supermicro KMS Server IP address

Use this feature to set the Supermicro Key Management Service (KMS) server IPv4 address in dotted-decimal notation.

Second Supermicro KMS Server IP address

Use this feature to set the second Supermicro KMS server IPv4 address in dotted-decimal notation.

Supermicro KMS TCP Port number

Use this feature to set the TCP port number used in the Supermicro KMS server. The valid range is 100–9999. The default setting is **5696**. Do not change the default setting unless a different TCP port number has been specified and used in the Supermicro KMS server.

KMS Time Out

Use this feature to enter the KMS server connecting time-out (in seconds). The default setting is **5** (seconds).

TimeZone

Use this feature to set the correct time zone. The default setting is **0** (not specified).

Client UserName

Press <Enter> to set the client identity (UserName). The length is 0–63 characters.

Client Password

Press <Enter> to set the client identity (Password). The length is 0–31 characters.

▶ CA Certificate**▶ Client Certificate****▶ Client Private Key**

Use the three features above to enroll factory defaults or load the KMS Transport Layer Security (TLS) certificates, which are generated by the KMS server, from the file stored in the USB flash drive as shown below.



Private Key Password (Available when "Client Private Key" above has been set)

Use this feature to change the private key password.

Super-Guardians Configuration Menu

► Super-Guardians Configuration

Super-Guardians Protection Policy

Use this feature to enable the Super-Guardians Protection Policy. The options are **Storage**, **System**, and **System and Storage**. Set this feature to **Storage** to protect and have secure access to the Trusted Computing Group (TCG) NVMe devices with the Authentication-Key (AK). Set this feature to **System** to protect and have secure access to your system/motherboard with the AK. Set this feature to **System and Storage** to protect and have secure access to your system/motherboard/storage devices with the AK.

KMS Security Policy (Available when "TPM Security Policy" and "USB Security Policy" are set to Disabled)

Set this feature to **Enabled** to enable the KMS Security Policy. When this feature has not previously been set to **Enabled**, the options are **Disabled** and **Enabled**. Changes take effect after you save settings and reboot the system.

When this feature has previously been set to Enabled, the options are **Enabled**, Reset, and Key Rotation. Set this feature to Key Rotation to obtain an existing AK from the KMS server and create a new AK. To disable the KMS Security Policy, set this feature to Reset. When this feature is set to Reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Notes:

- Be sure that the KMS server is ready before configuring this feature.
- Use the professional KMS server solutions (e.g., Thales Server) or the Supermicro PyKMIP Software Package to establish the KMS server.

KMS Server Retry Count (Available when "TPM Security Policy" and "USB Security Policy" are set to Disabled)

Use this feature to specify how many times the system will attempt reconnecting to the KMS server. The valid range is 0–10. Press the <+> or <-> key on your keyboard to change the value. The default setting is 5. If the value is 0, the system will retry infinitely.

TPM Security Policy (Available when "KMS Security Policy" and "USB Security Policy" are set to Disabled)

Set this feature to Enabled to enable the TPM Security Policy. When this feature has not previously been set to Enabled, the options are **Disabled** and Enabled. Changes take effect after you save settings and reboot the system.

When this feature has previously been set to Enabled, the options are **Enabled** and Reset. To disable the TPM Security Policy, set this feature to Reset. When this feature is set to Reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Load Authentication-Key (Available when "KMS Security Policy," "TPM Security Policy," and "USB Security Policy" are set to Disabled)

The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. While booting, the BIOS will automatically load the Authentication-Key (filename: TPMAuth.bin) from the USB flash drive. Afterwards, the default setting will be set to Disabled by the BIOS.

Notes:

- Be sure to connect a USB flash drive with the Authentication-Key (filename: TPMAuth.bin) to your system before the system reboot.
- Be sure to save the Authentication-Key (filename: TPMAuth.bin) to the USB flash drive and keep a backup. Load the Authentication-Key (filename: TPMAuth.bin) after the TPM (either onboard or external) is detected by your system. Otherwise, the TPM function can not work properly.

Save Authentication-Key (Available when "TPM Security Policy" is set to Enabled)

The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. While booting, the BIOS will automatically save the Authentication-Key (filename: TPMAuth.bin) to the USB flash drive. Afterwards, the default setting will be set to Disabled by the BIOS.

Note: Be sure to connect a USB flash drive to your system before the system reboot.

USB Security Policy (Available when "KMS Security Policy" and "TPM Security Policy" are set to Disabled)

Use this feature to enable the USB Security Policy. The options are **Disabled** and Enabled. Set this feature to Enabled. Changes take effect after you save settings and reboot the system. Connect a USB flash drive to your system before the system reboot. While booting, the BIOS will automatically create the USB Authentication-Key (filename: USBAuth.bin) and save it to the USB flash drive.

When this feature has been previously set to Enabled, the options are **Enabled** and Reset. To disable the USB Security Policy, set this feature to Reset. When this feature is set to Reset, the system and TCG NVMe devices chosen in "Super-Guardians Protection Policy" will be in the unprotected mode.

Note: Be sure to connect a USB flash drive to your system before configuring this feature. Save the USB Authentication-Key (filename: USBAuth.bin) to the USB flash drive and keep a backup.

TLS Authenticate Configuration Menu

► TLS Authenticate Configuration

Use this submenu to configure Transport Layer Security (TLS) settings.

▶ Server CA Configuration

Use this feature to configure the client certificate that is to be used by the server.

▶ Enroll Certification

Use this feature to enroll the certificate in the system.

▶ Enroll Certification Using File

Use this feature to enroll the security certificate in the system by using a file.

▶ Commit Changes and Exit

Use this feature to save all changes and exit TLS settings.

▶ Discard Changes and Exit

Use this feature to discard all changes and exit TLS settings.

▶ Delete Certification

Use this feature to delete the certificate if a certificate has been enrolled in the system.

▶ Client Certification Configuration

Driver Health Menu

▶ Driver Health

This feature displays the health information of the drivers installed in your system, including LAN controllers, as detected by the BIOS. Select one and press <Enter> to see the details.

Note: This section is provided for reference only, for the driver health status will differ depending on the drivers installed in your system. It's also based on your system configuration and the environment that your system is operating in.

8.4 Event Logs

Use this menu to configure Event Logs settings.

Note: After making any changes in this section, please be sure to reboot the system for the changes to take effect.



Figure 8-3. Event Logs Screen

▶ Change SMBIOS Event Log Settings

Note: Reboot the system for the changes in this section to take effect.

Enabling/Disabling Options

SMBIOS Event Log

Select Enabled to enable System Management BIOS (SMBIOS) Event Logging during system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase Event Log (Available when "SMBIOS Event Log" is set to Enabled)

Select No to keep the event log without erasing it upon next system bootup. Select (Yes, Next reset) to erase the event log upon next system reboot. The options are **No**, (Yes, Next reset), and (Yes, Every reset).

When Log is Full (Available when "SMBIOS Event Log" is set to Enabled)

Select Erase Immediately to immediately erase all errors in the SMBIOS event log when the event log is full. Select Do Nothing for the system to do nothing when the SMBIOS event log is full. The options are **Do Nothing** and Erase Immediately.

SMBIOS Event Log Standard Settings

Log System Boot Event (Available when "SMBIOS Event Log" is set to Enabled)

Select Enabled to log system boot events. The options are Enabled and **Disabled**.

MECI (Available when "SMBIOS Event Log" is set to Enabled)

Enter the increment value for the multiple event counter. Enter a number between 1 and 255. The default setting is **1**. (MECI is the abbreviation for Multiple Event Count Increment.)

METW (Available when "SMBIOS Event Log" is set to Enabled)

Use this feature to determine how long (in minutes) should the multiple event counter wait before generating a new event log. Enter a number between 0 and 99. The default value is **60**. (METW is the abbreviation for Multiple Event Count Time Window.)

► View SMBIOS Event Log

Use this feature to view the event in the system event log. Select this feature and press <Enter> to view the status of an event in the log. The following information is displayed: DATE / TIME / ERROR CODE / SEVERITY.

8.5 BMC

Use this menu to configure Baseboard Management Console (BMC) settings.

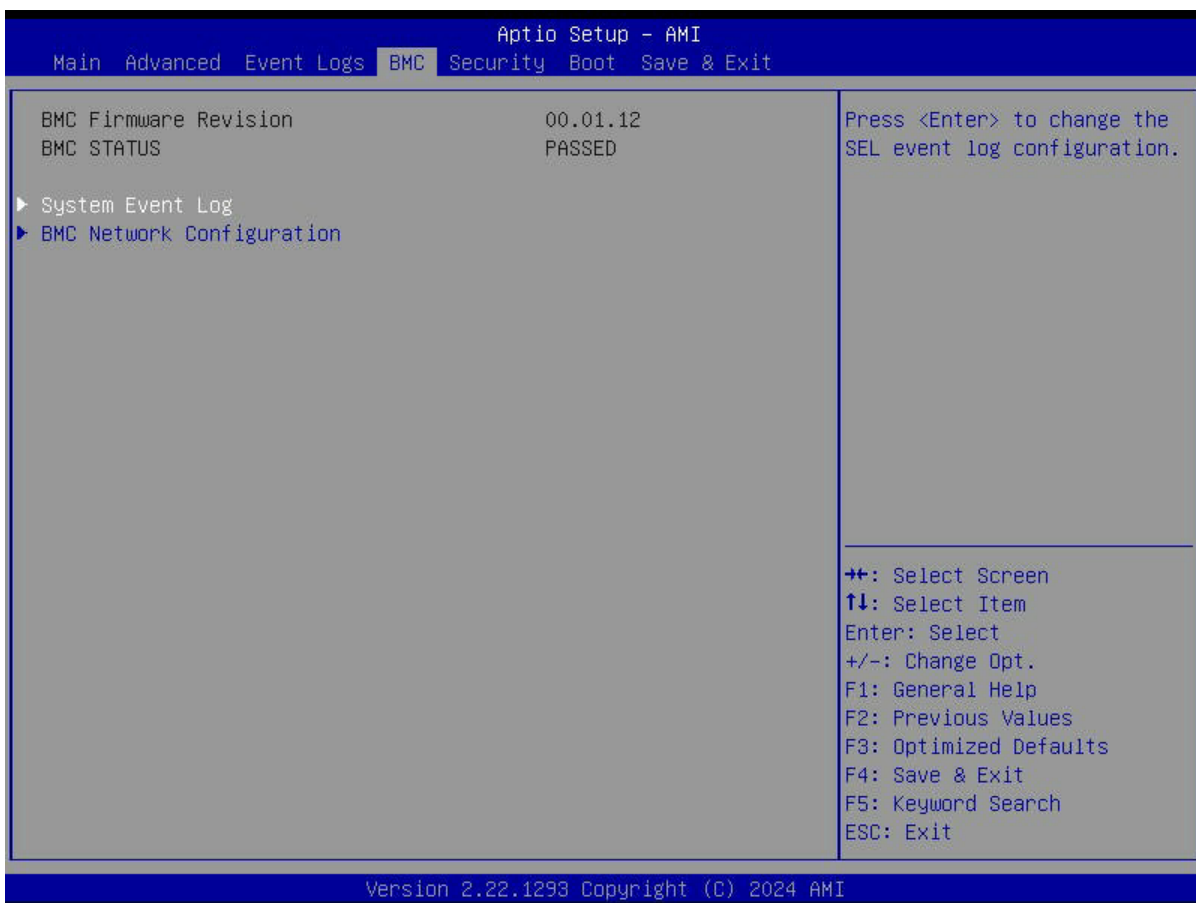


Figure 8-4. BMC Screen

BMC Firmware Revision

This feature indicates the BMC firmware revision used in this system.

BMC STATUS

This feature indicates the status of the BMC firmware installed in this system.

System Event Log Menu

▶ System Event Log

Note: All values changed in this submenu do not take effect until computer is restarted.

Enabling/Disabling Options

SEL Components

Select Enabled to enable all system event logging upon system boot. The options are Disabled and **Enabled**.

Erasing Settings

Erase SEL (Available when "SEL Components" is set to Enabled)

Select (Yes, On next reset) to erase all system event logs upon next system boot. Select (Yes, On every reset) to erase all system event logs upon each system reboot. Select No to keep all system event logs after each system reboot. The options are **No**, (Yes, On next reset), and (Yes, On every reset).

When SEL is Full (Available when "SEL Components" is set to Enabled)

This feature defines what the BIOS should do when the system event log is full. Select Erase Immediately to erase all events in the log when the system event log is full. The options are **Do Nothing** and Erase Immediately.

BMC Network Configuration Menu

► BMC Network Configuration

Update BMC LAN Configuration

Select Yes for the BIOS to implement all IP/MAC address changes upon next system boot. The options are **No** and Yes.

Configure IPv4 Support

BMC LAN Selection

This feature displays the type of the BMC LAN.

BMC Network Link Status:

This feature displays the status of the BMC network link for this system.

Configuration Address Source (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to select the source of the IPv4 connection. If Static is selected, note the IP address of the IPv4 connection and enter it to the system manually in the field. If DHCP is

selected, the BIOS will search for a Dynamic Host Configuration Protocol (DHCP) server in the network that is attached to and request the next available IP address for this computer. The options are Static and **DHCP**.

Station IP Address

This feature displays the Station IP address in decimal and in dotted quad form (i.e., 172.29.176.131). It is available for configuration when "Configuration Address Source" above is set to Static.

Subnet Mask

This feature displays the sub-network that this computer belongs to. It is available for configuration when "Configuration Address Source" above is set to Static.

Station MAC Address

This feature displays the Station MAC address for this computer. MAC addresses are six two-digit hexadecimal numbers.

Gateway IP Address

This feature displays the Gateway IP address for this computer. This should be in decimal and in dotted quad form (i.e., 172.29.0.1). It is available for configuration when "Configuration Address Source" above is set to Static.

Configure IPv6 Support

IPv6 Address Status

This feature displays the status of the IPv6 address.

IPv6 Support (Available when "Update BMC LAN Configuration" is set to Yes)

Use this feature to enable IPv6 support. The options are **Enabled** and Disabled.

Configuration Address Source (Available when "IPv6 Support" is set to Enabled)

Use this feature to select the source of the IPv6 connection. If Static Configuration is selected, note the IP address of IPv6 connection and enter it to the system manually in the field. If the other two options are selected, the BIOS will search for a DHCP server in the network that is attached to and request the next available IP address for this computer. The options are Static Configuration, **DHCPv6 Stateless**, and DHCPv6 Stateful.

IPv6 Address ("Static," "DHCPv6 Stateless," or "DHCPv6 Stateful," depending on the option you selected for "Configuration Address Source" above)

This feature displays the station IPv6 address.

Prefix Length

This feature displays the prefix length. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Gateway IP

This feature displays the IPv6 gateway IP address. It is available for configuration when "Configuration Address Source" above is set to Static Configuration.

Advanced Settings (Available when "Configuration Address Source" is set to DHCPv6 Stateless)

Use this feature to set the DNS server IP. The default setting allows this system to obtain the DNS server IP automatically. The options are **Auto obtain DNS server IP** and Manually obtain DNS server IP.

Preferred DNS server IP (Available when "Advanced Settings" above is set to Manually obtain DNS server IP)

This feature displays the preferred DNS server IP. It can be configured via Redfish.

Alternative DNS server IP (Available when "Advanced Settings" above is set to Manually obtain DNS server IP)

This feature displays the alternative DNS server IP. It can be configured via Redfish.

Configure VLAN Support

Lan channel 1**VLAN Support (Available when "Update BMC LAN Configuration" is set to Yes)**

Use this feature to enable the virtual LAN (VLAN) support. The options are Enabled and Disabled.

VLAN ID (Available when "VLAN Support" is set to Enabled)

Use this feature to create a new VLAN ID. The valid range is 1–4094. The default setting is 1.

8.6 Security

Use this menu to configure the following security settings for the system.

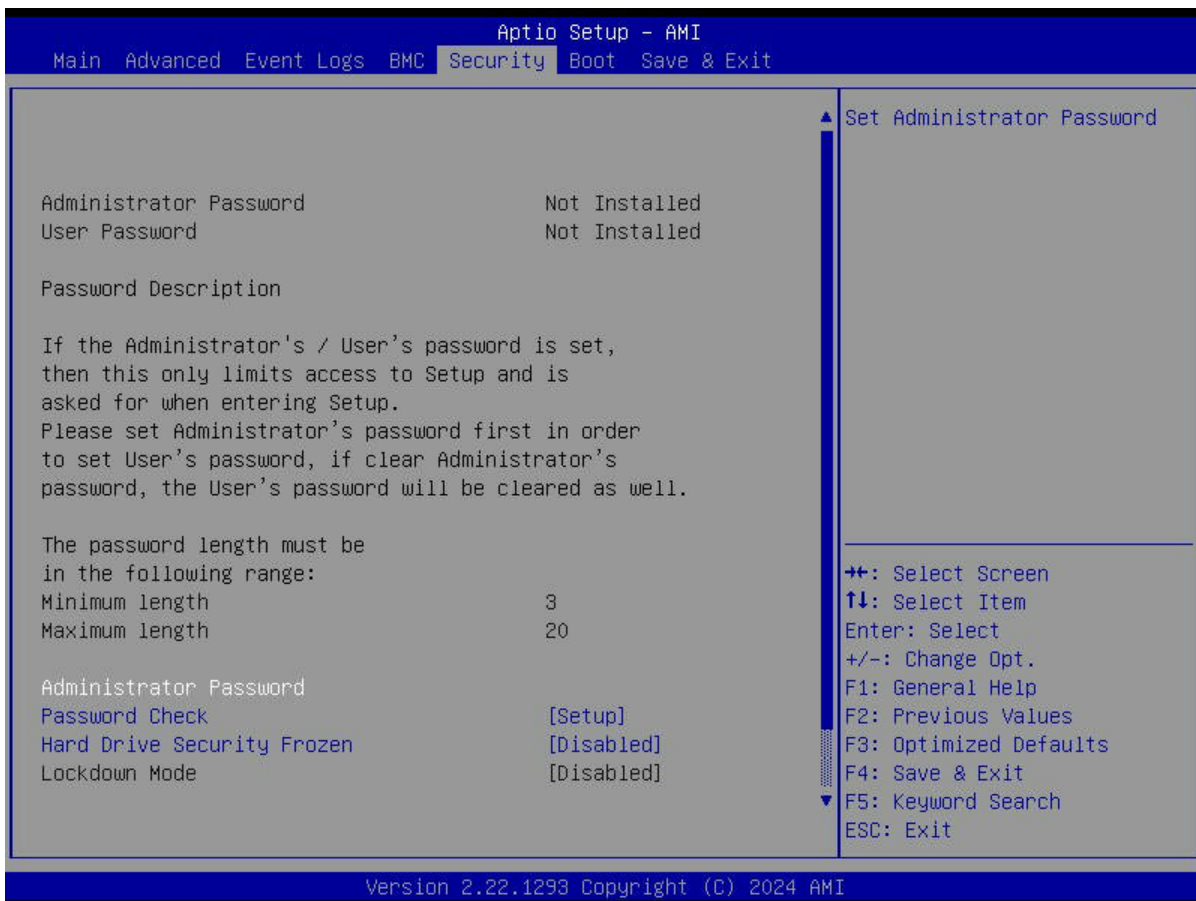


Figure 8-5. Security Screen

Disable Block Sid and Freeze Lock (Available when your storage devices support TCG)

Select Enabled to allow SID authentication to be performed in TCG storage devices. The options are **Disabled** and Enabled.

The following information is displayed:

- Administrator Password
- User Password
- Password Description

Administrator Password

This feature indicates if an administrator password has been installed. Use this feature to set the administrator password, which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

User Password (Available when "Administrator Password" has been set)

This feature indicates if a user password has been installed. Use this feature to set the user password which is required to enter the BIOS Setup utility. The length of the password can be between three and 20 characters long.

Password Check

Select Setup for the system to check for a password upon entering the BIOS Setup utility. Select Always for the system to check for the passwords needed at bootup and upon entering the BIOS Setup utility. The options are **Setup** and Always.

Hard Drive Security Frozen

Select Enabled to freeze the Lock Security feature for HDD to protect key data in hard drives from being altered. The options are **Disabled** and Enabled.

Lockdown Mode (Available when the DCMS key is activated)

Select Enabled to support the Lockdown Mode, which prevents the existing data or keys stored in the system from being altered or changed in an effort to preserve system integrity and security. The options are **Disabled** and Enabled.

Secure Boot Menu

► Secure Boot

The following information is displayed:

- System Mode
- Secure Boot

Note: For detailed instructions on configuring Security Boot settings, refer to the Security Boot Configuration User's Guide at <https://www.supermicro.com/support/manuals>.

Secure Boot

Select Enabled to configure Secure Boot settings. The options are **Disabled** and Enabled.

Secure Boot Mode

Use this feature to select the desired secure boot mode for the system. The options are Standard and **Custom**.

► Enter Audit Mode

Select Ok to enter the Audit Mode workflow. It will result in erasing the Platform Key (PK) variables and resetting the system to the Setup/Audit Mode.

Note: This submenu is available when "Secure Boot Mode" is set to Custom.

▶ Key Management

The following information is displayed:

- Vendor Keys

Note: This submenu is available when "Secure Boot Mode" is set to Custom.

Provision Factory Defaults

Select Enabled to install provision factory default settings after a platform reset while the system is in the Setup Mode. The options are **Disabled** and Enabled.

▶ Restore Factory Keys

Select Yes to restore manufacturer default keys to ensure system security. The options are **Yes** and No. Selecting Yes will reset system to the User Mode.

Note: This submenu is available when any secure keys have been installed.

▶ Reset To Setup Mode

This feature resets the system to the Setup Mode. The options are **Yes** and No.

Note: This submenu is available when any secure keys have been installed.

▶ Enroll Efi Image

This feature allows the Efi image to run in the secure boot mode and enroll the SHA256 Hash certificate of a PE image into the Authorized Signature Database (DB).

▶ Export Secure Boot Variables

This feature exports the NVRAM contents of secure boot variables to a storage device. The options are **Yes** and No.

Note: This submenu is available when any secure keys have been installed.

Secure Boot variable / Size / Keys / Key Source

► Platform Key (PK)

Use this feature to enter and configure a set of values to be used as platform firmware keys for the system. These values also indicate the sizes, key numbers, and the sources of the authorized signatures. Select Update to update the platform key.

► Key Exchange Keys (KEK)

Use this feature to enter and configure a set of values to be used as Key Exchange Keys for the system. These values also indicate the sizes, key numbers, and the sources of the authorized signatures. Select Update to update the Key Exchange Keys. Select Append to append the Key Exchange Keys.

► Authorized Signatures (db)

Use this feature to enter and configure a set of values to be used as Authorized Signatures for the system. These values also indicate the sizes, key numbers, and sources of the authorized signatures. Select Update to update the Authorized Signatures. Select Append to append the new Authorized Signatures.

► Forbidden Signatures (dbx)

Use this feature to enter and configure a set of values to be used as Forbidden Signatures for the system. These values also indicate sizes, key numbers, and key sources of the forbidden signatures. Select Update to update the Forbidden Signatures. Select Append to append the Forbidden Signature.

► Authorized TimeStamps (dbt)

Use this feature to set and save the timestamps for the Authorized Signatures, which will indicate the time when these signatures are entered into the system. These values also indicate sizes, keys, and key sources of the authorized timestamps. Select Update to update the Authorized TimeStamps. Select Append to append the Authorized TimeStamps.

► OsRecovery Signatures (dbr)

Use this feature to set and save the Authorized Signatures used for OS recovery. Select Update to update the OsRecovery Signatures. These values also indicate sizes, keys, and key sources of the OsRecovery Signatures. Select Append to append the OsRecovery Signatures.

8.7 Boot

Use this menu to configure Boot settings.

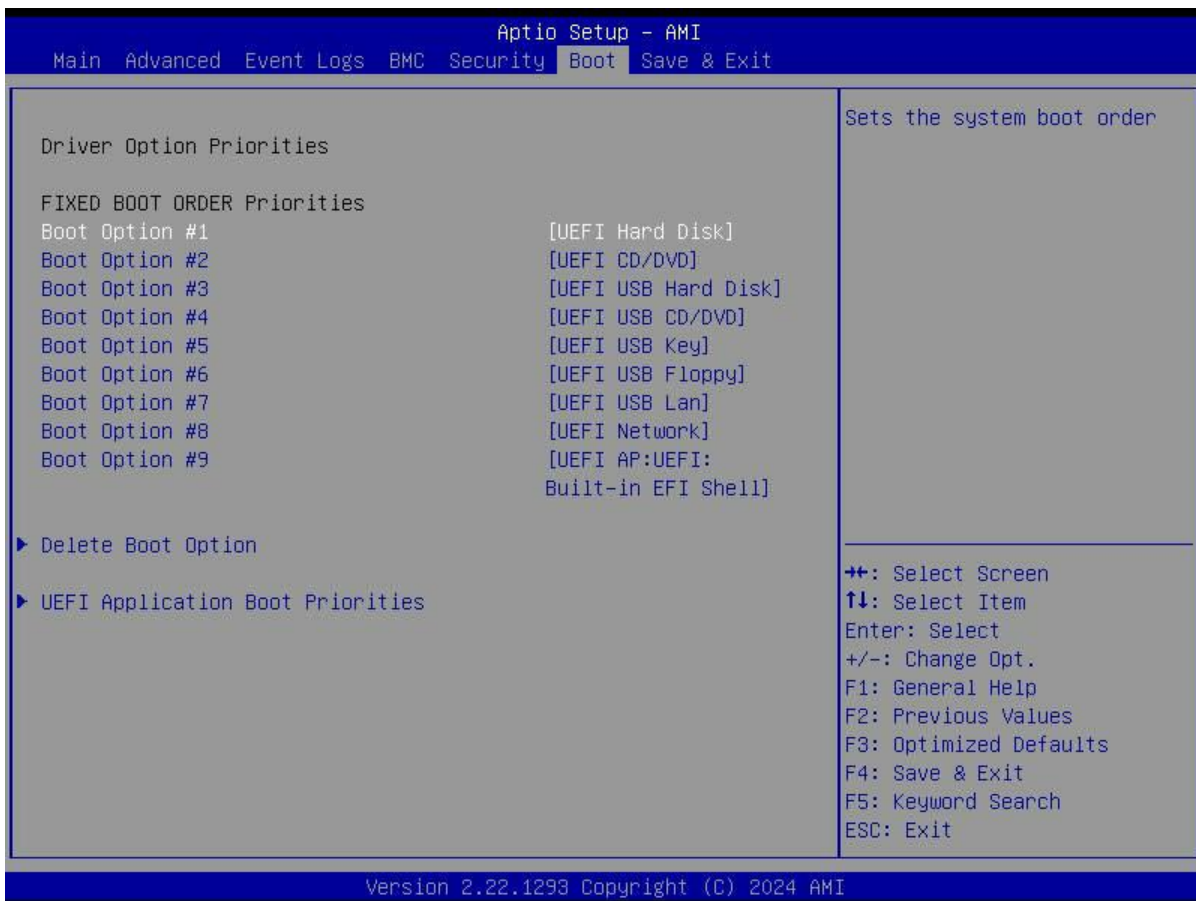


Figure 8-6. Boot Screen

Driver Option Priorities

FIXED BOOT ORDER Priorities

Use this feature to prioritize the order of a bootable device from which the system will boot. Press <Enter> on each item sequentially to select the device.

- Boot Option #1 – Boot Option #9

► Add New Boot Option

Use this feature to add a new boot option to the boot priority features for system boot.

Note: This submenu is available when any storage device is detected by the BIOS.

Add boot option

Use this feature to specify the name for the new boot option.

Path for boot option

Use this feature to enter the path for the new boot option in the format fsx:\path\filename.efi.

Boot option File Path

Use this feature to specify the file path for the new boot option.

Create

After setting the name and the file path for the boot option, press <Enter> to create the new boot option in the boot priority list.

► Delete Boot Option

Use this feature to select a boot device to delete from the boot priority list.

Delete Boot Option

Use this feature to remove an EFI boot option from the boot priority list.

► UEFI Application Boot Priorities

Use this feature to set the system boot order of detected devices.

8.8 Save & Exit

Select Save & Exit from the BIOS Setup screen to configure the settings below.

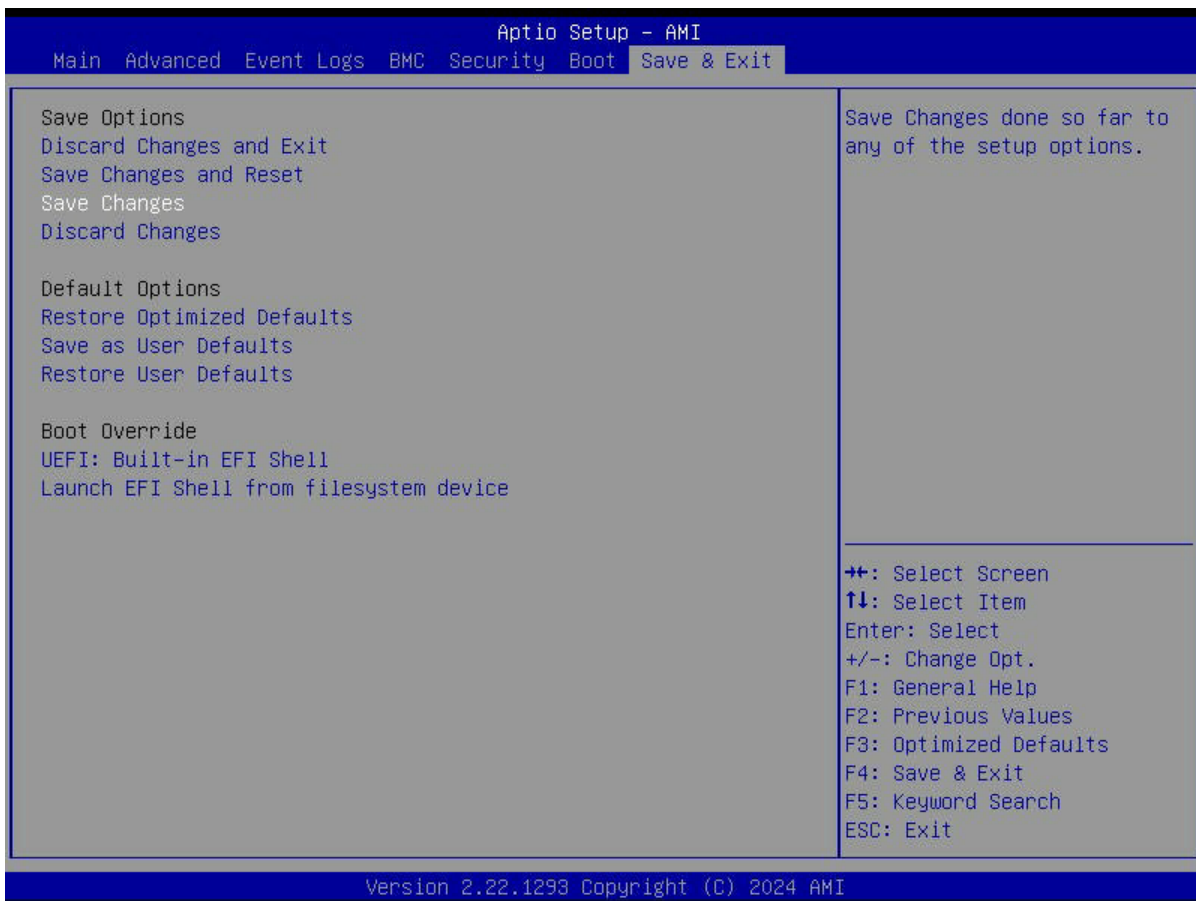


Figure 8-7. Save & Exit Screen

Save Options

Discard Changes and Exit

Use this feature to exit from the BIOS Setup utility without making any permanent changes to the system configuration and reboot the computer.

Save Changes and Reset

On completing the system configuration changes, use this feature to exit the BIOS Setup utility and reboot the computer for the new system configuration parameters to take effect.

Save Changes

On completing the system configuration changes, use this feature to save all changes made. This will not reset (reboot) the system.

Discard Changes

Select this feature and press <Enter> to discard all changes made and return to the BIOS Setup utility.

Default Options**Restore Optimized Defaults**

Select this feature and press <Enter> to load manufacturer optimized default settings, which are intended for maximum system performance but not for maximum stability.

Note: After pressing <Enter>, reboot the system for the changes to take effect, which ensures that this system has the optimized default settings.

Save as User Defaults

Select this feature and press <Enter> to save all changes as the default values specified to the BIOS Setup utility for future use.

Restore User Defaults

Select this feature and press <Enter> to retrieve user-defined default settings that have been saved previously.

Boot Override

Note: Use this section to override the Boot priorities sequence in the Boot menu, and immediately boot the system with a device specified here instead of the one specified in the boot list. This is a one-time boot override.

Launch EFI Shell from filesystem device

Use this feature to launch the EFI shell application (Shell.efi) from one of the available filesystem devices. A filesystem is a virtual, logical, or physical system for organizing, managing, and accessing the files and directories on devices such as SSDs, HDDs, or other storage devices.

Appendix A:

Standardized Warning Statements for AC Systems

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro SYS-222H-TN server.

These warnings may also be found on our website at the following page:

https://www.supermicro.com/about/policies/safety_information.cfm

Warning Definition



Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

この警告サインは危険を意味します。

人身事故につながる可能性がありますので、いずれの機器でも動作させる前に、電気回路に含まれる危険性に注意して、標準的な事故防止策に精通して下さい。

此警告符号代表危险。

您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前、必须充分意识到触电的危险、并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾的声明号码找到此设备的安全性警告说明的翻译文本。

此警告符號代表危險。

您正處於可能身體可能會受損傷的工作環境中。在您使用任何設備之前、請注意觸電的危險、並且要熟悉預防事故發生的標準工作程序。請依照每一注意事項後的號碼找到相關的翻譯說明內容。

WICHTIGE SICHERHEITSHINWEISE

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

BEWAHREN SIE DIESE HINWEISE GUT AUF.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

GUARDE ESTAS INSTRUCCIONES.

IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

CONSERVEZ CES INFORMATIONS.

תקנון הצהרות אזהרה

הצהרות הבאות הן אזהרות על פי תקני התעשייה, על מנת להזהיר את המשתמש מפני חבלה פיזית אפשרית. במידה ויש שאלות או היתקלות בבעיה כלשהי, יש ליצור קשר עם מחלקת תמיכה טכנית של סופרמיקרו. טכנאים מוסמכים בלבד רשאים להתקין או להגדיר את הרכיבים. יש לקרוא את הנספח במלואו לפני התקנת או הגדרת הרכיבים במארזי סופרמיקרו.

الكافة حالة وكي أي تتسبب ف اصابة جسده هذا الزهز ع خطر! تحذرن.

قبل أي تعول على أي هعدات، كي على علن بالوخاطر ال اجوة عي النوانز

الكهربائ ة

وكي على درا ة بالووارسات النقاء ة لو ع وقع أي حداثث

استخدم رقن الب إى الو صنص ف ها ة كل تحذرن للعنثر تزجوتها

안전을 위한 주의사항

이 경고 기호는 위험이 있음을 알려 줍니다. 작업자의 신체에 부상을 야기 할 수 있는 상태에 있게 됩니다. 모든 장비에 대한 작업을 수행하기 전에 전기회로와 관련된 위험요소들을 확인하시고 사전에 사고를 방지할 수 있도록 표준 작업절차를 준수해 주시기 바랍니다.

해당 번역문을 찾기 위해 각 경고의 마지막 부분에 제공된 경고문 번호를 참조하십시오

BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwings symbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij een elektrische installatie betrokken risico's en dient u op de hoogte te zijn van de standaard procedures om ongelukken te voorkomen. Gebruik de nummers aan het eind van elke waarschuwing om deze te herleiden naar de desbetreffende locatie.

BEWAAR DEZE INSTRUCTIES

Installation Instructions



Warning! Read the installation instructions before connecting the system to the power source.

警告!

システムを電源に接続する前に、設置手順書をお読み下さい。

警告!

将此系统连接电源前、请先阅读安装说明。

警告!

將系統與電源連接前、請先閱讀安裝說明。

Warnung!

Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

¡Advertencia!

Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Attention!

Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

אזהרה!

יש לקרוא את הוראות התקנה לפני חיבור המערכת למקור מתח.

تحذير

اقر إرشادات التركيب قبل توصيل النظام إلى مصدر للطاقة

경고!

시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Waarschuwing!

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Circuit Breaker



Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A.

警告!

この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。
保護装置の定格が250 V、20 Aを超えないことを確認下さい。

警告!

此产品的短路(过载电流)保护由建筑物的供电系统提供，确保短路保护设备的额定电流不大于250 V、20 A。

警告!

此產品的短路(過載電流)保護由建築物的供電系統提供，確保短路保護設備的額定電流不大於250 V、20 A。

Warnung!

Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 250 V, 20 A beträgt.

¡Advertencia!

Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 250 V, 20 A.

Attention!

Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifiez que le courant nominal du dispositif de protection n'est pas supérieur à :250 V, 20 A.

אזהרה!

מוצר זה מסתמך על הגנה המותקנת במבנים למניעת קצר חשמלי. יש לוודא כי המכשיר המגן מפני הקצר החשמלי הוא לא יותר מ-20 A, 250 V.

تحذير!

هذا المنتج يعتمد على معدات الحماية من الدوائر القصيرة التي تم تثبيتها في المبنى

تأكد من أن تقييم الجهاز الوقائي ليس أكثر من : 20 A, 250 V

경고!

이 제품은 전원의 단락(과전류)방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호장치의 정격이 반드시 250 V(볼트), 20 A(암페어)를 초과하지 않도록 해야 합니다.

Waarschuwing!

Dit product is afhankelijk van de kortsluitbeveiliging (overspanning) van uw elektrische installatie. Controleer of het beveiligde apparaat niet groter gedimensioneerd is dan 250 V, 20 A.

Power Disconnection Warning



Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swap components).

警告!

システムコンポーネントの取り付けまたは取り外しのために、シャーシ内部にアクセスするには、

システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告!

在你打开机箱并安装或移除内部器件前，必须将系统完全断电，并移除电源线。

警告!

在您打開機殼安裝或移除內部元件前、必須將系統完全斷電、並移除電源線。

Warnung!

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention!

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du chasis pour installer ou enlever des composants de système.

אזהרה!

יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

تحذير!

يجب فصل المنظمو من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد انطاقت قيم

اننصل إلى انمناطق انداخهيت نههيكم ننتبجج أو إزانت مكننات الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 새시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing!

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding(en) van de behuizing te verwijderen

Equipment Installation



Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

警告!

トレーニングを受け認定された人だけがこの装置の設置、交換、またはサービスを許可されています。

警告!

只有经过培训且具有资格的人员才能进行此设备的安装、更换和维修。

警告!

只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Warnung!

Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

¡Advertencia!

Sólo el personal autorizado y el personal de servicio calificado deben poder instalar, reemplazar o dar servicio a este equipo.

Attention!

Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

אזהרה!

יש לאפשר רק צוות מורשה ואנשי שירות מוסמכים להתקין, להחליף או לטפל בצידוד זה.

تحذير!

ينبغي السماح فقط للموظفين المعتمدين وأفراد الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

경고!

승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Waarschuwing!

Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

Restricted Area



Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. (This warning does not apply to workstations).

警告!

このユニットは、アクセス制限区域に設置されることを想定しています。

アクセス制限区域は、特別なツール、鍵と錠前、その他のセキュリティの手段を用いてのみ出入りが可能です。

警告!

此部件应安装在限制进出的场所、限制进出的场所指只能通过使用特殊工具、锁和钥匙或其它安全手段进出的场所。

警告!

此装置僅限安裝於進出管制區域、進出管制區域係指僅能以特殊工具、鎖頭及鑰匙或其他安全方式才能進入的區域。

Warnung!

Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Der Zutritt zu derartigen Bereichen ist nur mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer sonstigen Sicherheitsvorkehrung möglich.

¡Advertencia!

Esta unidad ha sido diseñada para instalación en áreas de acceso restringido. Sólo puede obtenerse acceso a una de estas áreas mediante la utilización de una herramienta especial, cerradura con llave u otro medio de seguridad.

Attention!

Cet appareil doit être installée dans des zones d'accès réservés. L'accès à une zone d'accès réservé n'est possible qu'en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

אזהרה!

יש להתקין את היחידה באזורים שיש בהם הגבלת גישה. הגישה ניתנת בעזרת 'כלי אבטחה בלבד (מפתח, מנעול וכד.).

تحذير!

اتخصيص هذه المنطقة نترك بها ف مناطق محظورة تم .
ممكن ان تصل إن منطقت محظورة فقط من خلال استخدام أداة خاصة،
أو أوس هُت أخري نلأ مما قفم ومفتاح

경고!

이 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 특수도구, 잠금 장치 및 키, 또는 기타 보안 수단을 통해서만 접근 제한 구역에 들어갈 수 있습니다.

Waarschuwing!

Dit apparaat is bedoeld voor installatie in gebieden met een beperkte toegang. Toegang tot dergelijke gebieden kunnen alleen verkregen worden door gebruik te maken van speciaal gereedschap, slot en sleutel of andere veiligheidsmaatregelen.

Battery Handling



CAUTION There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

警告!

バッテリーを間違ったタイプに交換すると爆発の危険があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

警告!

如果更换的电池类型不正确。请只使用同类电池或制造商推荐的功能相当的电池更换原有电池。请按制造商的说明处理废旧电池。

警告!

如果更換的電池類型不正確。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

WARNUNG!

Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

¡ADVERTENCIA!

Existe riesgo de explosión si la batería se reemplaza por un tipo incorrecto. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

ATTENTION!

Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

אזהרה!

קיימת סכנת פיצוץ אם הסוללה תוחלף בסוג שגוי. יש להחליף את הסוללה בסוג התואם מחברת יצרן מומלצת. סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

تحذير!

.هناك خطر الانفجار إذا تم استبدال البطارية بنوع غير صحيح

استبدال البطارية

فقط بنفس النوع أو ما يعادلها مما أوصت به الشركة المصنعة

جخلص من البطاريات المسحومة وفقا لعمليات الشركة الصانعة

경고!

배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

WAARSCHUWING!

Er bestaat explosiegevaar als de batterij wordt vervangen door een verkeerd type. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

Redundant Power Supplies



Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

警告!

このユニットは複数の電源装置が接続されている場合があります。

ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

警告!

此部件连接的电源可能不止一个、必须将所有电源断开才能停止给该部件供电。

警告!

此裝置連接的電源可能不只一個、必須切斷所有電源才能停止對該裝置的供電。

Warnung!

Dieses Gerät kann mehr als eine Stromzufuhr haben. Um sicherzustellen, dass der Einheit kein Strom zugeführt wird, müssen alle Verbindungen entfernt werden.

¡Advertencia!

Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Attention!

Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

אזהרה!

ליחידה יש יותר מחיבור אחד של ספק. יש להסיר את כל החיבורים על מנת לרוקן את היחידה.

تحذير!

قد يكون لهذا الجهاز عدة اتصالات بوحدات امداد الطاقة .
يجب إزالة كافة الاتصالات لعزل الوحدة عن الكهرباء

경고!

이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Waarschuwing!

Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Backplane Voltage



Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

警告!

システムの稼働中は危険な電圧または電力が、バックプレーン上にかかっています。

修理する際にはご注意ください。

警告!

当系统正在进行时、背板上有很危险的电压或能量、进行维修时务必小心。

警告!

當系統正在進行時、背板上有很危險的電壓或能量、進行維修時務必小心。

Warnung!

Wenn das System in Betrieb ist, treten auf der Rückwandplatine gefährliche Spannungen oder Energien auf. Vorsicht bei der Wartung.

¡Advertencia!

Cuando el sistema está en funcionamiento, el voltaje del plano trasero es peligroso. Tenga cuidado cuando lo revise.

Attention!

Lorsque le système est en fonctionnement, des tensions électriques circulent sur le fond de panier. Prendre des précautions lors de la maintenance.

אזהרה!

קיימת סכנת מתח בפנל האחורי בזמן תפעול המערכת. יש להיזהר במהלך העבודה.

تحذير!

هناك خطر من التيار الكهربائي أو الطاقة المخزنة على اللوحة عندما يكن النظام يعمل كه حذرا عند خدمة هذا الجهاز

경고!

시스템이 동작 중일 때 후면판 (Backplane)에는 위험한 전압이나 에너지가 발생 합니다. 서비스 작업 시 주의하십시오.

Waarschuwing!

Een gevaarlijke spanning of energie is aanwezig op de backplane wanneer het systeem in gebruik is. Voorzichtigheid is geboden tijdens het onderhoud.

Comply with Local and National Electrical Codes



Warning! Installation of the equipment must comply with local and national electrical codes.

警告!

機器の取り付けはその地方および国の電気規格に準拠する必要があります。

警告!

设备安装必须符合本地与本国电气法规。

警告!

設備安裝必須符合本地與本國電氣法規。

Warnung!

Die Installation der Geräte muss den Sicherheitsstandards entsprechen.

¡Advertencia!

La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Attention!

L'équipement doit être installé conformément aux normes électriques nationales et locales.

אזהרה!

התקנת הציוד חייבת להיות תואמת לחוקי החשמל המקומיים והארציים.

تحذير!

تركيب المعدات الكهربائية يجب أن يمتثل للقوانين المحلية والنابية المتعلقة

بالكهرباء

경고!

현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Waarschuwing!

Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Product Disposal



Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

警告!

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告!

本产品的废弃处理应根据所有国家的法律和规章进行。

警告!

本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung!

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention!

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

تحذير!

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين واللوائح الوطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Waarschuwing!

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

Fan Warning



Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing



警告!

警告！回轉部品に注意。運転中は回轉部(羽根)に触れないでください。シャーシから冷却ファン装置を取り外した際、ファンがまだ回轉している可能性があります。ファンの開口部に、指、ドライバー、およびその他のものを近づけないで下さい。

警告!

警告！危險的可移動性零件。請務必與轉動的风扇叶片保持距離。当您从机架移除风扇装置·风扇可能仍在轉動。小心不要將手指、螺丝起子和其他物品太靠近风扇

警告!

危險的可移動性零件。請務必與轉動的風扇葉片保持距離。當您從機架移除風扇裝置·風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Warnung!

Gefährlich Bewegende Teile. Von den bewegenden Lüfterblätter fern halten. Die Lüfter drehen sich u. U. noch, wenn die Lüfterbaugruppe aus dem Chassis genommen wird. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses entfernt.

¡Advertencia!

Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite el montaje del ventilador del chasis. Mantenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador.

Attention!

Pieces mobiles dangereuses. Se tenir a l'écart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

אזהרה!

חלקים נעים מסוכנים. התרחק מלהבי המאוורר בפעולהכאשר מסירים את חלקי המאוורר מהמארז, יתכן והמאווררים עדיין עובדים. יש להרחיק למרחק בטוח את האצבעות וכלי עבודה שונים מהפתחים בתוך המאוורר

تحذير!

تحذير! أجزاء متحركة خطيرة. ابتعد عن شفرات المروحة المتحركة. من الممكن أن المراوح لا تزال تدور عند إزالة كتلة المروحة من الهيكل يجب إبقاء الأصابع ومفكات البراغي وغيرها من الأشياء بعيدا عن الفتحات في كتلة المروحة.

경고!

움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 새시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조립품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Waarschuwing!

Gevaarlijk bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

Power Cable and AC Adapter



Warning! When installing the product, use the provided or designated connection cables, power cables and AC adapters. Using any other cables and adapters could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the cord) for any other electrical devices than products designated by Supermicro only.

警告!

製品を設置する場合、提供または指定および購入された接続ケーブル、電源コードとACアダプターを該当する地域の条例や安全基準に適合するコードサイズやプラグと共に使用下さい。他のケーブルやアダプタを使用すると故障や火災の原因になることがあります。電気用品安全法は、ULまたはCSA認定のケーブル(UL/CSAマークがコードに表記)をSupermicroが指定する製品以外に使用することを禁止しています。

警告!

安装此产品时、请使用本身提供的或指定的或采购的连接线、电源线和电源适配器、包含遵照当地法规和安全要求的合规的电源线尺寸和插头。使用其它线材或适配器可能会引起故障或火灾。除了Supermicro所指定的产品、电气用品和材料安全法律规定禁止使用未经UL或CSA认证的线材。(线材上会显示UL/CSA符号)。

警告!

安装此產品時、請使用本身提供的或指定的或採購的連接線、電源線和電源適配器、包含遵照當地法規和安全要求的合規的電源線尺寸和插頭。使用其它線材或適配器可能會引起故障或火災。除了Supermicro所指定的產品、電氣用品和材料安全法律規定禁止使用未經UL或CSA認證的線材。(線材上會顯示UL/CSA符號)。

Warnung!

Nutzen Sie beim Installieren des Produkts ausschließlich die von uns zur Verfügung gestellten Verbindungskabeln, Stromkabeln und/oder Adapter, die Ihre örtlichen Sicherheitsstandards einhalten. Der Gebrauch von anderen Kabeln und Adapter können Fehlfunktionen oder Feuer verursachen. Die Richtlinien untersagen das Nutzen von UL oder CAS zertifizierten Kabeln (mit UL/CSA gekennzeichnet), an Geräten oder Produkten die nicht mit Supermicro gekennzeichnet sind.

¡Advertencia!

Cuando instale el producto, utilice la conexión provista o designada o procure cables, Cables de alimentación y adaptadores de CA que cumplan con los códigos locales y los requisitos de seguridad, incluyendo el tamaño adecuado del cable y el enchufe. El uso de otros cables y adaptadores podría causar un mal funcionamiento o un incendio. La Ley de Seguridad de Aparatos Eléctricos y de Materiales prohíbe El uso de cables certificados por UL o CSA (que tienen el certificado UL / CSA en el código) para cualquier otros dispositivos eléctricos que los productos designados únicamente por Supermicro.

Attention!

Lors de l'installation du produit, utilisez les câbles de connexion fournis ou désigné ou achetez des câbles, câbles de puissance et adaptateurs respectant les normes locales et les conditions de sécurité y compris les tailles de câbles et les prises électriques appropriées. L'utilisation d'autres câbles et adaptateurs peut provoquer un dysfonctionnement ou un incendie. Appareils électroménagers et la Loi sur la Sécurité Matériel interdit l'utilisation de câbles certifiés- UL ou CSA (qui ont UL ou CSA indiqué sur le code) pour tous les autres appareils électriques sauf les produits désignés par Supermicro seulement.

אזהרה!

קרובל ומאתוה וא ושכרנ רשא AC מימאתמו מיקפס, מילבכב שמתשהל שי, רצומה תא מיניקתמ רשאכ לכב שומיש . עקתהו לבכה לש הנוכנ הדימ ללוכ, תוימוקמה תוחיטבה תושירדל ומאתוה רשאו, הנקתהה למשחה ירישכמב שומישה יקוחל אתהב. ילמשח רצק וא הלקתל מורגל לולע, רחא גוסמ אתמ וא לבכ לש דוק מהילע עיפומ רשאכ) -CSA ב וא UL - ב מיכסומה מילבכב שמתשהל רוסיא מייק, תוחיטבה יקוחו דבלב Supermicro י"ע אתוה רשא רצומב קר אלא, רחא ילמשח רצומ לכ רובע (UL/CSA).

!تحذير

تالباكلا ءارشب مق وأ ءدحمللا وأ ءرفوتلا تاليصوتلا مادختساب مق ،جتتملا بيكرت دنع
 كاذ يف امب ءيلحملا ءمالسلا تابلطتمو نيناوقب ماز تلالا عم ددرتملا رايتلا تالوحمو ءيناير هكلا
 فيرح وأ لظع يف ببستي دق برخأ تالوحمو تالباك يا مادختسا .ميلسلا سباقلاو لصوملا مجح.
 CSA وأ UL لبق نم ءدمتعملا تالباكلا مادختسا تادعملو ءيناير هكلا ءز هجالل ءمالسلا نوناق رظحي
 Supermicro لبق نم ءدحمللا ءينعملا تاجتتملا ريغ برخأ تادعم يا عم (UL/CSA) ءمالع لمحت يتلاو.

경고!

제품을 설치할 때 현지 코드 및 적절한 굵기의 코드와 플러그를 포함한 안전 요구 사항을 준수하여 제공되거나 지정된 연결 혹은 구매 케이블, 전원 케이블 및 AC 어댑터를 사용하십시오.

다른 케이블이나 어댑터를 사용하면 오작동이나 화재가 발생할 수 있습니다. 전기 용품 안전법은 UL 또는 CSA 인증 케이블 (코드에 UL / CSA가 표시된 케이블)을 Supermicro 가 지정한 제품 이외의 전기 장치에 사용하는 것을 금지합니다.

Waarschuwing!

Bij het aansluiten van het Product uitsluitend gebruik maken van de geleverde Kabels of een andere geschikte aan te schaffen Aansluitmethode, deze moet altijd voldoen aan de lokale voorschriften en veiligheidsnormen, inclusief de juiste kabeldikte en stekker. Het gebruik van niet geschikte Kabels en/of Adapters kan een storing of brand veroorzaken. Wetgeving voor Elektrische apparatuur en Materiaalveiligheid verbied het gebruik van UL of CSA - gecertificeerde Kabels (met UL/CSA in de code) voor elke andere toepassing dan de door Supermicro hiervoor beoogde Producten.

Appendix B:

System Specifications

Processors

Supports dual Intel® Xeon® 6 processors (in Socket E2 LGA 4710) with four UPIs (24 GT/s max.) and a thermal design power (TDP) up to 330 W.

BIOS

AMI SPI BIOS®

NAND Flash 64/256 Mb support

SPI dual/quad speed control, RTC (Real Time Clock) wakeup, riser card auto detection support, IPMIView, SMCIPMITOOL, IPMI CFG, Redundant power supply unit detection, SPM, SAA-OOB/InBand

Memory

Supports ECC DDR5 memory with speeds up to 6400 MT/s (1DPC) or up to 5200 MT/s (2DPC).

(Memory speed/capacity support depends on the processors used in the system.)

Storage Drives

Eight 2.5" hot-swap front NVMe/SATA/SAS drive bays, optional configurations for 16 or 24 2.5" hot-swap front NVMe/SATA/SAS drive bays

Two M.2 PCIe 5.0 x2 NVMe slots (M-key 2280/22110)

PCI Expansion Slots

Eight PCIe 5.0 x8 or four PCIe 5.0 x16

Input/Output

One AIOM (slim) slot with optional configurations for up to two AIOM (slim) slots for flexible networking (OCP 3.0 compatible)

One RJ45 dedicated BMC LAN port

Two USB 3.0 ports (rear)

One VGA port

Motherboard

X14DBM-SP, 10.75" (L) x 17.0" (W) Proprietary (273.05 mm x 431.80 mm)

Chassis

CSE-HS219-R0000NP, 2U Rackmount: 3.5 x 17.3 x 29.73 in. or 88 x 438.4 x 755.2 mm (H x W x D)

System Cooling

Four 8-cm heavy duty fans with optimal fan speed control

Two air shrouds

Direct to Chip (D2C) Cold Plate (optional)

Security

Trusted Platform Module (TPM) support

Power Supply

Refer to the table at the end of this section for details on this system's power supply options.

Note: For all power supplies, full redundancy is based on configuration and application load.

Operating Environment

Operating Temperature: 10°C ~ 35°C (50°F ~ 95°F)

Non-operating Temperature: -40°C to 70°C (-40°F to 158°F)

Operating Relative Humidity: 8% to 90% (non-condensing)

Non-operating Relative Humidity: 5% to 95% (non-condensing)

Regulatory Compliance

FCC, ICES, CE, VCCI, RCM, UKCA, NRTL, CB

Applied Directives, Standards

EMC/EMI: 2014/30/EU (EMC Directive)

Electromagnetic Compatibility Regulations 2016

FCC Part 15 Subpart B

ICES-003

VCCI-CISPR 32

AS/NZS CISPR 32

BS/EN55032

BS/EN55035

BS/EN 61000-3-2

BS/EN 61000-3-3

BS/EN 61000-4-2

BS/EN 61000-4-3

BS/EN 61000-4-4

BS/EN 61000-4-5

BS/EN 61000-4-6

BS/EN 61000-4-8

BS/EN 61000-4-11

Environment:

Delegated Directive (EU) 2015/863

Directive 2011/65/EU (RoHS)

REACH Regulation EC 1907/2006

WEEE Directive 2012/19/EU

California Proposition 65

Product Safety: 2014/35/EU (LVD Directive)

Electrical Equipment (Safety) Regulations 2016

UL/CSA 62368-1 (USA and Canada)

BS/IEC/EN 62368-1

Perchlorate Warning

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See

<https://www.dtsc.ca.gov/hazardouswaste/perchlorate>"

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI - A

Power Supply Options

Model PWS-1K24A-1R: Two 1200 W redundant modules, 80 Plus Titanium level

AC Input

800 W: 100-127 Vac / 50-60 Hz

1200 W: 200-240 Vac / 50-60 Hz

1200 W: 230-240 Vac / 50-60 Hz (for CCC only)

+12 V

Max 66.7 A / Min 0 A (100-127 Vac)

Max 100 A / Min 0 A (200-240 Vac)

Max 100 A / Min 0 A (230-240 Vdc) (for CCC only)

12 V SB

Max 2.1 A / Min 0 A

Model PWS-1K63A-1R: Two 1600 W redundant modules, 80 Plus Titanium level

AC Input

1000 W: 100-127 Vac / 50-60 Hz

1600 W: 200-240 Vac / 50-60 Hz

1600 W: 200-240 Vdc / 50-60 Hz (for CQC only)

+12 V

Max 83.3 A / Min 0 A (100-127 Vac)

Max 133.3 A / Min 0 A (200-240 Vac)

12 V SB

Max 3.5 A

Model PWS-2K07A-1R: Two 2000 W redundant modules, 80 Plus Titanium level

AC Input

1000 W: 100-120 Vac / 50-60 Hz

1800 W: 200-220 Vac / 50-60 Hz

2000 W: 200-240 Vac / 50-60 Hz (for UL/cUL only)

1980 W: 220-230 Vac / 50-60 Hz

2000 W: 230-240 Vac / 50-60 Hz

+12 V

Max 83.3 A / Min 0 A (100-120 Vac)

Max 150 A / Min 0A (200-220 Vac)

Max 166.7 A / Min 0 A (200-240 Vac) (for UL/cUL only)

Max 165 A / Min 0 A (220-230 Vac)

Max 166.7A / Min 0 A (230-240 Vac)

12 V SB

Max 2.1 A / Min 0 A

Model PWS-2K63A-1R: 2600 W redundant modules, 80 Plus Titanium level

AC Input

2600 W: 200-240 Vac / 50-60 Hz

2600 W: 200-240 Vac / 50-60 Hz (for CQC only)

+12 V

Max 216 A / Min 0 A (200-240 Vac)

12 V SB

Max 3.5 A

BSMI/RoHS

限用物質含有情況標示聲明書

Declaration of the Presence Condition of the Restricted Substances Marking

設備名稱：伺服器/ Server 型號（型式）： HS219-R20X14 Equipment name Type designation (Type)						
(系列型號: HS219-R12X14, HS219-R16X14, HS219-R26X14、SV5-222H-TN)						
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
機殼 (Chassis)	○	○	○	○	○	○
機殼風扇 (Chassis Fan)	—	○	○	○	○	○
線材 (Cable)	○	○	○	○	○	○
主機板 (Motherboard)	—	○	○	○	○	○
電源供應器 (Power Supply)	—	○	○	○	○	○
硬碟 (HDD, SSD)	—	○	○	○	○	○
電源背板 (PDB)	—	○	○	○	○	○
附加卡 (Add on Card)	—	○	○	○	○	○
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.						
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考3. “—”係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.						

警告: 為避免電磁干擾, 本產品不應安裝或使用於住宅環境。

輸入額定:

PWS-1K24A-1R

100-127V ~, 50-60 Hz, 9.8-7.0A (x2)

200-240V ~, 50-60 Hz, 7.5-6.0A (x2)

PWS-1K63A-1R

100-127V ~, 50-60Hz, 12.0-9.0A (x2)

200-240V ~, 50-60 Hz, 9.0-7.5A (x2)

PWS-2K07A-1R

100-127V ~, 50-60Hz, 12.0-9.0A (x2)

200-240V ~, 50-60 Hz, 10.0-9.8A (x2)

PWS-2K63A-1R

200-240V ~, 50-60 Hz, 15-12.5A (x2)

*使用者不能任意拆除或替換內部配備

*報驗義務人之姓名或名稱：美超微電腦股份有限公司

*報驗義務人之地址：新北市中和區建一路 150 號 3 樓

經濟部標準檢驗局

BUREAU OF STANDARDS, METROLOGY AND INSPECTION,
MINISTRY OF ECONOMIC AFFAIRS商品驗證登錄證書
CERTIFICATE OF THE REGISTRATION OF PRODUCT CERTIFICATION

證書號碼： CI363061993565 號 00

Certificate No.

茲據 美超微電腦股份有限公司 申請驗證登錄，經審查結果符合規定，准予登錄並使用商品安全標章及識別號碼： R36199 。其登錄事項如下：
The application made by SUPER MICRO COMPUTER, INC. TAIWAN for Registration of Product

Certification has been reviewed and found to be in compliance with related regulations. Therefore, registration is granted with the Product Safety Mark and the Identification No. R36199 . Details of the registration are follows :

申請人：美超微電腦股份有限公司
Applicant

統一編號：12729477
Uniform No.

地址：新北市中和區建一路150號3樓
Address

生產廠場：詳如附表
Factory

廠址：詳如附表
Factory Address

商品種類名稱：
Type/name of product

商品分類號列：8471.49.00.00.7

C.C.C Code

中文名稱：伺服器

Chinese name

英文名稱：Server

English name

型式：HS219-R20X14

Type

系列型式：HS219-R12X14, HS219-R16X14, HS219-R26X14, SYS-222H-TN(以下空白)

Series of the type

依據標準：CNS15598-1 (109年06月)、符合CNS 15663第5節「含有標示」規定 102年7月、CNS15936 (105年09月)

Standards

標準檢驗局發證(發證地址：100臺北市中正區濟南路1段4號)

This certificate is issued by the BSMI. (No.4, Sec. 1, Jinan Rd., Zhongzheng Dist., Taipei City 100, Taiwan)

本證書以電子文件行之，所載內容若有不符之處，以標準檢驗局系統登錄資料為主，查詢證書資料網址：<https://civil.bsmi.gov.tw>

登錄日期：中華民國	113	年	12	月	04	日
Registration Date	2024	(year)	12	(month)	04	(day)
本證書有效期限至	116	年	12	月	03	日
Expiration Date	2027	(year)	12	(month)	03	(day)
發證日期：中華民國	113	年	12	月	04	日
Date of issue	2024	(year)	12	(month)	04	(day)



註1：持本證書進口驗證登錄商品時，進口人須與本證書名義人相同。

註2：次年度商品驗證登錄年費繳納期限為當年11月30日，逾期未繳納者，經限期繳納屆期未繳納，即依商品檢驗法第42條第7款規定廢止驗證登錄，並自次年度1月1日起生效。

註3：本證書僅代表完成檢驗程序，不作為其他(如產地)證明。

列印序號：1356614999043025106

第1頁，共2頁

經濟部標準檢驗局

BUREAU OF STANDARDS, METROLOGY AND INSPECTION,
MINISTRY OF ECONOMIC AFFAIRS

商品驗證登錄證書

CERTIFICATE OF THE REGISTRATION OF PRODUCT CERTIFICATION

證書號碼： CI363061993565 號 00
Certificate No.

- 生產廠場： 1. SUPER MICRO COMPUTER B. V.
Factory： Het Sterrenbeeld 12-16, 5215 ML 'S-Hertogenbosch, The
Netherlands
2. SUPER MICRO COMPUTER, INC. TAIWAN
No.1899, Xingfeng Road, Da An Vil, Bade District,
Taoyuan City 33463, Taiwan
3. SUPER MICRO COMPUTER, INC.
782 Ridder Park Drive, San Jose, CA95131, USA
4. Compuware Technology Inc.
3F., No. 306, Changan St., Bade District, Taoyuan City
33463, Taiwan
5. SUPER MICRO COMPUTER, INC.
980 Rock Ave, San Jose, CA95131, USA

(以下空白)

