


## ENGLISH

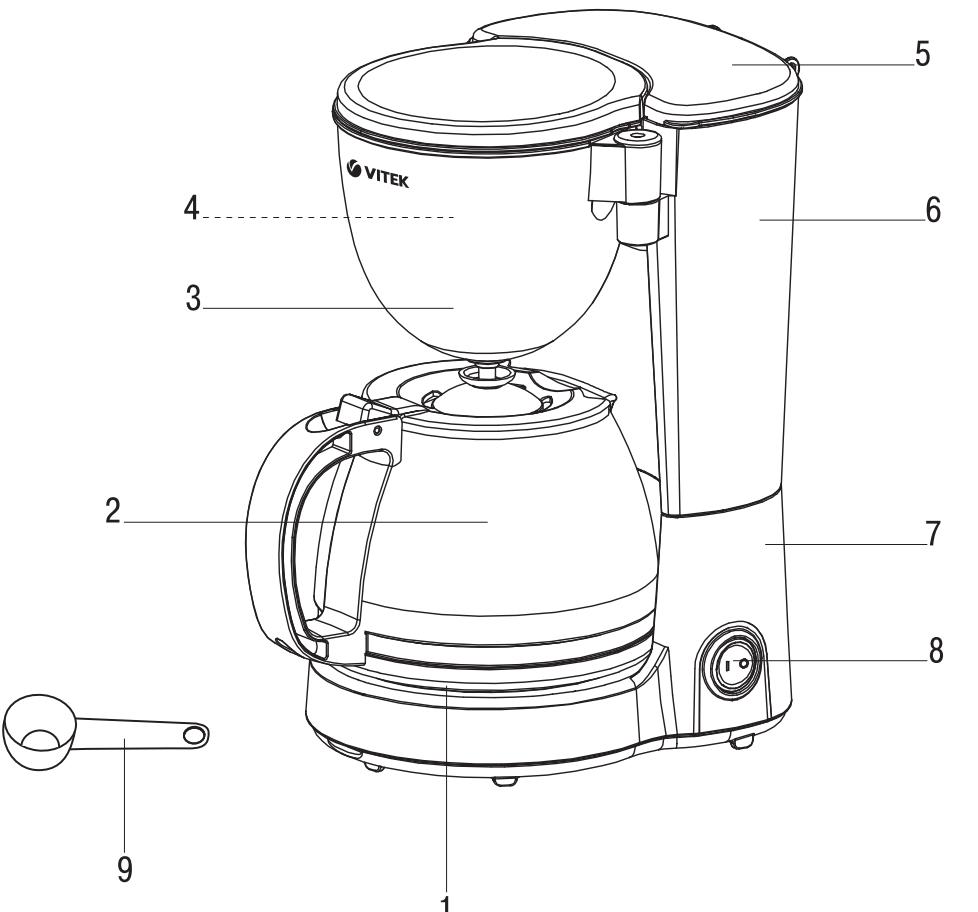

### COFFEE MAKER VT-1500

The coffee maker is intended for making drinks of ground coffee beans.

#### DESCRIPTION

- 1. Flask-installation/flask warming tray
- 2. Ready coffee flask
- 3. Filter holder with anti-drip valve
- 4. Reusable filter
- 5. Water tank lid
- 6. Water level scale
- 7. Coffee maker body
- 8. Power switch  $1/0$  with a light indicator
- 9. Measuring spoon

#### MAKING COFFEE

Ready coffee is made by single passing of hot water through the layer of ground coffee in the filter (4). The taste of the ready drink depends on the quality of raw products, therefore we recommend using well-roasted and fresh-ground coffee beans.

- Turn the filter holder (3) to the right.
- Insert the filter (4) into the holder (3).
- Measure the required amount of ground coffee with the measuring spoon (9) and put it into the filter (4). 6 grams of ground coffee per one coffee cup is required on average; adjust the quantity according to your taste.
- Turn the filter holder (3) to the left until bumping.

Open the lid (5), fill the tank with cold water up to the required level. Determine the water level using the scale (6).

- Close the lid (5).
- Put the flask (2) on the tray (1).
- Insert the power plug into the mains socket. Switch the coffee maker on by setting the power switch (8) to the  $1/0$  position, the light indicator will light up and the coffee maker will start operating.

Before switching the unit on for the first time, make sure that the operating voltage of the coffee maker corresponds to the voltage of your mains.

- The power cord is equipped with a «europlug»; plug it into the socket with a reliable grounding contact.
- To avoid the risk of fire, do not use adapters for connecting the coffee maker to the mains.

• Use the coffee maker according to its intended purpose only.

- Place the coffee maker on a dry flat stable surface; do not place it on the edge of the table.

• Do not use the coffee maker near heat and moisture sources and near open flame.

- Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture.

• To avoid electric shock, do not immerse the coffee maker, power cord or plug into water or other liquids.

• Do not leave the empty coffee flask (2) on the flask warming tray (1), otherwise the glass may crack.

The taste of the ready drink depends on the quality of the raw products, therefore we recommend using fresh-ground coffee made of well-roasted beans.

#### CLEANING AND MAINTENANCE

- Unplug the unit every time before cleaning.

• Let the coffee maker cool down completely and clean the outer surface of the unit body with a soft slightly damp cloth, then wipe dry.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

- Do not leave an empty flask (2) on the support (8), and avoid sudden changes of flask temperature, otherwise the glass could crack.

• Do not place hot glass flask on a cold surface.

- Do not use the coffee maker if the glass flask is damaged.

• Use the flask only for coffee devices.

- Handle gently with a glass flask in order to avoid damage!

• Never leave the operating coffee maker unattended.

- Do not touch the coffee maker body with wet hands.

• To avoid burns, do not touch hot surfaces of the coffee maker during coffee making and right after switching the unit off. Let the coffee maker cool down.

- During the coffee making process, water passes through ground coffee under steam pressure, so do not bend over the coffee maker, do not open the lid, do not remove the filter holder and the removable filter.

• Do not immerse the coffee maker into water or any other liquids.

- Do not switch the coffee maker on if the water tank is empty.

• Use the coffee maker only with the coffee flask installed.

<li

