

ENGLISH

HAIR CLIPPER VT-1355 W

The hair clipper is a part of the hair clipper set and is intended for hair cutting and thinning.

- Description**
- Operating/charging indicator
 - Power adapter
 - Attachment extension control
 - Tapering comb clamp
 - Blade set
 - Support for storing/charging of the trimmer
 - Universal attachment 3-15 mm
 - Universal attachment 18-30 mm
 - Power adapter
 - Brush for cleaning
 - Lubricating oil

SAFETY MEASURES

Carefully read these instructions before using your hair trimmer. Keep this instruction during the whole operation period.

Step 4 – cutting the top of the head

- Using the positions of the attachment (from the 4-th to the 7-th or another, which you need, and continue cutting in the direction of the crown of the head).
- You can cut hair against and along the direction of hair growth, but keep in mind that the hair cut against the growth will be shorter than the hair cut along the growth.
 - Use the attachment positions 1 or 2 for very short cutting.
 - To leave longer hair, take the required position of the attachment.
 - To leave longer hair, take hair locks between your fingers and cut the hair using the trimmer (pic. 5).
 - You may use a comb: lift the hair locks and cut them above the comb (pic. 6).
 - Always start cutting from the back of the head.
 - Comb the hair to reveal uneven locks.

Step 5 – final phase

At the final phase of the haircut, remove the attachment (7, 8) from the trimmer, turn it with the blades towards the hair and carefully trim the hair on the temples and neck. Do not press with force – with open blades contacting the skin, you can wound or cut the skin (pic. 7).

Cone-shaped haircut

Set the attachment to position 6 or another necessary position and start cutting from the back of the head towards the crown. Cut the hair against the direction of the growth, towards the crown, and from the sides (pic. 8). To get a flat crown shape, use a comb: lift the locks and cut them along the comb. Comb the hair to reveal uneven locks.

Tapering function

Tapering is making hair rare. The essence of tapering is in cutting out separate locks at different levels, which allows for creating a smooth transition between locks of different lengths. Tapering is performed at the final phase of the hair cut.

To extend the tapering comb, move the clamp (4) to the left until bumping.

Remove the tapering comb, move the clamp (4) to the right until bumping.

CLEANING AND CARE

The blades should be cleaned each time before and after using the trimmer.

Switch off the unit with the switch (2), while operating from the power adapter (9) unplug the power adapter, remove the cord plug of the power adapter from the jack on the unit.

Apply one or two drops of oil on the blades teeth (5), turn on the unit and make sure that the blades are moving smoothly.

Turn off the trimmer, wipe the excessive oil with a dry cloth.

Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

If the power cord is damaged, it should be replaced by the manufacturer, a maintenance service or a qualified personnel to avoid danger.

Do not attempt to repair it yourself if it was dropped, unplug the unit and apply to any authorized service center from the contact address list given in the warranty certificate and on the website www.vitek.ru.

Keep the unit out of reach of children and disabled persons.

THIS UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

WARNING! Do not use the unit in production areas or workplaces.

Turn over the trimmer and clean the hair surface and the blades set (5) from hair.

Wipe the brush with a soft damp cloth, and then wipe dry.

Do not use abrasive cleaners or solvents.

Apply one or two drops of oil on the blade teeth and the back part of the upper blade.

Set the blades set (5) on the unit, switch on the unit and make sure that the blades are moving smoothly. Turn off the trimmer, wipe the excessive oil with a dry cloth.

Never immerse the unit out of reach of children and disabled persons.

Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

If the power cord is damaged, it should be replaced by the manufacturer, a maintenance service or a qualified personnel to avoid danger.

Do not attempt to repair it yourself if it was dropped, unplug the unit and apply to any authorized service center from the contact address list given in the warranty certificate and on the website www.vitek.ru.

Keep the unit out of reach of children and disabled persons.

CHICKEN THE TRIMMER

Switch off the unit with the switch (2), while operating from the power adapter (9) unplug the power adapter, remove the cord plug of the power adapter from the jack on the unit.

Remove the attachment (7, 8) setting the control (3) to the "1" position and position the attachment (7, 8) upwards.

Clean the blades from the cut hair, using the cleaning brush (10).

Hold the unit with the front part towards you, press with your thumbs each edge of the blade (5) in the direction from yourself and remove the blades set (5).

Wipe the brush (10) to clean the inner surface and the blades set (5) from hair.

Wipe the brush with a soft damp cloth, and then wipe dry.

Do not use abrasive cleaners or solvents.

Apply one or two drops of oil on the blade teeth and the back part of the upper blade.

Set the blades set (5) on the unit, switch on the unit and make sure that the blades are moving smoothly. Turn off the trimmer, wipe the excessive oil with a dry cloth.

Never immerse the unit out of reach of children and disabled persons.

CHICKEN THE TRIMMER

Switch off the unit with the switch (2), while operating from the power adapter (9) unplug the power adapter, remove the cord plug of the power adapter from the jack on the unit.

Remove the attachment (7, 8) setting the control (3) to the "0" position and position the power adapter (9) to the support (6).

Place the unit on the support (6) and plug in the power adapter – the charging indicator (1) will light up red.

Note:

• Do not charge the batteries at temperature below 0°C and above +40°C.

• If you have not used the unit for a month or more, charge it completely before use.

• Time of repeated charging cycles should not exceed 6 hours.

• You can charge the batteries, connecting the plug of the power adapter (9) directly to the jack on the unit, without using the support (6).

Operating the unit with power-line supply

If you want to continue using the unit at partially discharged battery, disconnect the plug of the power adapter (9) from the jack on the support (6) and connect it directly to the jack on the unit, then connect the power adapter (9) into the socket, switch on the unit setting the switch (2) to the "1" position, the red indicator will be lit.

STORAGE

• Clean the unit before taking it away for storage.

• Keep the unit out of reach of children and disabled persons.

DELIVERY SET

• Hair clipper 1 pc.

• Blade block (installed) – 1 pc.

• Base for hair clipper charging/storing – 1 pc.

• Power adapter – 1 pc.

• Comb – 1 pc.

• Cleaning brush – 1 pc.

• Scissors – 1 pc.

• Instruction manual – 1 pc.

• Warranty certificate – 1 pc.

SPECIFICATION

• Built-in rechargeable battery Ni-MH (AA): 2 x 1.2 V 600 mAh

• Power supply: 3 V ■■■ 0.6 A

• Operation time in autonomous mode is 45 min.

• Charging time: 8 hours

• Power adapter: Power supply of the power adapter: 230-240 V ~ 50 Hz

• Output voltage: 3 V ■■■ 0.6 A

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 3-15 mm (7, 8)

• Universal attachment: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

• Weight: 300 g

• Dimensions: 190 x 55 x 25 mm

• Cutting length: 18-30 mm (6)

