

双面印刷，之字形折叠，112*112mm

















安装说明

PEERLESS ASSASSIN 140 DIGITAL 系列




！安装前请先去除铜底保护膜

www.thermalright.com





配件清单

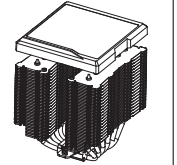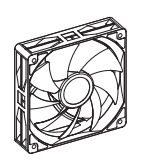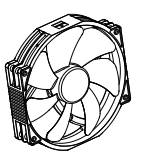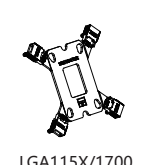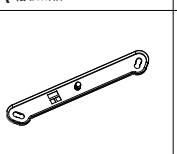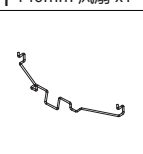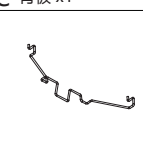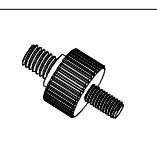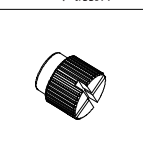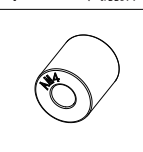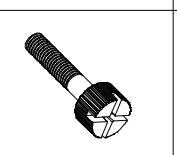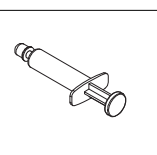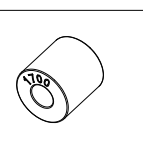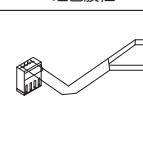 A 散热器 x1	 B 120mm 风扇 x1	 B1 140mm 风扇 x1	 LGA115X/1700 背板 x1
 D INTEL 支架 x2	 E AM4/AM5 支架 x2	 F 120mm 风扇扣 x2	 F1 140mm 风扇扣 x2
 G 1200 黑色胶柱 x4	 H LGA20xx 螺丝 x4	 I 螺帽 x4	 J AM4 红色胶柱 x4
 K AM4/AM5 螺丝 x4	 L 导热膏 x1	 M 1700 蓝色胶柱 x4	 N Y型转接线 x1

AMD AM4/AM5

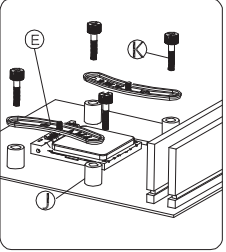
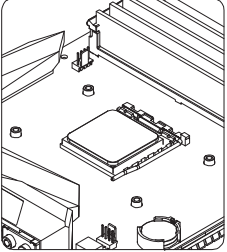
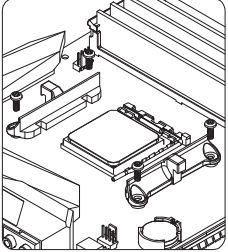


移除AMD原装塑胶支架，保留背板;放置AM4/AM5胶柱，使用AM4/AM5螺丝将支架固定到主板。

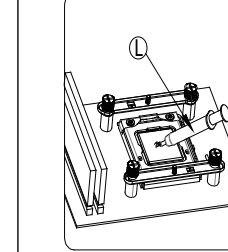
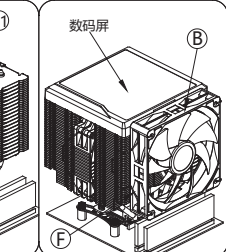
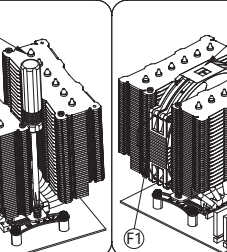
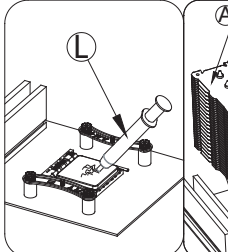


涂好导热膏，拿掉散热器上的数码屏，然后用螺丝刀锁好主体，取风扇(B1)对齐散热器鳍片高度用风扇线扣(F1)固定，将数码屏盖回散热器上，再用风扇扣(F)将风扇(B)对齐数码屏固定。

INTEL LGA115X/1200

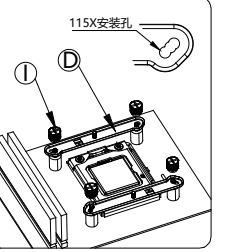
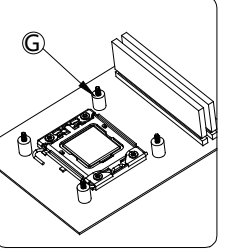
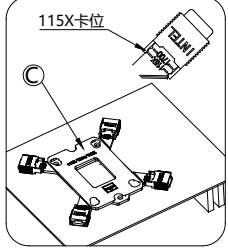


将背板推到LGA115X卡位，对应主板孔位穿过主板，然后从正面套入LGA1200胶柱，放置Intel支架再用螺帽固定住。

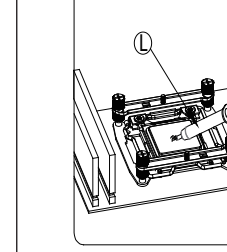
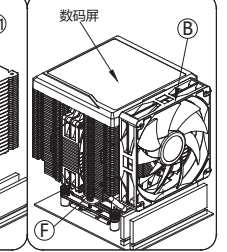
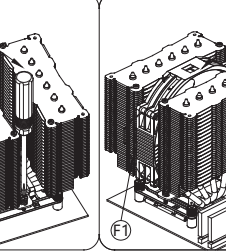
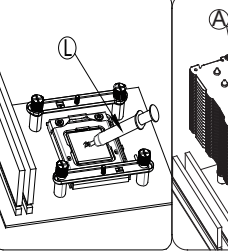


涂好导热膏，拿掉散热器上的数码屏，然后用螺丝刀锁好主体，取风扇(B1)对齐散热器鳍片高度用风扇线扣(F1)固定，将数码屏盖回散热器上，再用风扇扣(F)将风扇(B)对齐数码屏固定。

INTEL LGA2011/2066

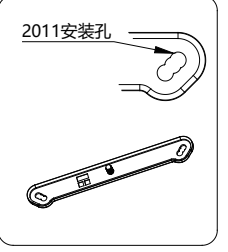
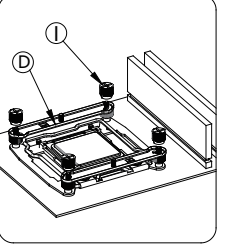
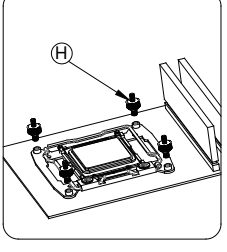


将LGA20XX螺丝拧到主板，然后放置支架，再用螺帽固定住INTEL支架。

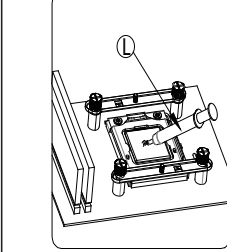
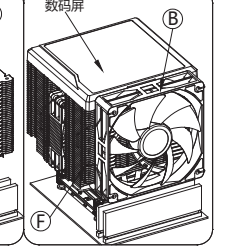
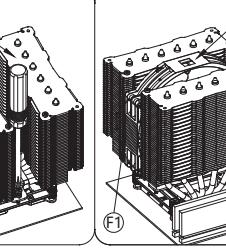
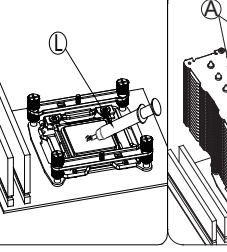


涂好导热膏，拿掉散热器上的数码屏，然后用螺丝刀锁好主体，取风扇(B1)对齐散热器鳍片高度用风扇线扣(F1)固定，将数码屏盖回散热器上，再用风扇扣(F)将风扇(B)对齐数码屏固定。

INTEL LGA1700/1851

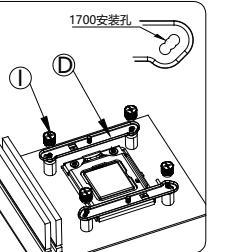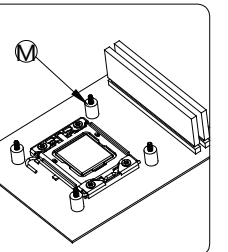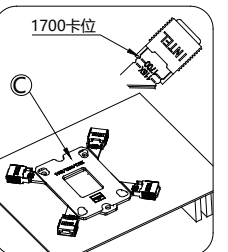


将背板推到LGA1700卡位，对应主板孔位穿过主板，然后从正面套入LGA1700胶柱，放置Intel支架再用螺帽固定住。

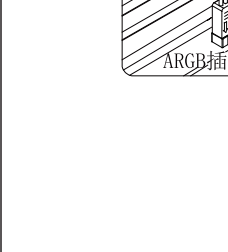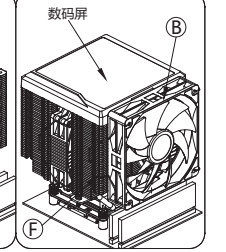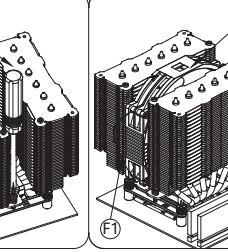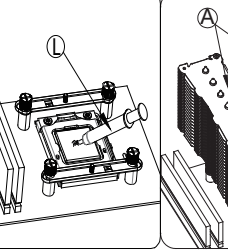


涂好导热膏，拿掉散热器上的数码屏，然后用螺丝刀锁好主体，取风扇(B1)对齐散热器鳍片高度用风扇线扣(F1)固定，将数码屏盖回散热器上，再用风扇扣(F)将风扇(B)对齐数码屏固定。

风扇接线

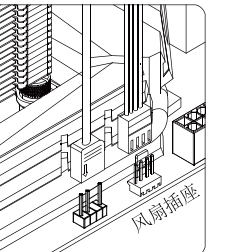


将风扇4针PWM接头插入主板CPU FAN插座
如果使用双风扇,请使用Y型转接线。

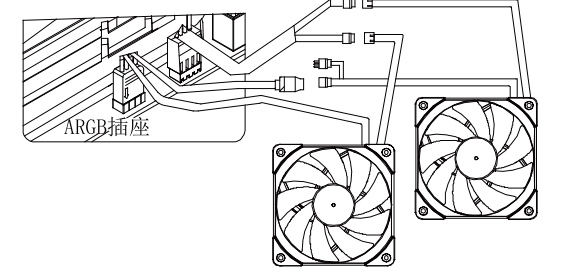

如果风扇有ARGB灯效，请将ARGB 3针（5V）插入主板对应ARGB灯效插座或者控制器，多风扇之间可串联同步。

数码屏接线

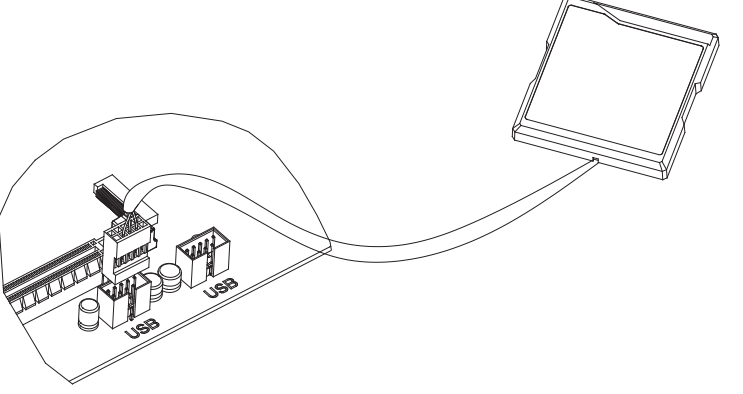

- 数码屏的供电和数据通信传输均由主板 9针USB接口提供。软件安装前请确认接线完整
- 软件可在官网下载：
<https://www.thermalright.com/support/download/>
解压并双击安装程序安装
- 桌面双击软件快捷方式图标运行软件
- 本液晶屏的实时数据监控 /数据传输 /开启关闭等功能均由软件控制。安装完成默认随电脑开机启动，并在任务栏常驻后台，请勿关闭/强制退出。














INSTALLATION GUIDE

PEERLESS ASSASSIN 140 DIGITAL Series




Please remove protective sticker before install

www.thermalright.com





parts list

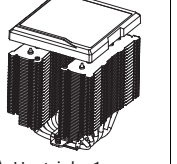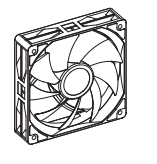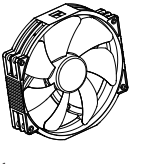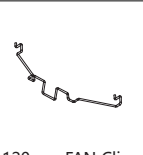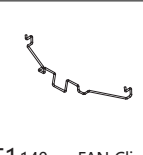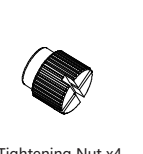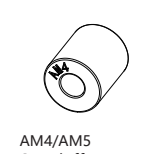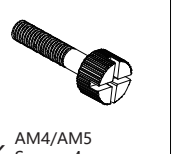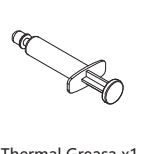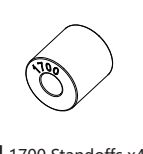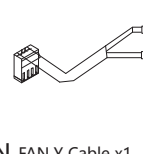 A Heatsink x1	 B 120mm FAN x1	 B1 140mm FAN x1	 LGA115X/1700 Backplate x1
 D INTEL Bracket x2	 E AM4/AM5 Bracket x2	 F 120mm FAN Clip x2	 F1 140mm FAN Clip x2
 G 1200 Standoffs x4	 H LGA20xx Screw x4	 I Tightening Nut x4	 J AM4/AM5 Standoffs x4
 K AM4/AM5 Screw x4	 L Thermal Grease x1	 M 1700 Standoffs x4	 N FAN Y Cable x1

AMD AM4/AM5

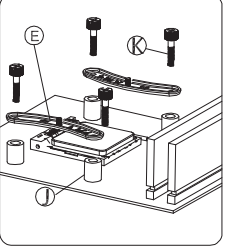
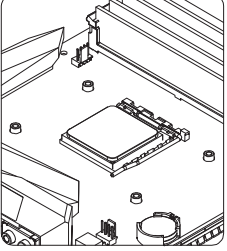
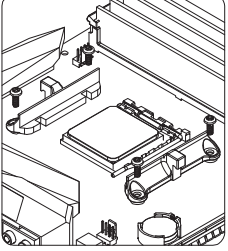


Remove AMD plastic brackets, Keep the back plate, install AM4/AM5 metal brackets with AM4/AM5 screws and AM4/ AM5 plastic standoffs

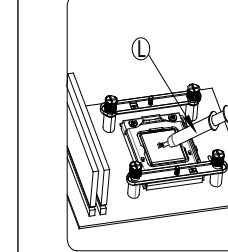
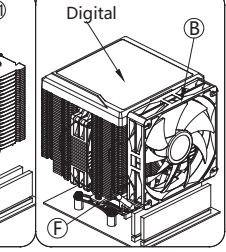
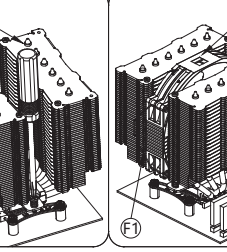
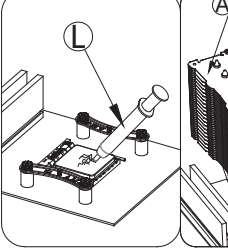


Apply thermal compound on CPU,install the heatsink with a screw driver, and install fans on heatsink with fan clips.Place LCD panel on top of heatsink.

INTEL LGA115X/1200

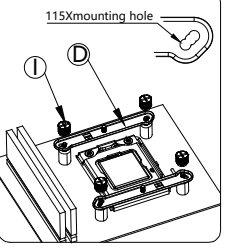
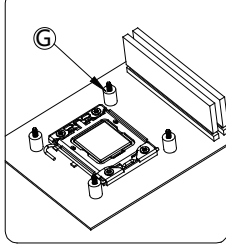
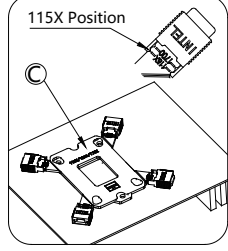


Adjust intel backplate hole position to 115X, then install backplate from backside of motherboard. Install 115X standoffs to backplate screws, then install intel brackets on standoffs with nuts.

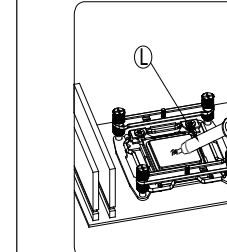
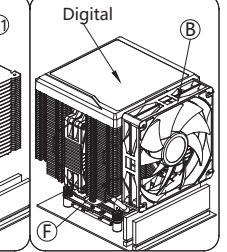
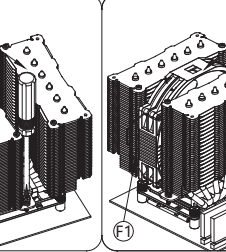
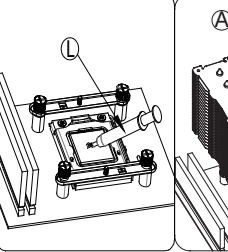


Apply thermal compound on CPU,install the heatsink with a screw driver, and install fans on heatsink with fan clips.Place LCD panel on top of heatsink.

INTEL LGA2011/2066

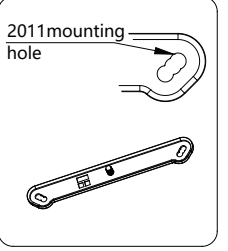
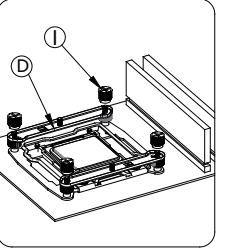
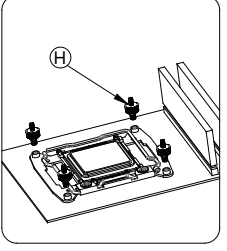


Install four Intel LGA20XX screws on motherboard ILM, Install two Intel brackets on LGA20XX screws, secure them with nuts, LGA20XX mounting hole on Intel brackets.

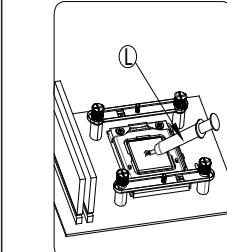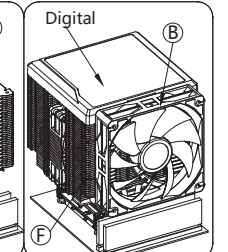
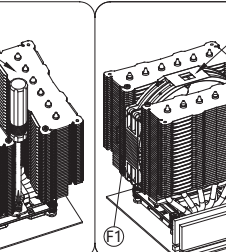
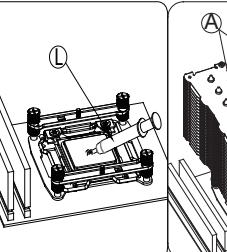


Apply thermal compound on CPU,install the heatsink with a screw driver, and install fans on heatsink with fan clips.Place LCD panel on top of heatsink.

INTEL LGA1700/1851

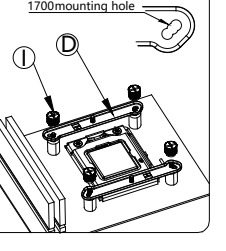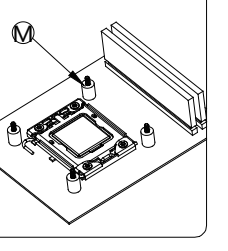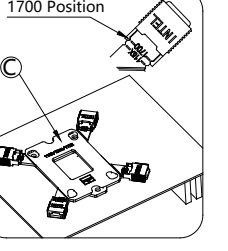


Adjust intel backplate hole position to 1700, then install backplate from backside of motherboard. Install 1700 standoffs to backplate screws, then install intel brackets on standoffs with nuts.

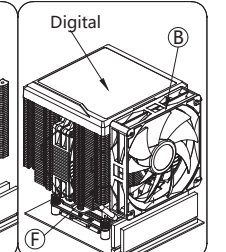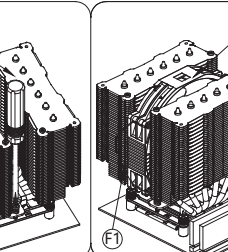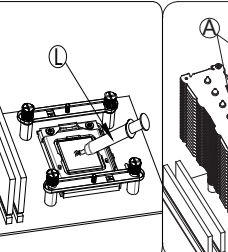


Apply thermal compound on CPU,install the heatsink with a screw driver, and install fans on heatsink with fan clips.Place LCD panel on top of heatsink.

Fan Wiring

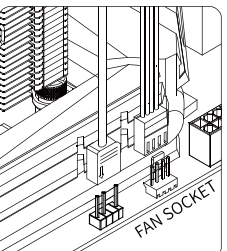


Insert 4-pin PWM fan header in CPU_FAN socket on motherboard, use Y-cablet to sync fan speed for dual fan setup.

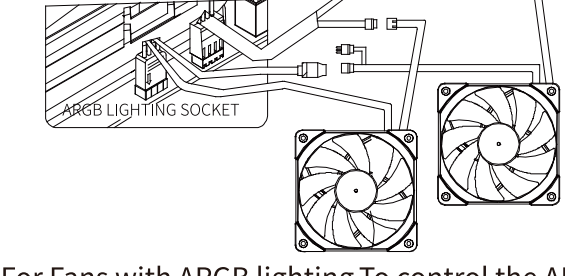

For Fans with ARGB lighting,To control the ARGB lighting , connect ARGB lighting header(3-pin +5V) to motherboard ARGB lighting socket or ARGB lighting controller,lighting effects can be sync by connecting fan lighting headers with each other

Digital display wiring

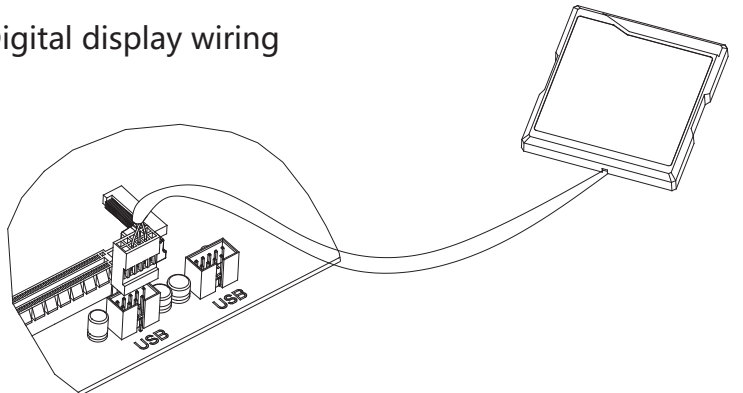

- Check USB cable connection between motherboard 9 pin USB2.0 socket and digital display.
- Download software at:
<https://www.thermalright.com.cn/support/download/>
Unzip setup file and start install by double click setup.
- After install completed, double click shortcut icon on desktop to run software.
- All functions on Digital screen are controlled by software, and software will startup at OS boot. Please do not exit the program.