

Quick Installation Guide of RMS03-26 / RMS03-24 /RMS04-20


Installation Instructions

Samurai Tool-Less Server Slides, 100pound (45kgs) loading




4 STEPS TO THE SUCCESSFUL INSTALLATION!! -

- A. Please go through this guide thoroughly before installation. Please note that the 100lb- grade SB Tool-less is designed and built for 1U and 2U chassis. Not recommended for 3U or above applications.
- B.The SB bracket is for EIA rail with 5/8" pitch and square holes, and can only be mounted behind the rail. You will need to purchase transfer bracket in order tomount SB bracket on the rail with round holes. The standard retail packaging shall include one piece of left hand, one piece of right hand 4 pieces of H-370 screws for ear plate fastening and 2 pieces of H-207 screws for chassis fastening.

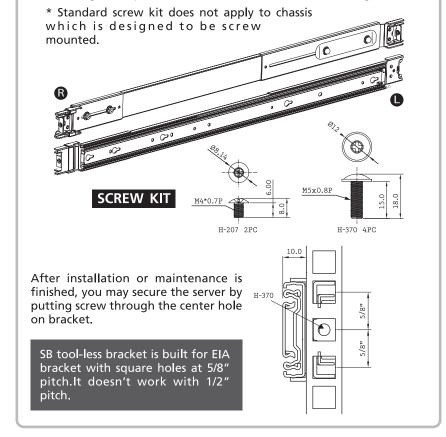

Step 1 > Remove the chassis (inner) member

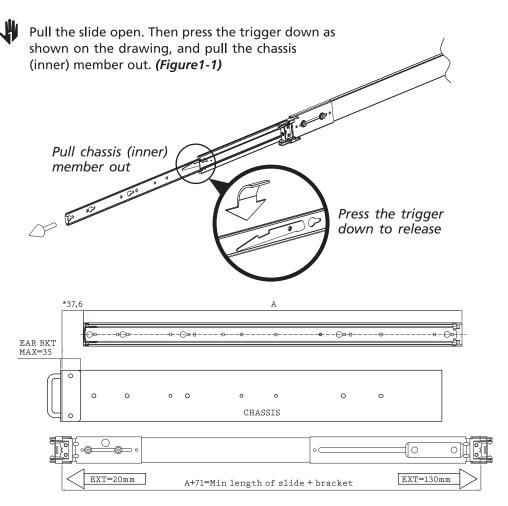

^{**}Extendable front bracket only apply to some Tool-less model

Step $\mathbf{2}$ > Mount the chassis (inner) member to the chassis




Align the spring clip on chassis (inner) member of the pre-formed bayonets on both sides of the chassis. Push back the inner member to allow the rail slide to be fixed to the rackmount chassis. Moreover, please make sure the spring clip installation has been completed on the rackmount chassis when finishing this step.

*Bayonet on chassis shall be pre-formed as per the recommended dimension and location.

* If there is concern for rackmount security, we have provided screws to allow further reinforcement of the fixed rackmount chassis.


*If you need to remove the inner member from the rackmount chassis, please pull up spring clip first and then push forward to allow the spring clip to separate from the inner member. If you had already installed the screw in your rackmount chassis, please remove the screws first.

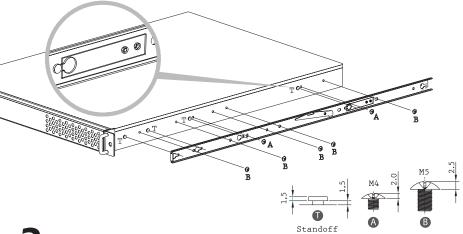


Step 3 > Attach the cabinet (outer) member to the rail



Insert the stag into the upper and lower square holes on EIA rail from the back of rail.

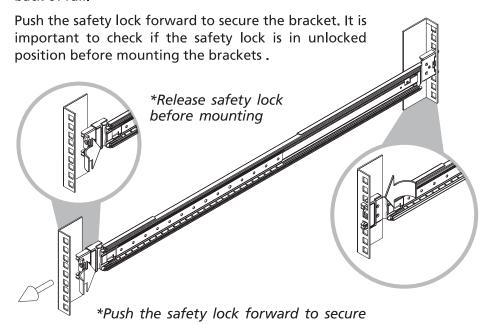

Uninstall the bracket

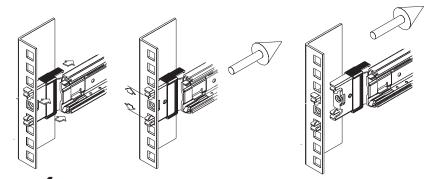


Step 4 > Mount the chassis into the cabinet



Insert the chassis (inner) member into the cabinet member as shown on the drawing. It is important to check if the ball retainer is in fully open position before install the chassis.

It might cause catastrophic damage to the chassis if ball retainer is not in fully open position while mounting the chassis. While you are pushing chassis back to the cabinet, you need to release the slide from locking position by pressing the trigger down.

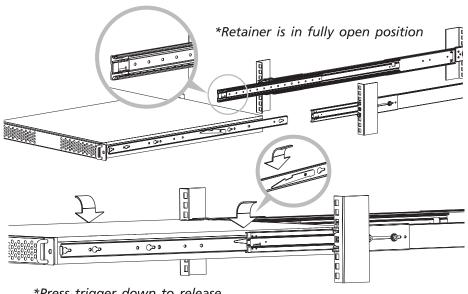

*Press trigger down to release the slides from locking