


ELPMB27

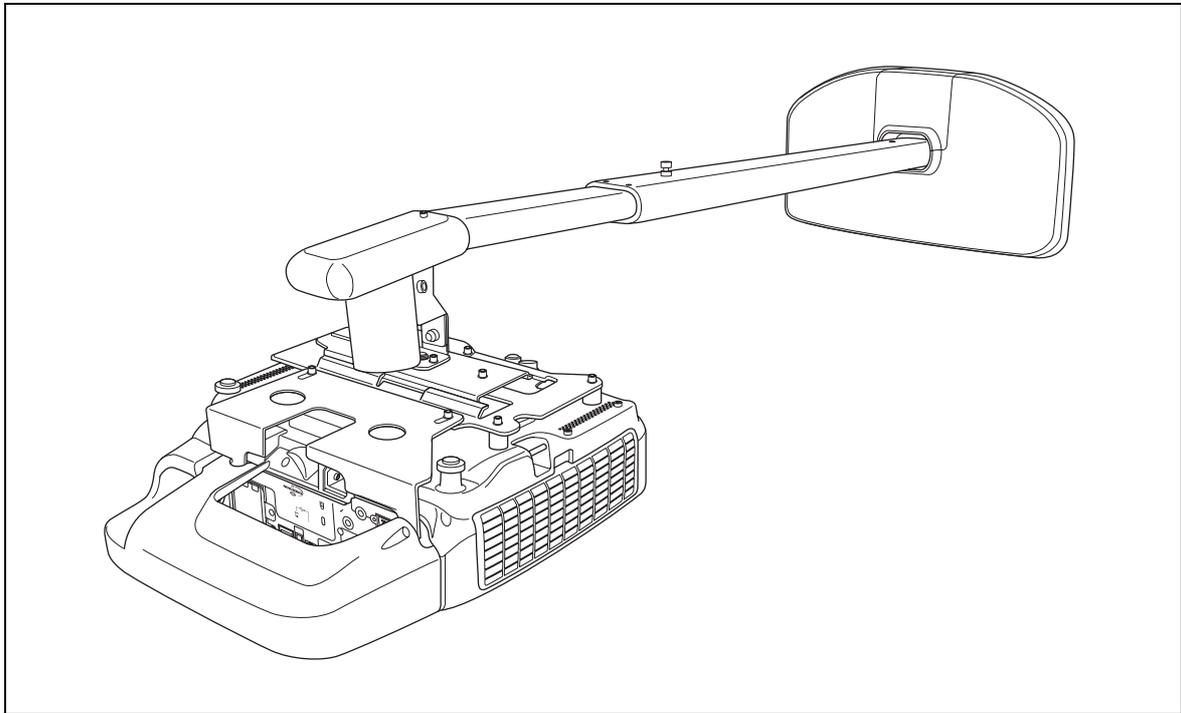

Short Throw Projector Wall Mount Installation Manual

xxx(FR)

xxx(DE)

xxx(IT)

xxx(ES)

xxx(PT)

xxx(ZHS)



Safety Instructions

Before using the wall mount, make sure you read all of the safety instructions below and then save this manual for later reference. Incomplete or incorrect installation could cause damage to the product or result in personal injury or property damage.

For additional information, see the *User's Guide* and *Safety Instructions* included with your projector.

Explanation of Symbols

The warning symbols shown below are used throughout this installation manual to prevent the possibility of personal injury or property damage. Make sure you understand these warnings when reading this installation manual.

 Warning	Warnings indicate information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.
 Caution	Cautions indicate information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

	Symbol indicating an action that must not be done
	Symbol indicating an action that should be done

Safety Precautions for Installation

 Warning	
The wall mount weighs approximately 10 kg (22 lbs.). To prevent injury, handle the mount carefully.	
This product is meant for mounting the projector and optional accessories only. Do not attach anything heavier than the projector and optional accessories to the product. Doing so could cause the product to fall and cause personal injury or property damage.	
Installation of the product on the wall should be performed by at least two qualified technicians using only approved mounting equipment. Incomplete or incorrect installation could cause the product to fall and cause personal injury or property damage. For additional help, contact the customer support office listed in the projector's <i>User's Guide</i>.	
Make sure you follow the instructions in this guide to install the wall mount. Otherwise, the wall mount may fall and result in personal injury or property damage.	
Turn off the projector when installing the mount to avoid fire or electric shock.	
Handle the power cord carefully to avoid fire or electric shock. Observe the following precautions when handling: <ul style="list-style-type: none"> • Do not handle the cord with wet hands. • Do not use a cord that is damaged or modified. • Do not pull the cord with too much force when routing it through the arm unit. 	
When installing the product, do not hold on to the cable cover to position the mount. Doing so could cause the cable cover to detach, resulting in personal injury or property damage.	
When you mount the projector on the wall with the wall mount, the wall requires enough strength to hold the projector, optional accessories, and the wall mount. This wall mount should be installed on a concrete wall. Confirm the weight of the projector, optional accessories, and the wall mount before installation, and maintain the strength of the wall. If the wall is not strong enough, reinforce the wall before installation.	
Do not install the product in a location where it might be exposed to vibration or shock, which could cause damage to the product or mounting surface. It could also cause the product to fall, resulting in personal injury or property damage.	

Warning

<p>In order to resist vibration and support the weight of the projector and optional accessories, use M8 nuts and bolts and tighten all screws firmly after installation.</p> <p>Otherwise, the projector or wall mount may fall and cause personal injury or property damage. Epson accepts no responsibility for any damage or injury caused by lack of wall strength or inadequate installation.</p>	
<p>If you need to loosen any screws while installing, be careful not to drop the projector or the mount.</p> <p>If the projector or the mount falls, it could cause personal injury or property damage.</p>	
<p>Do not use the mount when damaged and confirm on a regular basis that there are no damaged parts.</p>	
<p>Never modify the mount.</p>	
<p>Do not hang on the mount or hang a heavy object on it.</p> <p>If the mount or the projector falls, it could cause personal injury or property damage.</p>	
<p>Stop using the mount and contact Epson Customer Service if any of the following occur:</p> <ul style="list-style-type: none"> • The mount is dropped or damaged during installation. • The arm unit detaches from the wall or falls. 	
<p>If you apply adhesives to prevent the screws from loosening, or if you use lubricants or oils on the wall mount, the housing may crack and cause the projector to fall, resulting in personal injury or property damage.</p>	
<p>Tighten all screws firmly after adjustment.</p> <p>Otherwise, the projector or wall mount may fall and cause personal injury or property damage.</p>	
<p>Never loosen the bolts and nuts after installation. Confirm on a regular basis that the screws have not become loose. If you find any loose screws, tighten them firmly.</p> <p>Otherwise, the projector or wall mount may fall and cause personal injury or property damage.</p>	

Caution

<p>Install the product in a location free from humidity and dust to prevent the projector's lens and optical components from becoming dirty.</p>	
<p>Do not install the product in a location where the operating temperature of the projector might be exceeded.</p> <p>Otherwise, damage may result.</p>	
<p>Do not install the product in a location where there is excessive humidity or dust, near cooking or heating appliances, or in a location exposed to smoke or steam.</p> <p>Fire or electric shock may result.</p>	
<p>Do not use excessive force when adjusting the product.</p> <p>Using too much force could result in personal injury or property damage.</p>	


Before Use

This product is used for mounting the following short throw projectors to a wall: EB-435W/EB-430/EB-425W/EB-420/PowerLite 435W/PowerLite 430/PowerLite 425W/PowerLite 420.


Choosing a Location

- Determine where you will install the wall mount and prepare the location in advance. Also, make sure there is a gap of 410 to 660 mm (16 to 26 inches) from the top of the image projected onto the white board to the ceiling. See "Screen Size and Projection Distance" on page 7 for more details.
- Do not install the product in a location where it might be exposed to vibration or shock, which could cause damage to the projector or mounting surface. It could also cause the product to fall, resulting in serious injury or death.
- Install the product in a location away from direct sunlight and other electric devices such as fluorescent lights or air conditioning. Direct sunlight and some kinds of fluorescent lights could interfere with the remote control of the projector.
- Epson recommends that the length of the connection cord be less than 20 meters (65.61 ft.) in order to reduce external noise.


Package Contents

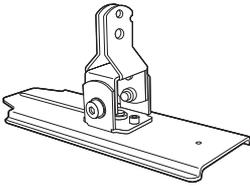


Adjustment unit

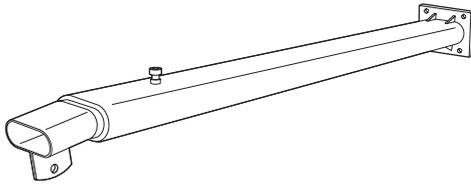


Arm unit

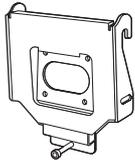


Arm plate




Attachment plate

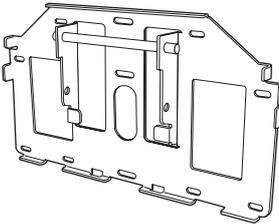

Wall plate

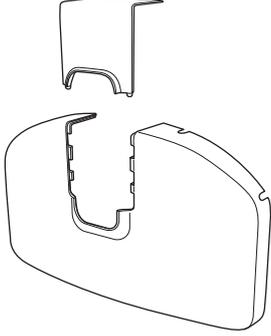


Wall plate cover

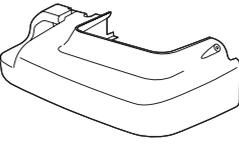


Cable cover



Arm cover



Interface cover bracket

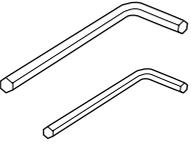

Hexagonal wrenches (M4 and M8)



M4 x 12 mm hexagon socket head cap bolts with washers (x3)



M4 x 12 mm hexagon socket head cap bolts without washers (x6)




M4 x 12 mm hexagon socket head cap bolts with washers/spring washers (x5)



M8 x 12 mm hexagon socket head cap bolts without washers (x4)



M8 x 15 mm hexagon socket head cap bolts without washers (x3)

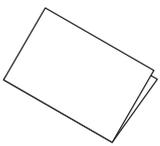

Installation Manual (this guide)






Document CD-ROM

- Use only the supplied bolts to install the wall mount. Do not substitute these bolts with any other types.
- You need to use commercially available M8 x 50 mm anchors (at least 3) to attach the wall plate to the wall.
- Gather the tools and parts you need before you begin installation.

Specifications

Weight	Approx. 10 kg (22 lbs.)
Maximum load capacity	5.5 kg (12.13 lbs.)
Arm length	1510 mm (15.45 inches) (from wall plate attachment point to arm cover point)
Vertical slide adjustment range	0 to 134 mm (0 to 5.27 inches) (arm length minimum) 0 to 230 mm (0 to 9.05 inches) (arm length maximum)
Vertical tilt adjustment range	0 to - 9.5°
Horizontal rotation adjustment range	0 to ± 5°
Horizontal roll adjustment range	0 to ± 5°
Horizontal slide adjustment range	0 to ± 45 mm (0 to ± 1.77 inches)

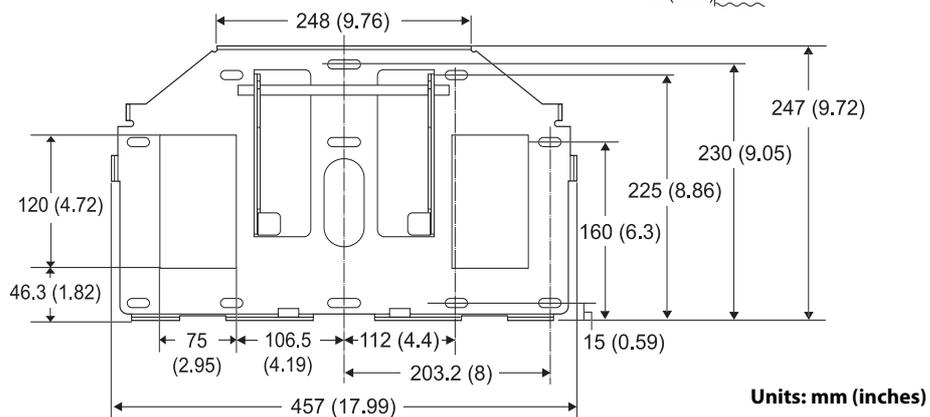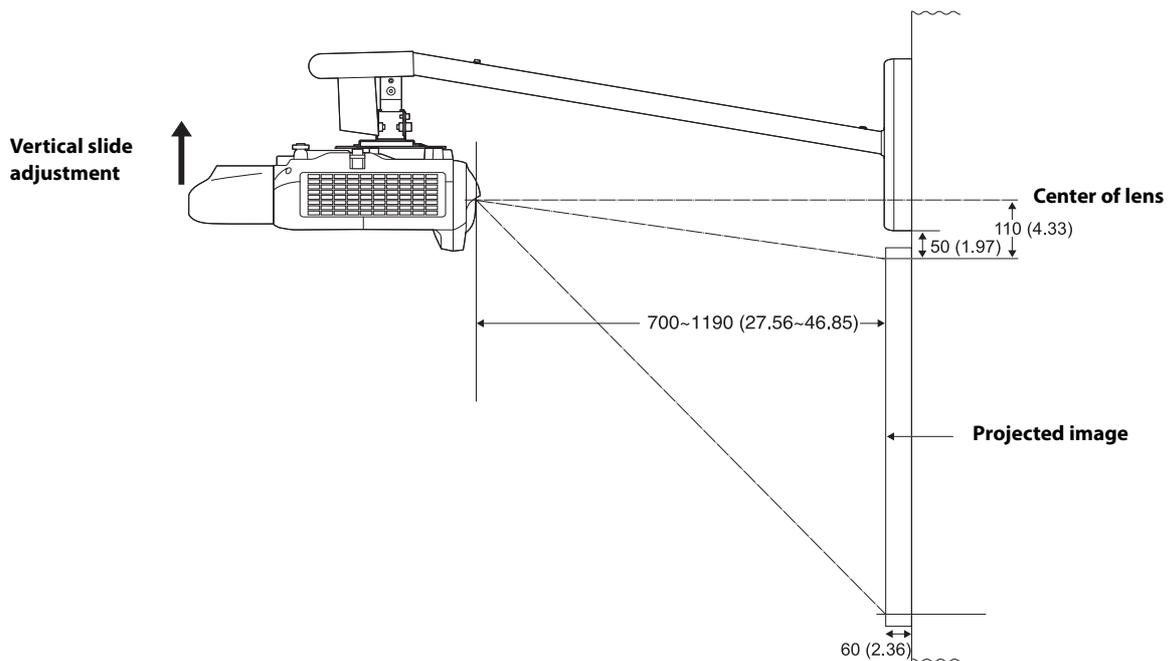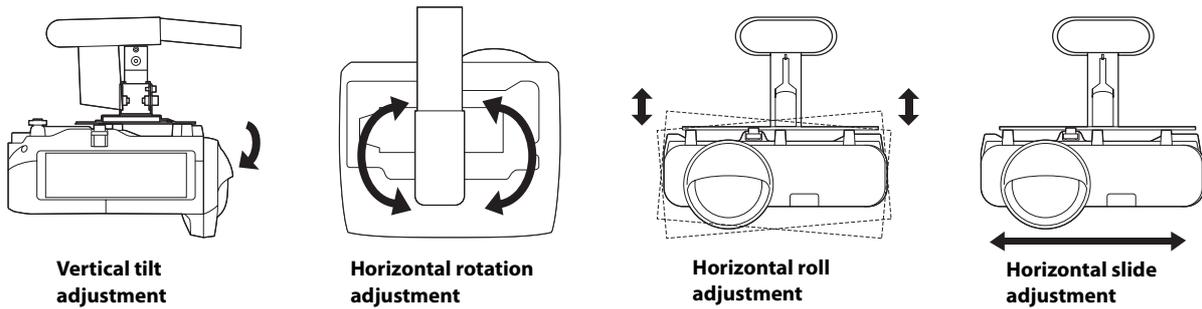


Units: mm (inches)

Screen Size and Projection Distance

Refer to the tables on the following pages and install the mount and projector to project images at the appropriate size. The values are only a guide.

The recommended projection distance is 70 to 119 cm (27.55 to 46.85 inches).

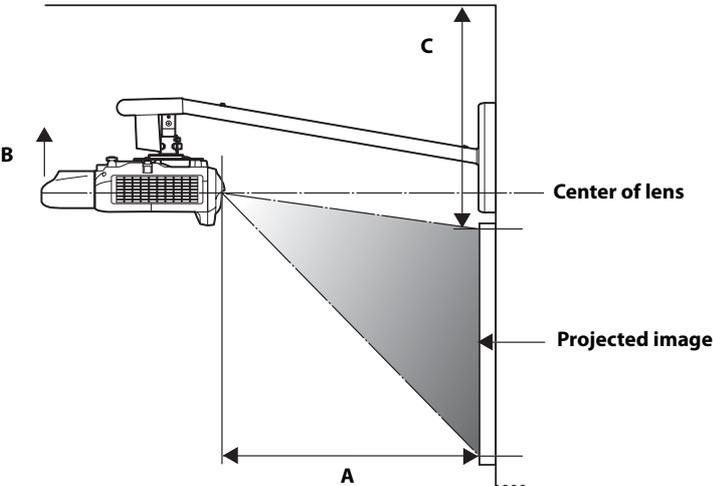

EB-435W/EB-425W/PowerLite 435W/PowerLite 425W

Units: cm (inches)

Screen size	16:10 WXGA			4:3 XGA			16:9 Widescreen		
	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)
60"	-	-	-	70 (27.56)	4 (1.57)	43 (16.92)	-	-	-
61"	-	-	-	71 (27.95)	5 (1.97)	44 (17.32)	-	-	-
62"	-	-	-	72 (28.35)	5 (1.97)	44 (17.32)	-	-	-
63"	-	-	-	74 (29.13)	5 (1.97)	44 (17.32)	-	-	-
64"	-	-	-	75 (29.53)	5 (1.97)	44 (17.32)	-	-	-
65"	-	-	-	76 (29.92)	5 (1.97)	44 (17.32)	-	-	-
66"	-	-	-	77 (30.31)	5 (1.97)	45 (17.72)	70 (27.56)	9 (3.54)	48 (18.90)
67"	-	-	-	79 (31.10)	5 (1.97)	45 (17.72)	71 (27.95)	10 (3.94)	49 (19.29)
68"	70 (27.56)	4 (1.57)	43 (16.92)	80 (31.50)	5 (1.97)	45 (17.72)	72 (28.35)	10 (3.94)	49 (19.29)
69"	71 (27.95)	5 (1.97)	44 (17.32)	81 (31.89)	5 (1.97)	45 (17.72)	73 (28.74)	10 (3.94)	49 (19.29)
70"	72 (28.35)	5 (1.97)	44 (17.32)	82 (32.28)	5 (1.97)	45 (17.72)	74 (29.13)	10 (3.94)	49 (19.29)
71"	73 (28.74)	5 (1.97)	44 (17.32)	83 (32.68)	5 (1.97)	46 (18.11)	75 (29.53)	10 (3.94)	50 (19.69)
72"	74 (29.13)	5 (1.97)	44 (17.32)	85 (33.46)	5 (1.97)	46 (18.11)	77 (30.31)	10 (3.94)	50 (19.69)
73"	75 (29.53)	5 (1.97)	44 (17.32)	86 (33.86)	5 (1.97)	46 (18.11)	78 (30.71)	10 (3.94)	50 (19.69)
74"	77 (30.31)	5 (1.97)	45 (17.72)	87 (34.25)	6 (2.36)	46 (18.11)	79 (31.10)	10 (3.94)	50 (19.69)
75"	78 (30.71)	5 (1.97)	45 (17.72)	88 (34.65)	6 (2.36)	46 (18.11)	80 (31.50)	10 (3.94)	50 (19.69)
76"	79 (31.10)	5 (1.97)	45 (17.72)	90 (35.43)	6 (2.36)	47 (18.50)	81 (31.89)	11 (4.33)	51 (20.08)
77"	80 (31.50)	5 (1.97)	45 (17.72)	91 (35.83)	6 (2.36)	47 (18.50)	82 (32.28)	11 (4.33)	51 (20.08)
78"	81 (31.89)	5 (1.97)	45 (17.72)	92 (36.22)	6 (2.36)	47 (18.50)	83 (32.68)	11 (4.33)	51 (20.08)
79"	82 (32.28)	5 (1.97)	45 (17.72)	93 (36.61)	6 (2.36)	47 (18.50)	84 (33.07)	11 (4.33)	51 (20.08)
80"	83 (32.68)	5 (1.97)	46 (18.11)	94 (37.01)	6 (2.36)	47 (18.50)	85 (33.46)	11 (4.33)	52 (20.47)
81"	84 (33.07)	5 (1.97)	46 (18.11)	96 (37.80)	6 (2.36)	47 (18.50)	87 (34.25)	11 (4.33)	52 (20.47)
82"	85 (33.46)	6 (2.36)	46 (18.11)	97 (38.19)	6 (2.36)	47 (18.50)	88 (34.65)	11 (4.33)	52 (20.47)
83"	86 (33.86)	6 (2.36)	46 (18.11)	98 (38.58)	6 (2.36)	47 (18.50)	89 (35.04)	11 (4.33)	52 (20.47)
84"	87 (34.25)	6 (2.36)	46 (18.11)	99 (38.98)	6 (2.36)	47 (18.50)	90 (35.43)	11 (4.33)	53 (20.87)
85"	88 (34.65)	6 (2.36)	46 (18.11)	101 (39.76)	6 (2.36)	48 (18.90)	91 (35.83)	12 (4.72)	53 (20.87)
86"	90 (35.43)	6 (2.36)	47 (18.50)	102 (40.16)	6 (2.36)	49 (19.29)	92 (36.22)	12 (4.72)	53 (20.87)
87"	91 (35.83)	6 (2.36)	47 (18.50)	103 (40.55)	6 (2.36)	49 (19.29)	93 (36.61)	12 (4.72)	53 (20.87)
88"	92 (36.22)	6 (2.36)	47 (18.50)	104 (40.94)	7 (2.76)	49 (19.29)	94 (37.01)	12 (4.72)	53 (20.87)
89"	93 (36.61)	6 (2.36)	47 (18.50)	105 (41.34)	7 (2.76)	49 (19.29)	95 (37.40)	12 (4.72)	54 (21.26)
90"	94 (37.01)	6 (2.36)	47 (18.50)	107 (42.13)	7 (2.76)	49 (19.29)	97 (38.19)	12 (4.72)	54 (21.26)
91"	95 (37.40)	6 (2.36)	48 (18.90)	108 (42.52)	7 (2.76)	50 (19.69)	98 (38.58)	12 (4.72)	54 (21.26)
92"	96 (37.80)	6 (2.36)	48 (18.90)	109 (42.91)	7 (2.76)	50 (19.69)	99 (38.98)	12 (4.72)	54 (21.26)
93"	97 (38.19)	6 (2.36)	48 (18.90)	110 (43.31)	7 (2.76)	50 (19.69)	100 (39.37)	13 (5.12)	55 (21.65)

Units: cm (inches)

Screen size	16:10 WXGA			4:3 XGA			16:9 Widescreen		
	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)
94"	98 (38.58)	6 (2.36)	48 (18.90)	111 (43.70)	7 (2.76)	50 (19.69)	101 (39.76)	13 (5.12)	55 (21.65)
95"	99 (38.98)	6 (2.36)	48 (18.90)	113 (44.49)	7 (2.76)	50 (19.69)	102 (40.16)	13 (5.12)	55 (21.65)
96"	100 (39.37)	6 (2.36)	48 (18.90)	114 (44.88)	7 (2.76)	51 (20.08)	103 (40.55)	13 (5.12)	55 (21.65)
97"	101 (39.76)	7 (2.76)	49 (19.29)	115 (45.28)	7 (2.76)	51 (20.08)	104 (40.94)	13 (5.12)	55 (21.65)
98"	102 (40.16)	7 (2.76)	49 (19.29)	116 (45.67)	7 (2.76)	51 (20.08)	105 (41.34)	13 (5.12)	56 (22.05)
99"	104 (40.94)	7 (2.76)	49 (19.29)	118 (46.46)	7 (2.76)	51 (20.08)	106 (41.73)	13 (5.12)	56 (22.05)
100"	105 (41.34)	7 (2.76)	49 (19.29)	119 (46.85)	7 (2.76)	51 (20.08)	108 (42.52)	13 (5.12)	56 (22.05)
101"	106 (41.73)	7 (2.76)	49 (19.29)	-	-	-	109 (42.91)	13 (5.12)	56 (22.05)
102"	107 (42.13)	7 (2.76)	49 (19.29)	-	-	-	110 (43.31)	14 (5.51)	57 (22.44)
103"	108 (42.52)	7 (2.76)	50 (19.69)	-	-	-	111 (43.70)	14 (5.51)	57 (22.44)
104"	109 (42.91)	7 (2.76)	50 (19.69)	-	-	-	112 (44.09)	14 (5.51)	57 (22.44)
105"	110 (43.31)	7 (2.76)	50 (19.69)	-	-	-	113 (44.49)	14 (5.51)	57 (22.44)
106"	111 (43.70)	7 (2.76)	50 (19.69)	-	-	-	114 (44.88)	14 (5.51)	58 (22.83)
107"	112 (44.09)	7 (2.76)	50 (19.69)	-	-	-	115 (45.28)	14 (5.51)	58 (22.83)
108"	113 (44.49)	7 (2.76)	51 (20.08)	-	-	-	116 (45.67)	14 (5.51)	58 (22.83)
109"	114 (44.88)	7 (2.76)	51 (20.08)	-	-	-	118 (46.46)	14 (5.51)	58 (22.83)
110"	115 (45.28)	7 (2.76)	51 (20.08)	-	-	-	119 (46.85)	14 (5.51)	58 (22.83)
111"	116 (45.67)	7 (2.76)	51 (20.08)	-	-	-	-	-	-
112"	118 (46.46)	7 (2.76)	51 (20.08)	-	-	-	-	-	-
113"	119 (46.85)	7 (2.76)	51 (20.08)	-	-	-	-	-	-

Screen size	Projection distance (A) Minimum (Tele)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)
16:10 WXGA*	70 (27.56)	0	51 (20.08)
84"	119 (46.85)	17 (6.69)	66 (25.98)
4:3 XGA*	69 (27.17)	0	51 (20.08)
74"	119 (46.85)	17 (6.69)	66 (25.98)
48"	69 (27.17)	5 (1.97)	45 (17.72)
Widescreen*	119 (46.85)	23 (9.06)	60 (23.62)

* Allow at least 14 cm (5.5 in.) space between the top of the whiteboard and the bottom of the wall plate.

EB-430/EB-420/PowerLite 430/PowerLite 420

Units: cm (inches)

Screen size	16:10 WXGA			4:3 XGA			16:9 Widescreen		
	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)
58"	-	-	-	-	-	-	70 (27.56)	15 (5.91)	53 (20.87)
59"	-	-	-	-	-	-	71 (27.95)	16 (6.30)	54 (21.26)
60"	70 (27.56)	11 (4.33)	49 (19.29)	-	-	-	72 (28.35)	16 (6.30)	54 (21.26)
61"	72 (28.35)	12 (4.72)	50 (19.69)	-	-	-	74 (29.13)	16 (6.30)	55 (21.65)
62"	73 (28.74)	12 (4.72)	50 (19.69)	-	-	-	75 (29.53)	16 (6.30)	55 (21.65)
63"	74 (29.13)	12 (4.72)	50 (19.69)	70 (27.56)	2 (0.79)	41 (16.14)	76 (29.92)	16 (6.30)	55 (21.65)
64"	75 (29.53)	12 (4.72)	51 (20.08)	71 (27.95)	2 (0.79)	42 (16.54)	77 (30.31)	17 (6.69)	56 (22.05)
65"	76 (29.92)	12 (4.72)	51 (20.08)	72 (28.35)	2 (0.79)	42 (16.54)	79 (31.10)	17 (6.69)	56 (22.05)
66"	78 (30.71)	12 (4.72)	51 (20.08)	73 (28.74)	2 (0.79)	42 (16.54)	80 (31.50)	17 (6.69)	56 (22.05)
67"	79 (31.10)	13 (5.12)	51 (20.08)	74 (29.13)	2 (0.79)	42 (16.54)	81 (31.89)	17 (6.69)	57 (22.44)
68"	80 (31.50)	13 (5.12)	52 (20.47)	75 (29.53)	2 (0.79)	42 (16.54)	82 (32.28)	17 (6.69)	57 (22.44)
69"	81 (31.89)	13 (5.12)	52 (20.47)	77 (30.31)	2 (0.79)	42 (16.54)	84 (33.07)	18 (7.09)	57 (22.44)
70"	83 (32.68)	13 (5.12)	52 (20.47)	78 (30.71)	2 (0.79)	42 (16.54)	85 (33.46)	18 (7.09)	58 (22.83)
71"	84 (33.07)	13 (5.12)	52 (20.47)	79 (31.10)	2 (0.79)	43 (16.93)	86 (33.86)	18 (7.09)	58 (22.83)
72"	85 (33.46)	13 (5.12)	53 (20.87)	80 (31.50)	2 (0.79)	43 (16.93)	87 (34.25)	18 (7.09)	58 (22.83)
73"	86 (33.86)	13 (5.12)	53 (20.87)	81 (31.89)	2 (0.79)	43 (16.93)	89 (35.04)	19 (7.48)	59 (23.23)
74"	87 (34.25)	14 (5.51)	53 (20.87)	82 (32.28)	2 (0.79)	43 (16.93)	90 (35.43)	19 (7.48)	59 (23.23)
75"	89 (35.04)	14 (5.51)	54 (21.26)	83 (32.68)	2 (0.79)	43 (16.93)	91 (35.83)	19 (7.48)	60 (23.62)
76"	90 (35.43)	14 (5.51)	54 (21.26)	85 (33.46)	2 (0.79)	43 (16.93)	92 (36.22)	19 (7.48)	60 (23.62)
77"	91 (35.83)	14 (5.51)	54 (21.26)	86 (33.86)	2 (0.79)	43 (16.93)	94 (37.01)	19 (7.48)	60 (23.62)
78"	92 (36.22)	14 (5.51)	54 (21.26)	87 (34.25)	2 (0.79)	44 (17.32)	95 (37.40)	20 (7.87)	60 (23.62)
79"	94 (37.01)	14 (5.51)	55 (21.65)	88 (34.65)	2 (0.79)	44 (17.32)	96 (37.80)	20 (7.87)	60 (23.62)
80"	95 (37.40)	14 (5.51)	55 (21.65)	89 (35.04)	2 (0.79)	44 (17.32)	98 (38.58)	20 (7.87)	60 (23.62)
81"	96 (37.80)	15 (5.91)	55 (21.65)	90 (35.43)	2 (0.79)	44 (17.32)	99 (38.98)	20 (7.87)	60 (23.62)
82"	97 (38.19)	15 (5.91)	56 (22.05)	92 (36.22)	2 (0.79)	44 (17.32)	100 (39.37)	20 (7.87)	60 (23.62)
83"	98 (38.58)	15 (5.91)	56 (22.05)	93 (36.61)	2 (0.79)	44 (17.32)	101 (39.76)	21 (8.27)	60 (23.62)
84"	100 (39.37)	15 (5.91)	56 (22.05)	94 (37.01)	2 (0.79)	44 (17.32)	103 (40.55)	21 (8.27)	60 (23.62)
85"	101 (39.76)	15 (5.91)	56 (22.05)	95 (37.40)	2 (0.79)	45 (17.72)	104 (40.94)	21 (8.27)	60 (23.62)
86"	102 (40.16)	15 (5.91)	57 (22.44)	96 (37.80)	2 (0.79)	45 (17.72)	105 (41.34)	21 (8.27)	60 (23.62)
87"	103 (40.55)	16 (6.30)	57 (22.44)	97 (38.19)	2 (0.79)	45 (17.72)	106 (41.73)	21 (8.27)	60 (23.62)
88"	105 (41.34)	16 (6.30)	57 (22.44)	98 (38.58)	2 (0.79)	45 (17.72)	108 (42.52)	22 (8.66)	60 (23.62)
89"	106 (41.73)	16 (6.30)	57 (22.44)	100 (39.37)	2 (0.79)	45 (17.72)	109 (42.91)	22 (8.66)	60 (23.62)
90"	107 (42.13)	16 (6.30)	58 (22.83)	101 (39.76)	2 (0.79)	45 (17.72)	110 (43.31)	22 (8.66)	60 (23.62)

Units: cm (inches)

Screen size	16:10 WXGA			4:3 XGA			16:9 Widescreen		
	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)	Projection distance (A) Minimum (Wide)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)
91"	108 (42.52)	16 (6.30)	58 (22.83)	102 (40.16)	2 (0.79)	45 (17.72)	111 (43.70)	22 (8.66)	60 (23.62)
92"	109 (42.91)	16 (6.30)	58 (22.83)	103 (40.55)	2 (0.79)	45 (17.72)	113 (44.49)	22 (8.66)	60 (23.62)
93"	111 (43.70)	16 (6.30)	59 (23.23)	104 (40.94)	2 (0.79)	46 (18.11)	114 (44.88)	23 (9.06)	60 (23.62)
94"	112 (44.09)	17 (6.69)	59 (23.23)	105 (41.34)	2 (0.79)	46 (18.11)	115 (45.28)	23 (9.06)	60 (23.62)
95"	113 (44.49)	17 (6.69)	59 (23.23)	107 (42.13)	2 (0.79)	46 (18.11)	116 (45.67)	23 (9.06)	60 (23.62)
96"	114 (44.88)	17 (6.69)	59 (23.23)	108 (42.52)	2 (0.79)	46 (18.11)	118 (46.46)	23 (9.06)	60 (23.62)
97"	116 (45.67)	17 (6.69)	60 (23.62)	109 (42.91)	2 (0.79)	46 (18.11)	119 (46.85)	23 (9.06)	60 (23.62)
98"	117 (46.06)	17 (6.69)	60 (23.62)	110 (43.31)	2 (0.79)	46 (18.11)	-	-	-
99"	118 (46.46)	17 (6.69)	60 (23.62)	111 (43.70)	2 (0.79)	46 (18.11)	-	-	-
100"	119 (46.85)	17 (6.69)	60 (23.62)	112 (44.09)	2 (0.79)	47 (18.50)	-	-	-
101"	-	-	-	114 (44.88)	2 (0.79)	47 (18.50)	-	-	-
102"	-	-	-	115 (45.28)	2 (0.79)	47 (18.50)	-	-	-
103"	-	-	-	116 (45.67)	2 (0.79)	47 (18.50)	-	-	-
104"	-	-	-	117 (46.06)	2 (0.79)	47 (18.50)	-	-	-
105"	-	-	-	118 (46.46)	2 (0.79)	47 (18.50)	-	-	-
106"	-	-	-	119 (46.85)	2 (0.79)	48 (18.90)	-	-	-

Screen size	Projection distance (A) Minimum (Tele)	Vertical slide adjustment (B)	Distance from top of projected image to ceiling (C)
16:10 WXGA*	70 (27.56)	0	50 (19.69)
74"	119 (46.85)	18 (7.09)	65 (25.59)
4:3 XGA**	69 (27.17)	5 (1.97)	45 (17.72)
78"	118 (46.46)	22 (8.66)	60 (23.62)
43"	70 (27.56)	5 (1.97)	45 (17.72)
Widescreen*	119 (46.85)	23 (9.06)	60 (23.62)

* Allow at least 20 cm (7.9 in.) space between the top of the whiteboard and the bottom of the wall plate.

** Allow at least 5 cm (2.0 in.) space between the top of the whiteboard and the bottom of the wall plate.

Assembly and Installation

Make sure you follow the instructions below to install the wall mount. Otherwise, the wall mount may fall and result in personal injury or property damage.

Warning

- ❑ When you mount the projector on the wall with the wall mount, the wall requires enough strength to hold the projector, optional accessories, and the wall mount. This wall mount should be installed on a concrete wall. Confirm the weight of the projector, optional accessories, and the wall mount before installation, and maintain the strength of the wall. If the wall is not strong enough, reinforce the wall before installation.
- ❑ The combined weight of this mount and the projector is approximately 15.5 kg (34.18 lbs.) maximum. Before starting the installation, carefully check the construction, material, and strength of the wall.
- ❑ Install the mount firmly to hold the weight of the projector and the mount, and to resist horizontal vibration. Use M8 nuts and bolts. Nuts and bolts smaller than M8 could cause the mount to fall.
- ❑ Epson accepts no responsibility for any damage or injury caused by lack of wall strength or inadequate installation.




At the point where the wall mount is installed, make sure there is a gap of 410 to 660 mm (16 to 26 inches) from the top of the image projected onto the white board to the ceiling. See "Screen Size and Projection Distance" on page 7 for more details.

1. Installing the wall plate


- 1) Check the position where you want to install the wall plate, and then mark that position on the wall.

As shown in the illustration below, set the horizontal center of the wall plate 8 cm (3.14 inches) to the left of the horizontal center of the whiteboard. Allow at least a 5 cm (1.96 inches) gap between the top of the whiteboard and the bottom of the wall plate. However, if you are using the maximum (tele) screen size, refer to the tables on the previous pages.


After installing, you can slide the projector horizontally 4.5 cm (1.77 inches) by using the slider on the adjustment unit. See step 10 on page 18 for more details.

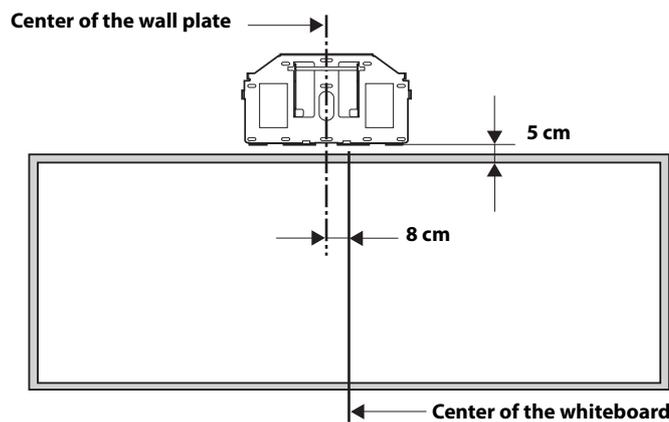

- 2) Position the wall plate over the marks you made in step 1, and then mark the points where the wall plate will be secured as shown in the following illustration.
 Insert the anchors into at least three points.
 If you insert four anchors, use the four point As or four point Bs as shown below.

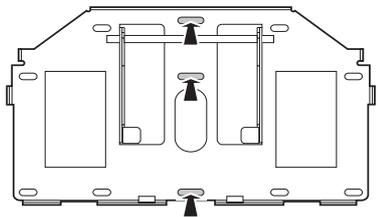


For 3 points

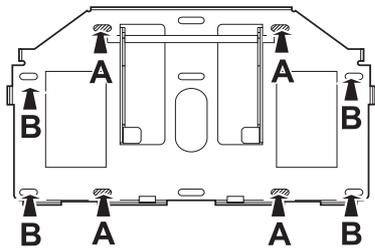


For 4 points

- 3) Drill holes of the following diameters and depths at the points you marked.


Drill diameter	8.5 mm (0.33 inches)
Pilot hole depth	40 mm (1.57 inches)
Anchor hole depth	35 mm (1.38 inches)

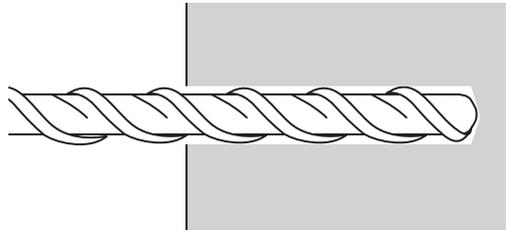


- 4) Use a device such as a dust pump to clean out concrete dust from the hole.

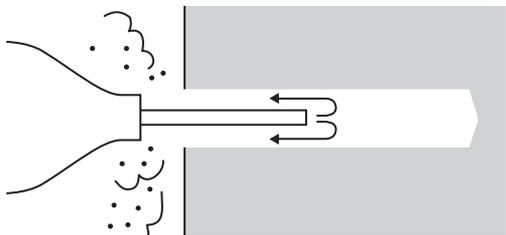

- 5) Position the wall plate on the wall and insert M8 x 50 mm expansion anchors into the holes. Attach the nut and tap it with a hammer until the core touches the top of the anchor.

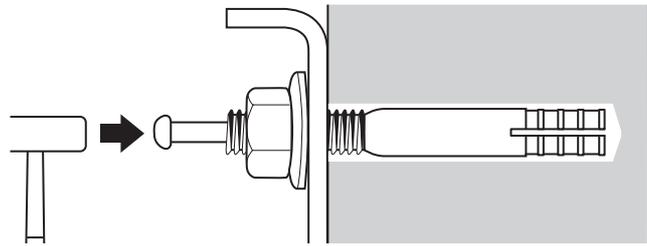


- 6) Tighten the nut with a spanner to secure the wall plate to the wall.

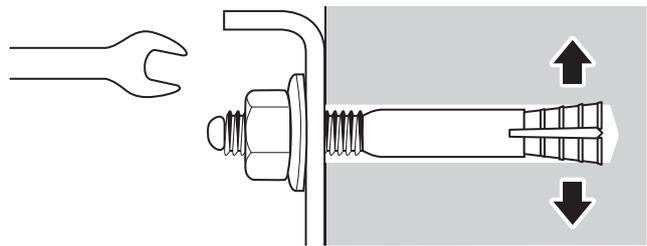


2. Assembling the wall mount

- 1) Attach the adjustment unit to the arm unit.
- 2) Secure temporarily using the hexagonal wrenches (M4 and M8) and M4 x 12 mm hexagon socket head cap bolt and M8 x 15 mm hexagon socket head cap bolt.

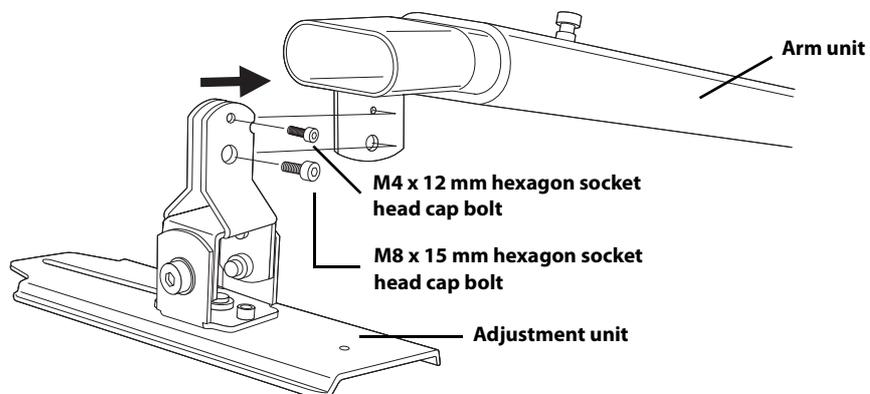


- 3) Attach the arm plate using a hexagonal wrench (M8) and four M8 x 12 mm hexagon socket head cap bolts.

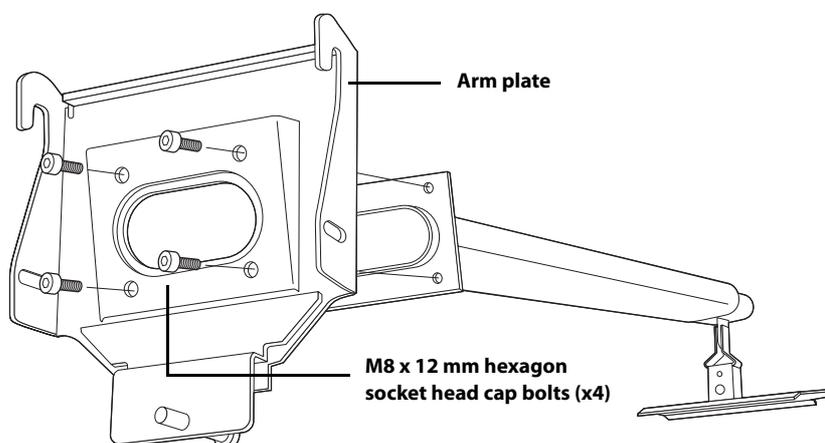

3. Routing the cables through the arm unit

If you are installing ELPIU03 (sold separately), you also need to route the USB cable supplied with ELPIU03 through the arm unit.

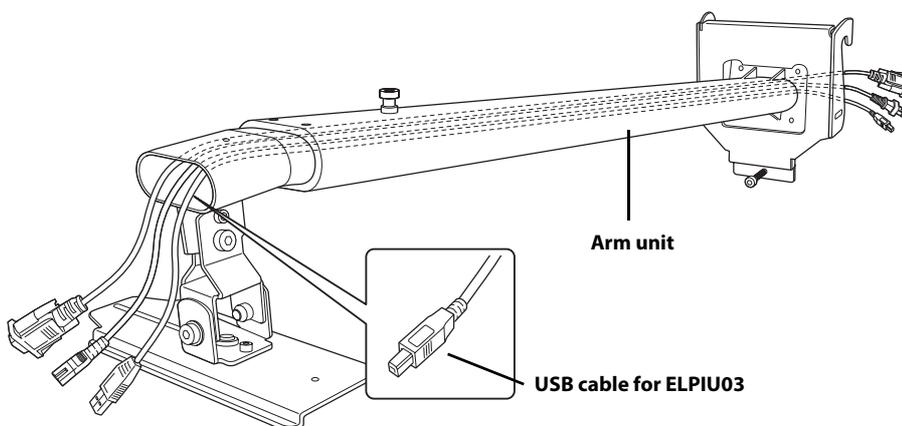

⚠ Caution


Problems may occur if you use this product without routing the cables through the arm unit.



Route the USB cable that connects ELPIU03 to the computer so that the type B connector emerges on the adjustment unit side.


4. Attaching the wall mount to the wall plate

- 1) Attach the hook on the arm plate to the bar on the wall plate.
Be careful not to pinch cables between the arm plate and the wall plate.
- 2) Secure the arm plate temporarily using two M8 x 15 mm hexagon socket head cap bolts.

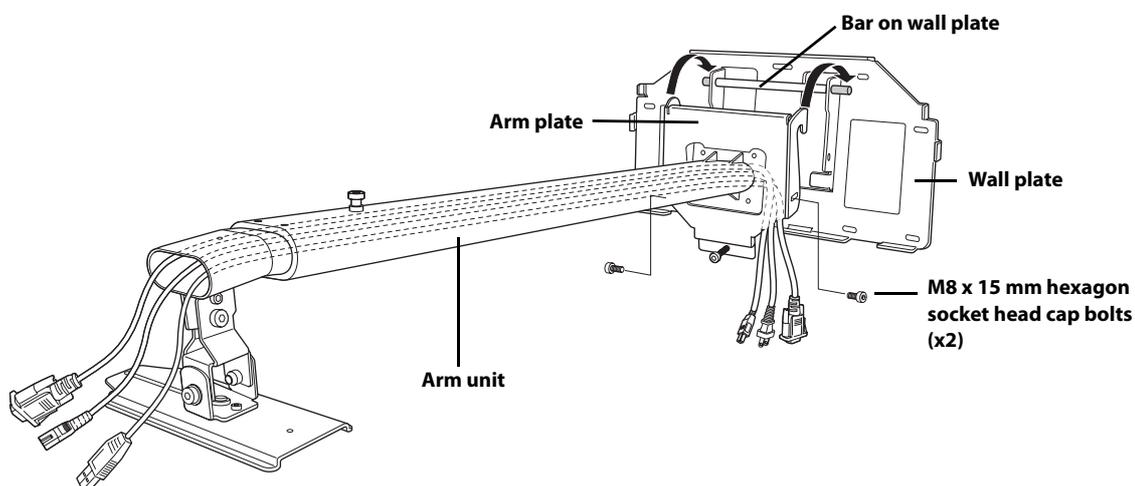

5. Attaching the attachment plate to the projector

- 1) Place the projector upside down.
- 2) Attach the attachment plate to the projector using the hexagonal wrench (M4) and five M4 x 12 mm bolts with washers/ spring washers.

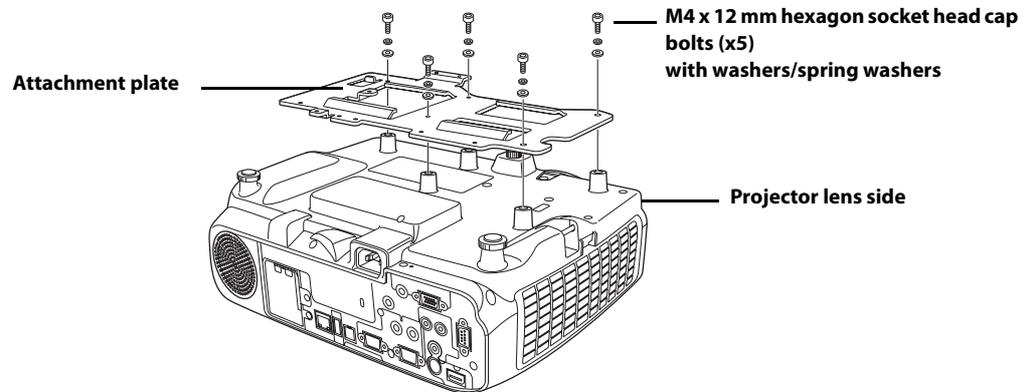

Warning


If you apply adhesives to prevent the screws from loosening, or if you use lubricants or oils on the wall mount, the housing may crack and cause the projector to fall, resulting in personal injury or property damage. Do not use adhesives, lubricants, or oils to install or adjust the mount.



Tighten the screws firmly.


6. Attaching the projector to the adjustment unit

- 1) Slide the attachment plate onto the adjustment unit as shown below.
- 2) Secure the adjustment unit temporarily at the points marked using two M4 x 12 mm bolts as shown below.

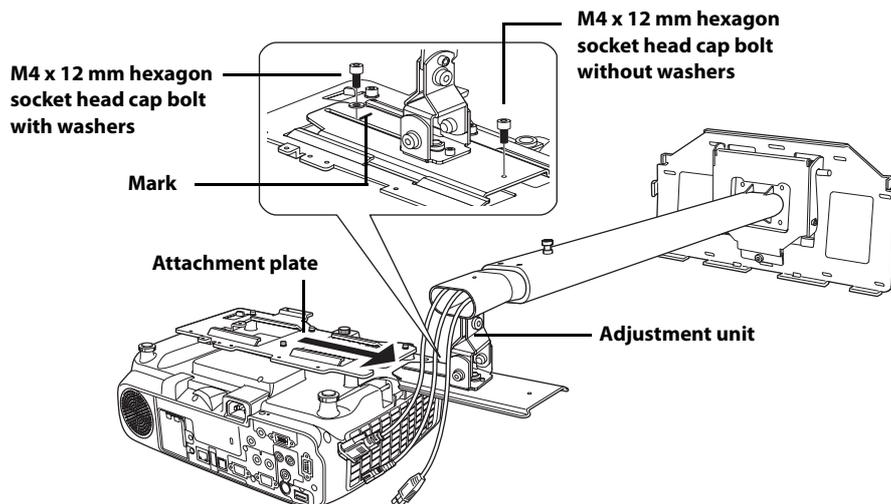

7. Extending the arm, adjusting the length, and securing temporarily

- 1) Loosen the screw on the arm.(①)
- 2) Adjust the length of the arm using the measure on the bottom to match the projection distance recommended in "Screen Size and Projection Distance" on page 7.(②)
- 3) After adjusting the length, secure the arm position temporarily by tightening the screw on top.(③)

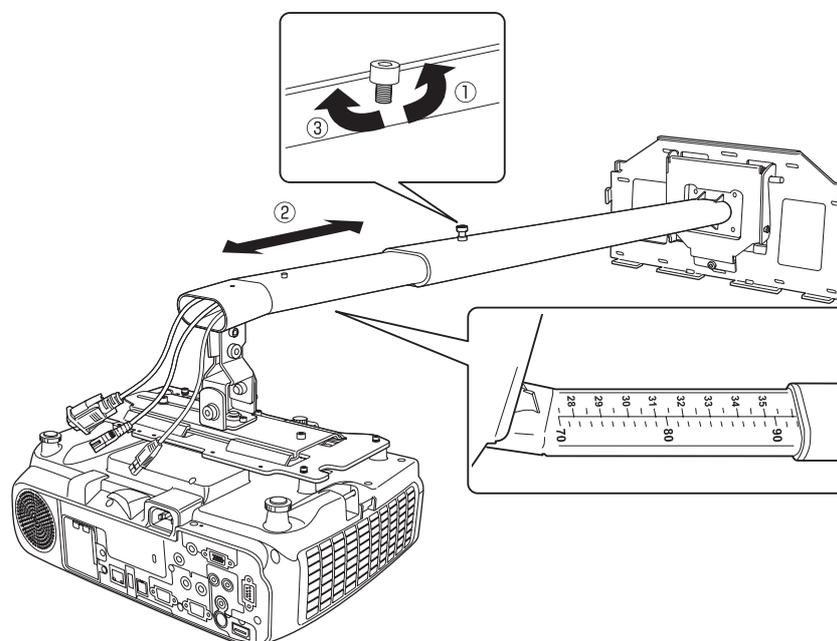

8. Connecting the cables


Connect the power cord and other cables to the projector.

If you are installing ELPIU03, see the *Quick Setup Guide* included with the product.

If you are not installing ELPIU03, go to the next step.

9. Attaching the arm cover

Secure the arm cover with a hexagonal wrench (M4) and an M4 x 12 mm hexagon socket head cap bolt.

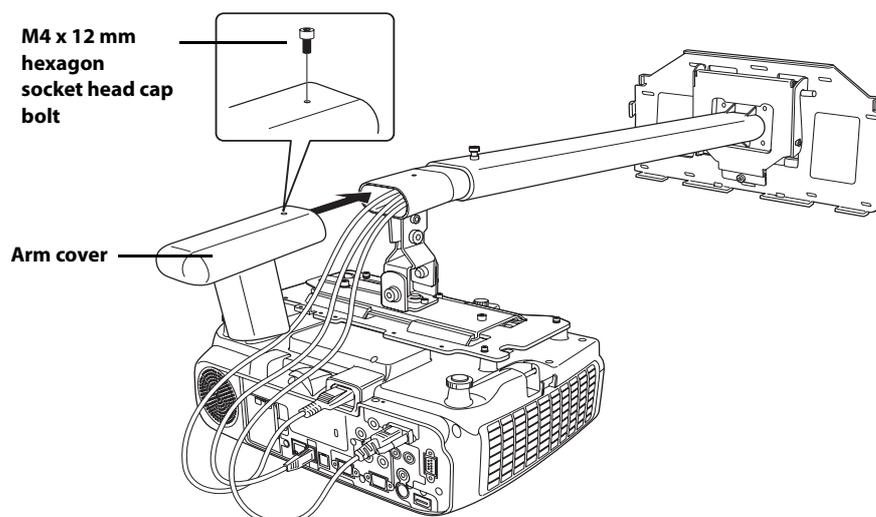

10. Turning on the projector and checking the screen

- 1) Plug in the projector.
- 2) Turn on the projector.
- 3) Loosen the screws on the adjustment unit (A, B, C, and D) as shown below to adjust the screen position.
- 4) Adjust the vertical slide (arm angle) using screw (E) on the bottom of the arm plate. The arm rises when you tighten the screw, and lowers when you loosen it.


A: Vertical tilt adjustment: 0 to -9.5°

B: Horizontal roll adjustment: 0 to ± 5°

C: Horizontal rotation adjustment: 0 to ± 5°

**D: Horizontal slide adjustment:
0 to ± 45 mm (0 to ± 1.77 inches)**


**E: Vertical slide adjustment:
0 to 134 mm (0 to 5.27 inches) (arm length minimum)
0 to 230 mm (0 to 9.05 inches) (arm length maximum)**

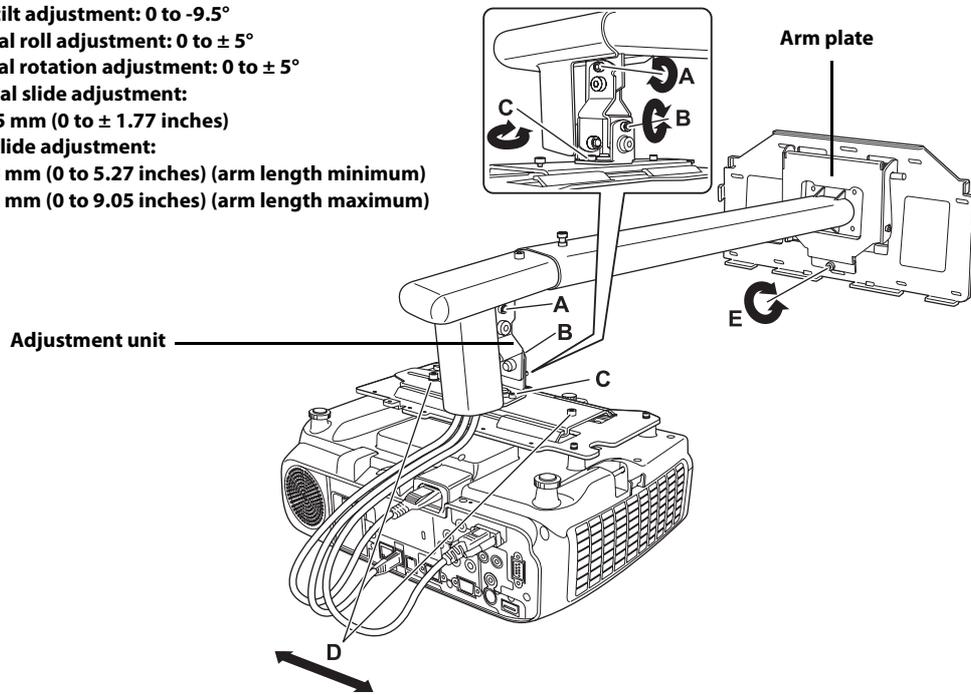

- 5) Firmly tighten the screws on the arm unit and adjustment unit using the hexagonal wrenches (M4 and M8).


Warning

Tighten all screws firmly. Otherwise, the projector or wall mount may fall and cause personal injury or property damage.

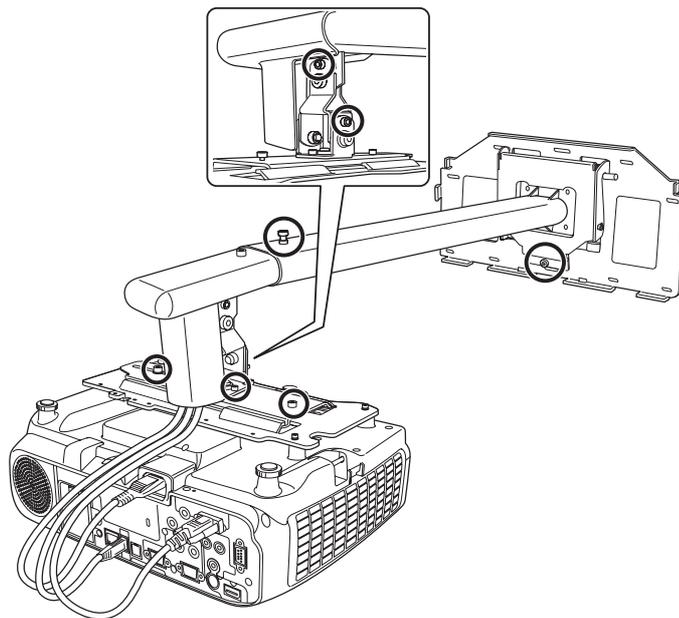


11. Attaching the interface cover bracket

Attach the interface cover bracket using the hexagonal wrench (M4) and two M4 x 12 mm bolts with washers.

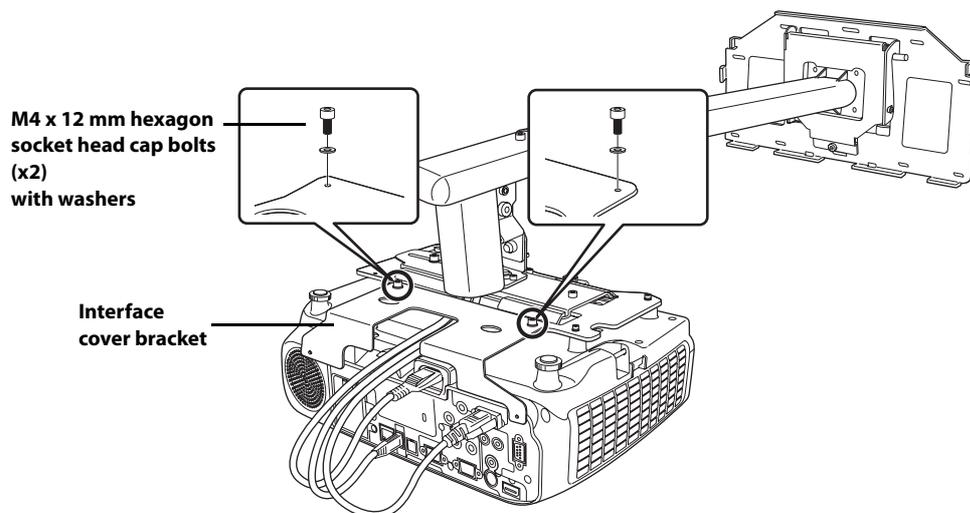


12. Attaching the cable cover

Take up the cable slack, and then secure the cable cover with the screws as shown below.

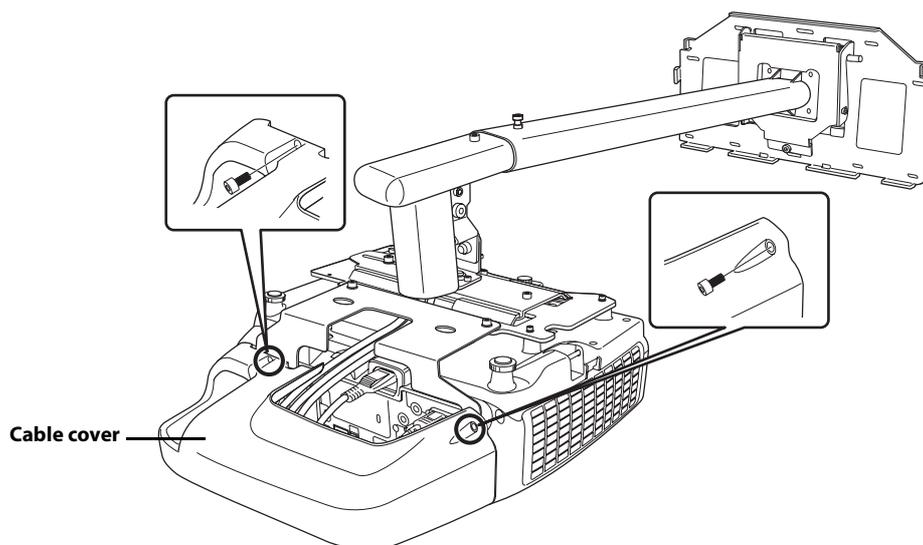

13. Attaching the wall plate cover

Secure the wall plate cover with a hexagonal wrench (M4) and three M4 x 12 mm hexagon socket head cap bolts.

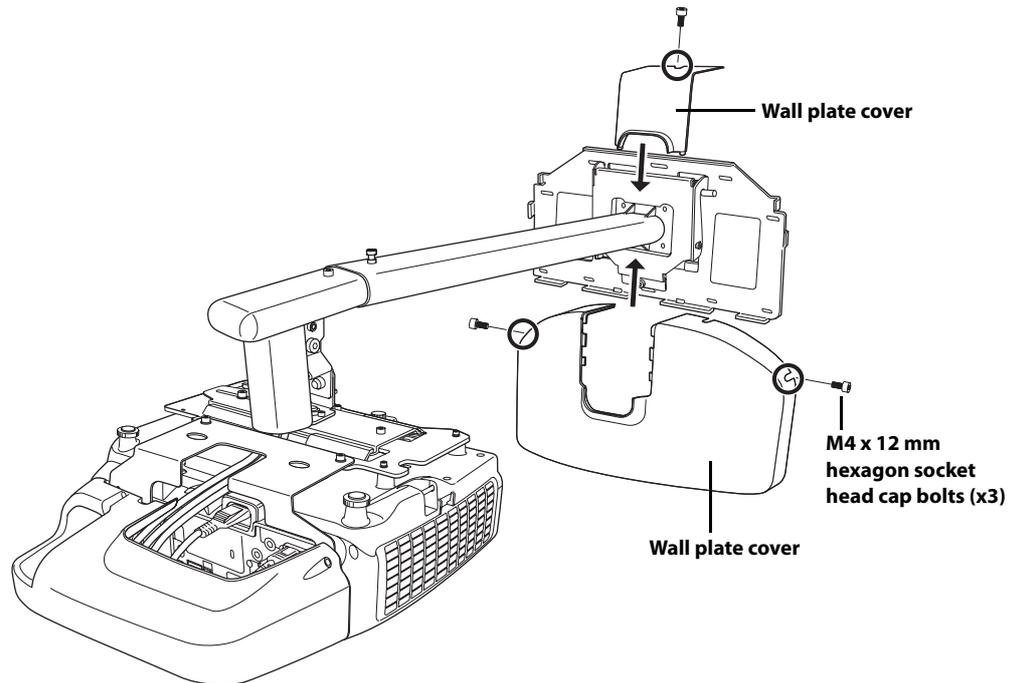

Installation, removal, and servicing of the projector should only be performed by a qualified technician. See the *User's Guide* included with your projector for information about maintenance and repairs.

Warning

- Never loosen the bolts and nuts after installation. Confirm on a regular basis that the screws have not become loose. If you find any loose screws, tighten them firmly. Otherwise, the projector or wall mount may fall and cause personal injury or property damage.
- Do not hang on the mount or hang heavy objects on it. If the mount or the projector falls, it could cause personal injury or property damage.