


iTrans USB3-TR100

USB 3.0 Extender (100M)

User Manual V1.2

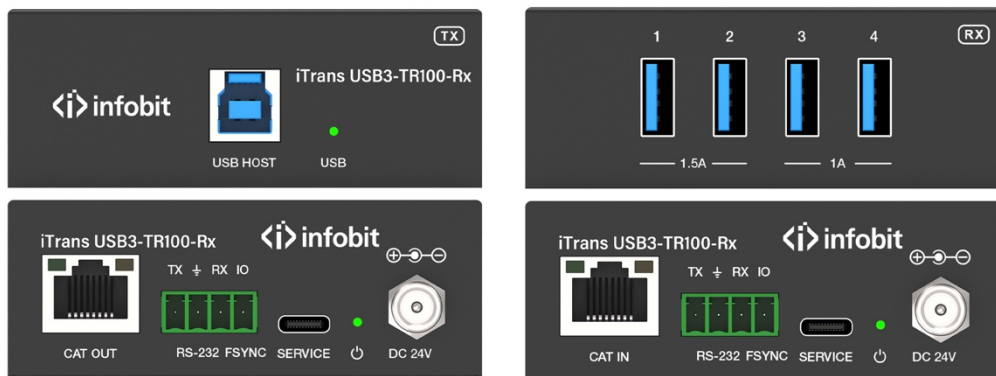

Thank you for purchasing this product


For optimum performance and safety, please read these instructions carefully before connecting, operating, or adjusting this product. Please keep this manual for future reference.

Surge protection device recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended to protect and extend the life of your equipment.

Caution

The product requires the use of UTP connectors. Please connect in direct interconnection method and do not cross connect.

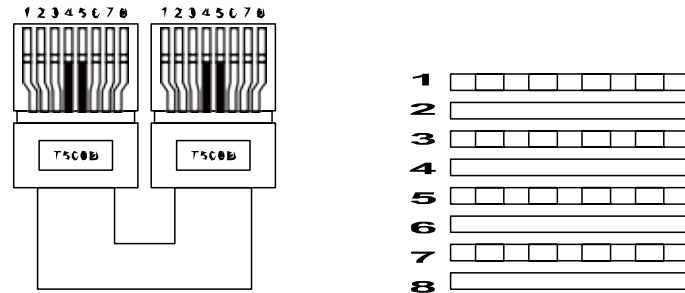

1	White and Orange
2	Orange
3	White and Green
4	Blue
5	White and Blue
6	Green
7	White and Brown
8	Brown

Direct Interconnection Method

1. Introduction

The USB 3.0 Extender can extend USB signal to a distance up to 100m/328ft via a single CAT6a cable. Transmitter features with one USB 3.0 Type B input, one FSYNC GPIO input and one RS-232 pass-through. Receiver features with four USB 3.0 Type A outputs, one FSYNC GPIO output and one RS-232 pass-through. Bi-directional 24V PoC is also supported. The product can be widely used for long distance signal transmission between a PC and USB devices.

2. Features

- ☆ Extension of USB 3.0 up to 100m/328ft over CAT6a cable
- ☆ USB 3.0 connectivity with data transfer rate up to 5Gbps
- ☆ Backwards compatible with USB 2.0 and 1.1
- ☆ Hardware acceleration for isochronous and bulk transfer
- ☆ USB-A port 1 & 2 support 5V/1.5A, port 3 & 4 support 5V/1A
- ☆ Support RS-232 pass-through and FSYNC GPIO pass-through (for industry camera use)
- ☆ Support bi-directional 24V PoC
- ☆ Support HDBaseT 3.0
- ☆ Simple plug and play, no driver and setting installation required

3. Package Contents


- ① 1× USB 3.0 Extender (Transmitter)
- ② 1× USB 3.0 Extender (Receiver)
- ③ 1× 24V/2A Locking Power Supply
- ④ 2× 4pin-3.5mm Phoenix Connector (Male)

- ⑤ 4× Mounting Ear
- ⑥ 8× Machine Screw (KM3*4)
- ⑦ 1× User Manual

4. Spec


Model	iTrans USB3-TR100
Name	USB 3.0 Extender (100M)
USB Protocol	USB 3.0
Transmission Rate	Up to 5Gbps
Network Bandwidth	10G
Transmission Distance	100m/328ft over CAT6a (F/FTP) cable
Transmitter	Input: 1 × USB HOST [USB-B, 9pin Female] Output: 1 × HDBT OUT [RJ45, Female] Control: 1 × RS-232 [3pin-3.5mm Phoenix Connector] 1 × FSYNC [1pin-3.5mm Phoenix Connector] 1 × SERVICE [USB-C, Update Port]
Receiver	Input: 1 × HDBT IN [RJ45, Female] Output: 4 × USB Devices [USB-A, 9pin Female] Control: 1 × RS-232 [3pin-3.5mm Phoenix Connector] 1 × FSYNC [1pin-3.5mm Phoenix Connector] 1 × SERVICE [USB-C, Update Port]
Housing	Metal Enclosure
Color	Black
Dimensions	Transmitter / Receiver: 85mm [W] × 100mm [D] × 25.5mm [H]
Weight	Transmitter: 253g, Receiver: 260g
Power Supply	Input: AC 100~240V 50/60Hz Output: DC 24V/2A
Power Consumption	PoC Power Supply: 40W (Max)
Operating Temperature	0°C ~ 40°C / 32°F ~ 104°F
Storage Temperature	-20°C ~ 60°C / -4°F ~ 140°F
Relative Humidity	20~90% RH (non-condensing)

5.1. Transmitter

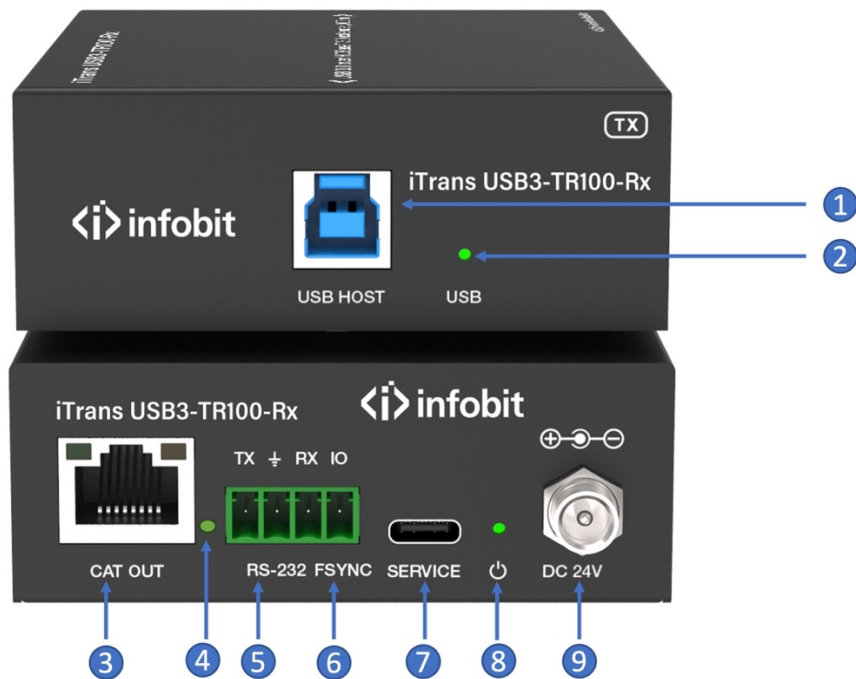

No.	Name	Function Description
1	USB HOST	Host port, supporting USB 3.0. Connects to a PC or host.
2	USB LED	USB signal indicator. <ul style="list-style-type: none"> - On: USB signal is detected. - Off: USB signal is not detected.
3	HDBT OUT	Connects to the HDBT IN port on Receiver with CAT cable.
4	LINK LED	Connection signal indicator. <ul style="list-style-type: none"> - On: Transmitter and Receiver are connected and linked. - Flashing: Transmitter and Receiver link is off due to USB low power mode. - Off: Transmitter and Receiver are not connected.
5	RS-232	3pin phoenix connector, connected to a PC or control system for RS-232 command pass-through.
6	FSYNC	FSYNC port, used for level pass-through to the Receiver, and synchronizing the external devices. The default level is 3.3V.
7	SERVICE	Firmware update port.
8	POWER LED	The LED will be on when the Transmitter is powered on.
9	DC 24V	DC 24V/2A power input port.

5.2. Receiver

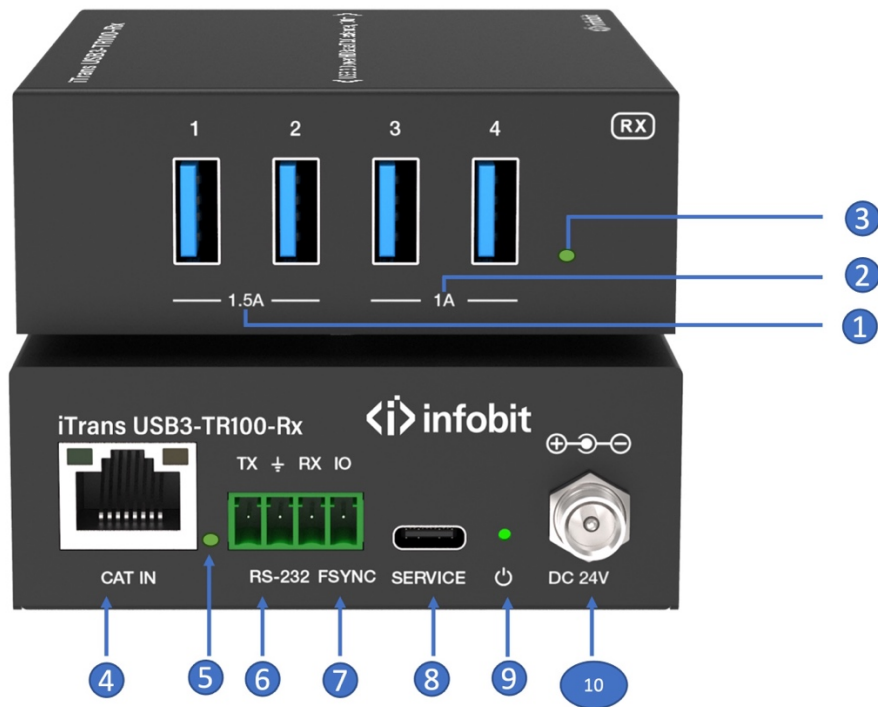

No.	Name	Function Description
1	USB 1/2	Connect to USB devices, and max output power is up to 5V/1.5A.
2	USB 3/4	Connect to USB devices, and max output power is up to 5V/1A.
3	USB LED	USB signal indicator. - On: USB signal is detected. - Off: USB signal is not detected.
4	HDBT IN	Connects to the HDBT OUT port on Transmitter with CAT cable.
5	LINK LED	Connection signal indicator. - On: Transmitter and Receiver are connected and linked. - Flashing: Transmitter and Receiver link is off due to USB low power mode. - Off: Transmitter and Receiver are not connected.
6	RS-232	3pin phoenix connector, connected to a PC or control system for RS-232 command pass-through.
7	FSYNC	FSYNC port, receiving level pass-through from the Transmitter, and synchronizing the external devices. Default level is 3.3V.
8	SERVICE	Firmware update port.
9	POWER LED	The LED will be on when the Receiver is powered on.
10	DC 24V	DC 24V/2A power input port.

6. Diagram

